



G&D ControlCenter-IP-XS

EN Configuration and Operation



Select	
Sort Alph+on	Show ALL
Search	
▶ CPU-001	
2 CPU-002	
CPU-003	
CPU-004	
1 CPU-005	
F9: Operation	F10: Pers. Profile
F11: Config	F12: Info

About this manual

This manual has been carefully compiled and examined to the state-of-the-art.

G&D neither explicitly nor implicitly takes guarantee or responsibility for the quality, efficiency and marketability of the product when used for a certain purpose that differs from the scope of service covered by this manual.

For damages which directly or indirectly result from the use of this manual as well as for incidental damages or consequential damages, G&D is liable only in cases of intent or gross negligence.

Caveat Emptor

G&D will not provide warranty for devices that:

- Are not used as intended.
- Are repaired or modified by unauthorized personnel.
- Show severe external damages that was not reported on the receipt of goods.
- Have been damaged by non G&D accessories.

G&D will not be liable for any consequential damages that could occur from using the products.

Proof of trademark

All product and company names mentioned in this manual, and other documents you have received alongside your G&D product, are trademarks or registered trademarks of the holder of rights.

© Guntermann & Drunck GmbH 2022. All rights reserved.

Version 1.00 – 17/02/2022

Firmware: 1.0.000

Guntermann & Drunck GmbH
Obere Leimbach 9
57074 Siegen

Germany

Phone +49 (0) 271 23872-0
Fax +49 (0) 271 23872-120

www.gdsys.de
sales@gdsys.de

Contents

Matrix switch »ControlCenter-IP-XS«	1
Operation	1
On-screen display	1
Configuration	2
On-screen display	2
The »Config Panel« web application	2
Getting started	3
User login at the matrix system	3
Changing your password	4
Accessing a target module via on-screen display	4
Disconnecting the target module	4
User logout at the KVM matrix system	5
Starting the functions of the »Operation« menu via hotkeys	5
The On-Screen Display (OSD)	7
Calling the on-screen display at a console	7
The general OSD structure	7
Colour-coded target module names	8
Displaying the status condition	8
Operating the OSD via keyboard or mouse	8
Keyboard operation	8
Mouse operation	9
OSD functions	10
Search function	10
Changing the sort criteria of the list entries	10
Limiting the entries using the view filter	11
Showing an additional column in the Select menu	12
Configuration	13
Changing the hotkey to call the on-screen display	13
Opening the on-screen display via double keypress	14
Automatic closing of the OSD after inactivity	15
Adjusting the on-screen display's transparency	15
Adjusting the information display	16
Changing the colour of the information display	17
Defining a standard view filter	18
Changing the display's position	18
Changing the OSD position	19
Selecting a keyboard layout for on-screen display entries	20
Operating the on-screen display by mouse	20
(De)activating the on-screen display	21
Adjusting the OSD resolution	21

Overview of the menus and functions	24
Select menu	24
Operation menu	24
Personal Profile menu	25
Configuration menu	26
Information menu	26
Accessing target modules (basic functions)	27
Accessing a target module via on-screen display	27
Returning to the previously accessed target module	27
Disconnecting the target module	28
Enhanced functions	28
Configuring default actions after a user logon	28
Messages when accessing a target module	30
»No free route to target«	30
»No route to target known« or »Unknown route to target«	30
»Target not available«	30
Accessing target modules via select keys	31
Accessing a target module using select keys	31
Changing the select key modifier and the valid keys	31
Administrating select key sets	32
Creating a select key set	33
Changing a select key set	33
Defining the select keys for the target modules	34
Assigning a select key set to a user account	35
Deleting a select key set	36
Scripting function	37
Executing scripts	37
Executing a script via on-screen display	37
Editing the default menu mode	38
Switching threshold to switch the menu mode by mouse	38
Creating, editing and deleting scripts	39
Creating scripts	39
Editing the settings of a script	39
Deleting a script	41
Defining rights to execute scripts	41
Executing a script with script keys	42
Changing the script key modifier and the valid keys	42
Administrating script key sets	43
Creating a script key set	44
Changing name and global allocation of a script key set	44
Defining script keys for scripts	45
Assigning script key sets to user accounts	46
Deleting script key sets	46

Push events	47
Triggering push events	47
Changing push event key modifiers and valid keys	48
Switching the target modules automatically or manually	49
Auto scanning all target modules (Autoscan)	49
Applying the <i>Autoscan</i> function	49
Configuring the scantime of the Autoscan function	50
Auto scanning all active target modules (Autoskip)	50
Applying the Autoskip function	51
Configuring the scantime of the <i>Autoskip</i> function	51
Scanning the target modules manually (Stepscan)	52
(De)activating the <i>Stepscan</i> function	52
Switching between the target modules	52
Configuring keys to scan the targets manually	53
Administrating the scanmode sets	53
Creating a scanmode set	53
Changing the name and global allocation of a scanmode set	54
Assigning the target modules to a scanmode set	55
Assigning a scanmode set to a user account	56
Deleting a scanmode set	56
Users and Groups	57
Efficient rights administration	57
The effective right	57
Efficient user group administration	58
Administrating user accounts	59
Creating a new user account	59
Renaming the user account	59
Changing the user account password	60
Changing the user account rights	61
Changing a user account's group membership	62
(De)activating a user account	63
Deleting a user account	63
Administrating user groups	64
Creating a new user group	64
Renaming a user group	64
Changing the user group rights	65
Administrating the user group members	66
(De)activating a user group	66
Deleting a user group	67
Rights regarding the user account	67
The »Superuser« right	67
Changing settings in the »Personal Profile« menu	68
Changing your own password	69
Authorisation to execute the »Replace device« function	69

Target groups and view filters	71
Difference between target groups and view filters	71
Intended use of target groups	71
Intended use of target groups	71
Administrating target groups	71
The »New digital Targets« target group	71
Creating a new target group	72
Renaming a target group	72
Administrating the target group members	72
Deleting a target group	73
Administrating view filters	74
Creating a new view filter	74
Assigning a target module to a view filter	74
Renaming a view filter	75
Deleting a view filter	75
Target modules	76
Adjusting the access and config rights	76
Accessing a target module	76
Accessing a target group	77
Access mode when simultaneously accessing a target computer	78
Access to USB devices	79
Rights for configuring the target modules	81
Basic configuration of the target modules	82
Renaming a target module	82
Deleting a target module from the KVM matrix system	83
Copying the target module config settings	84
Settings for special hardware	84
(De)Activating an USB keyboard mode the »Generic USB« mode	84
Defining the EDID profile to be used	87
Reducing the colour depth of the image data to be transmitted	88
Enhanced functions	89
Remembering the last target module	89
Displaying »Multiuser« information	89
Remote gateways and remote targets	91
Configuring remote gateways	92
Configuring remote targets	92
Changing the name of a remote target	92
Saving the resolution of a virtual machine	93
Reducing the colour depth of the image data to be transmitted	94
Holding a connection	94
Defining the basic connection parameters for a remote target	95
Saving login data	96
Defining the RDP connection parameters for a remote target	97
Defining the VNC connection parameters for a remote target	97
Defining the streaming connection parameters for a remote target	98
Adjusting the mouse speed	99

User modules	100
Operating modes of user modules	100
Standard operating mode	100
Open Access operating mode	100
Video operating mode	100
Selecting the user module's operating mode	101
Basic configuration of the user modules	101
Renaming a user module	101
(De)activating the user module	102
Enabling/disabling the keyboard support for user modules	102
Copying the user module config settings	103
Deleting a user module from the matrix system	104
Settings for special hardware	104
Adjusting the scancode set of a PS/2 keyboard	104
Activating the support for special PS/2 keyboards	105
Support of any USB device	105
Reinitialising USB input devices	106
Enhanced functions	107
Setting the auto user logout	107
Auto-disconnecting the access to a target module	108
Viewing technical information about the user modules	109
Remembering the username in the login box	110
Setting the hold time for the screensaver	110
Enabling or disabling DDC/CI support	111
Administrating EDID profiles	113
Importing the EDID profile of a monitor	113
Renaming the EDID profile of a monitor	114
Deleting the EDID profile of a monitor	114
Defining the EDID profile to be applied for a target module	114
Shared editing	115
System settings and functions	116
Renaming the matrix switch	116
Select language	116
Freeze mode	118
Network settings	120
Configuring the network port	120
Configuring the global network settings	121
Resetting the netfilter rules	123
Defining the ports of the KVM-over-IP connection	123
Determination of the type of video transmission	124
Enhanced functions	127
Automatically restore sessions from user modules	127
Reading out the status of the network interface	127
Checking the availability of a host in the network (Ping)	128
Resetting the default settings	129

Retrieving information about the system	129
Hotkey settings	129
Displaying firmware information of the matrix system	129
Displaying hardware information of the matrix switch	130
Rights administration	130
Login rights for the »Config Panel« web application	130
Optional premium functions	131
Activating a premium function	131
Displaying the premium functions	132
Push-Get function (optional)	133
Moving the screen content (Push)	133
Moving the monitor content to another user module	133
Stopping the moving of the screen content	133
Getting the screen content (Get)	134
Getting the screen content from another user module	134
Moving screen contents via push get keys	134
Setting push get keys	135
Changing push-get key modifiers and valid keys	135
Administrating push get key sets	136
Creating push get key sets	136
Changing name, comment or global allocation	137
Defining push get keys for user modules	137
Assigning push get key sets to user accounts	138
Deleting push get key sets	139
Changing a user account's <i>Push-Get</i> right	139
IP-Control-API (optional)	141
Supported functions via API and text-based control	141
Controlling the matrix switch via XML	142
Structure of a valid XML document	142
Selecting devices	142
Use of device IDs	143
Responses and messages of G&D devices	143
Responses of G&D devices	143
Messages of G&D devices	144
Combining multiple commands in an XML document	145
Push notifications for events occurred	145
Subscribing to push notifications	147
Unsubscribing from push notifications	147
Configuration and encryption	148
Configuring accesses of devices for XML control	148
Instructions for encrypting passwords	150

Commands	152
User logon and user logoff	152
Establishing a connection to a target module or disconnecting a connection	153
Transferring the configuration settings of a module	154
Defining the master workplace of a tradeswitch workplace	154
Showing messages	155
Opening or closing the OSD	156
Redirecting keyboard and mouse data	156
Executing scriptlets	157
Listing information about devices and connections	157
Requesting monitoring values	164
Tradeswitch function (optional)	166
Switching keyboard and mouse signals	166
Basic configuration	167
Creating Tradeswitch workplaces	167
Renaming a Tradeswitch workplace	167
Deleting a Tradeswitch workplace	167
Changing the Tradeswitch key and the valid keys	168
Customizing the appearance of the tradeswitch frame	169
Detailed configuration of a Tradeswitch workplace	170
Assigning devices to a Tradeswitch workplace	170
Defining the master workplace of the Tradeswitch workplace	171
Enhanced functions	172
(De)activating the Tradeswitching information display	172
CDS mouse positioning	172
Adjusting the mouse speed	174

Matrix switch »ControlCenter-IP-XS«

The matrix switch *ControlCenter-IP-XS* is the central part of a IP matrix system.

You can use the IP matrix system to access an IP computer module (CPU) with an IP user module (CON). By accessing the computer connected to the computer module, the video image is displayed at the console monitor. You can now operate the accessed computer with console keyboard and console mouse.

You can use any device of the **Vision IP** and **VisionXS-IP** series as end devices of the IP matrix.

NOTE: The IP matrix switch supports a maximum of 20 end devices.

Operation

The following paragraphs provide you with various possibilities to operate the KVM matrix system.

On-screen display

Usually, the KVM matrix system is operated through the system's on-screen display. This display is provided at all user modules by default.

The on-screen display enables you to define additional select keys. The select keys provide the possibility to switch between the different target modules by pressing a key combination on the keyboard of the user module.

NOTE: This manual describes how to operate the matrix switch using the on-screen display of a user module.

Configuration

The KVM matrix system can be configured in different ways.

On-screen display

If the logged-in user holds the required rights, they can use the on-screen display to access or edit the matrix system's configuration settings.

NOTE: This manual describes how to configure the matrix switches of the *ControlCenter-IP-XS* series via the on-screen display of a user module.

The »Config Panel« web application

The web application offers a graphical user interface to configure the KVM matrix switches of the *ControlCenter-IP-XS* series. This application can be operated with any web browser.

The web application provides an alternative to configuring the matrix switch through the device's on-screen display at the user modules and can be applied independently from the user modules in the network.

Thanks to its enhanced possibilities, the graphical user interface provides the following easy to operate features:

- clearly-arranged user interface
- easy operation through drag & drop function
- comprehensive target administration
- enhanced network functions (netfilter, syslog, ...)
- backup and restore function

NOTE: The »*Config Panel*« manual provides a detailed description of these functions.

Getting started

This chapter describes the basic operation of the KVM matrix system.

NOTE: The following chapters of this manual provide a detailed description of the functions and the configuration settings.

User login at the matrix system

After the user module has been switched on, the KVM matrix system asks you to log in.

How to log in at the KVM matrix system:

1. Enter the following data to the login box:

Username:	Enter your username.
Password:	Enter your user account password.

IMPORTANT: Change the administrator account's default password.

The *default* access data is:

- **Username:** Admin
- **Password:** see *login* information on the label on the bottom of the device

2. Press **Enter** to log in and start the on-screen display.

NOTE: If the *Default Target* function (see page 28) has been activated for the user account, you can directly access the target module that has been selected in the *Personal Profile* after your login.

In this case, restart the on-screen display (see page 7) to call up the *Select* menu.

Changing your password

How to change the password of your user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Change password** entry and press **Enter**.
4. Enter the new password into the *Change own password* menu:

New:	Enter your new password.
Repeat:	Repeat your new password.

5. Press **F2** to save your settings.

Accessing a target module via on-screen display

How to access a target module via on-screen display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Use the **arrow keys** to select the target module to be accessed.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

3. Press **Enter**.

NOTE: It is also possible to access a target module via select keys (see page 31 ff.)

Disconnecting the target module

The *Disconnect* function disconnects the active connection to the target module. After this function has been carried out, the *Select* menu is displayed.

NOTE: After the *Disconnect* function has been carried out, you are still logged in at the matrix system.

Use the *User logout* function (see below) to log out of the system.

How to disconnect a target module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F9** to open the *Operation* menu.

3. Press **D** or select the **D - Disconnect** entry and press **Enter**.

ADVICE: After the on-screen display has been called up, you can activate the *Disconnect* function by pressing **Ctrl+D**.

User logout at the KVM matrix system

Use the *User logout* function to log out of the KVM matrix system. If the logout was successful, the *Login* window opens.

IMPORTANT: Always use the *User logout* function of the matrix system to protect the user module and the KVM matrix system against unauthorised access.

How to log out of the KVM matrix system:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F9** to open the *Operation* menu.
3. Press **E** or select the **E - User logout** entry and press **Enter**.

ADVICE: After the on-screen display has been called up, you can activate the *User logout* function by pressing **Ctrl+E**.

Starting the functions of the »Operation« menu via hotkeys

The *Select* menu is usually displayed after the on-screen display has been called up. To operate the system, press **F9** to call up the *Operation* menu.

Through the use of hotkeys the functions of the *Operation* menu can also be carried out within the *Select* menu.

How to access a function in the Operation menu by using a hotkey:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press one of the hotkeys listed in the table below to call up the function:

Ctrl+A:	Automatic switching of all target modules (<i>Autoscan</i>)
Ctrl+B:	Automatic switching of all activated target modules (<i>Autoskip</i>)
Ctrl+C:	Manual switching of the target modules (<i>Stepscan</i>)

Ctrl + D:	Disconnects the target module (<i>Disconnect</i>)
Ctrl + E:	<i>User logout</i>
Ctrl + G:	Accesses the previously accessed target module (<i>Return to last target</i>)
Ctrl + H:	<p>Shows an additional column in the list field of the <i>Select</i> menu (<i>Target info</i>)</p> <p>Pressing the key combination enables you to switch between the following options:</p> <ul style="list-style-type: none">▪ off: hides additional column▪ id: displays the physical ID of the target modules▪ select keys: displays the select keys of the target modules▪ comment: displays the comments of the target modules
Ctrl + K:	<p>Show comment of selected target module.</p> <p>ADVICE: Press F5 to switch to the comment editor.</p>
Ctrl + X	<p>Select what information you want to show on the <i>Select</i> menu:</p> <ul style="list-style-type: none">▪ select: The select menu shows the target modules connected to the matrix system.▪ script: The select menu shows the scripts stored in the matrix system.

The On-Screen Display (OSD)

The on-screen display allows you to operate and configure the KVM matrix system. By default, it is provided at all user modules.

Calling the on-screen display at a console

The on-screen display can be activated with a configured key combination.

How to start the on-screen display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.

The general OSD structure

Menu title			
Sort	Alph+on	Show	All ①
Search		
Target			
Console			... ②
Console type		Standard	
ESC	F8:Toggle	F2:Save	③

The on-screen display menu is divided into three main sections:

Header ①	<p>The header shows the title of the current menu.</p> <p>Some menus additionally provide a <i>Sort</i> and a <i>Search</i> function as well as a <i>View filter</i> (see page 10 ff.). Press the Tab key to move the cursor from the list field ② to the header ①.</p>
List field ②	<p>The list field shows all menu entries.</p> <p>The menu entries are divided into two categories:</p> <ul style="list-style-type: none"> ▪ Menu items <i>with</i> submenu: These entries are displayed in the right-hand column with three dots (...). Select the entry with the arrow keys, and press Enter to open the submenu. ▪ Menu items <i>without</i> submenu: The current setting is displayed behind the menu entry and can be changed directly.
Footer ③	<p>The footer shows the most important keys for operating the menu and, if applicable, further information regarding the menu.</p>

Colour-coded target module names

The list field lists all target modules. If a computer is connected to the target module, the target module name is displayed in *green*.

If the target module is disconnected from the KVM matrix system or the computer connected to the target module is switched off, the name is displayed in *red*.

Displaying the status condition

The status condition of the target modules is displayed in the left column of the *Select* menu:

- An *arrow* (▶) marks the currently accessed target module.
- If one or more users are currently accessing the target module, the *number* of accessing users is displayed in the column.

Operating the OSD via keyboard or mouse

Keyboard operation

The on-screen display is mainly operated by keyboard. The table below shows a list of frequently used keys:

Arrow keys:	Press the arrow keys Up and Down (in some menus also Left and Right) to switch between the different menu entries.
Enter key:	This key is often used to confirm entries (e. g. in the login box) or to call a submenu.
Esc:	This key closes the currently displayed menu and shows the superior menu. A message informs you if you changed your entries but forgot to save them.
Tab key:	Use this key to move the cursor from one menu entry to the next (or vice versa). In menu masks, which contain the sort-and-search function or the view filter, the cursor can be moved to the header by pressing this key.

F2:	Press this key to save your entries. The currently displayed menu closes after the data was saved. Afterwards, the toplevel menu is shown.
F8:	Press this key to switch between the different options of a menu entry.
F9:	Press this key on the top menu level to call the <i>Operation</i> menu.
F10:	Press this key on the top menu level to call the <i>Personal Profile</i> menu.
F11:	Press this key on the top menu level to call the <i>Configuration</i> menu.
F12:	Press this key on the top menu level to call the <i>Information</i> menu.

Mouse operation

As an alternative to operating the on-screen display by keyboard, you can use the mouse to execute the following functions:

Mouse movement »Up«:	This mouse movement moves the cursor <i>upwards</i> between the different menu entries in the list field.
Mouse movement »Down«:	This mouse movement moves the cursor <i>downwards</i> between the different menu entries in the list field.
Left mouse key:	This key is often used to confirm entries (e. g. in the login box) or call a submenu.
Right mouse key:	The currently displayed menu is closed after your settings are saved. Afterwards, the toplevel menu is shown. A message informs you if you changed your entries but forgot to save them.

NOTE: The on-screen display (OSD) can only be called with the configured key combination (**Ctrl + Num**).

If a Microsoft »IntelliMouse Explorer« or another compatible mouse with five keys is connected to the user console, you can call the on-screen display through the mouse keys four and five, which are located at the side of the mouse (see page 20).

OSD functions

Search function

Some menus (e.g. the *Select* menu or the menu to choose a *select key set*) provide a search function to enable the fast selection of the desired entry in the list field.

How to search a particular entry with a known name:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. If necessary, press the **Tab** key to select the list field.
3. Enter the name of the entry you want to search. You can also enter the first letters of the name to enable a clear allocation. The entered characters are displayed in the **Search** field.

NOTE: After *every* entered character, the first entry this character does apply to is marked in the list field.

Placeholders are not supported.

Changing the sort criteria of the list entries

In the default settings, the list entries are sorted alphabetically in ascending order (default: **Alph+**).

Targets are listed according to their operating status. Active devices are displayed at first, followed by all inactive devices. Both groups are sorted in ascending order (default: **Alph+on**).

You can also activate another sort criterion or reverse the sort order.

How to change the sort criteria and/or sort order:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press the **Tab** key to select the **Sort** field in the header.
3. Press **F8** to select the desired sort criterion:

Alph+:	The names of the list entries are sorted alphabetically in <i>ascending</i> order.
Alph+on:	Active devices are displayed at first, followed by all inactive devices. Both groups are sorted in ascending order. <i>This option is only available in the device list.</i>
Alph-:	The names of the list entries are sorted alphabetically in <i>descending</i> order.

Alph-on:	Active devices are displayed at first, followed by all inactive devices. Both groups are sorted in descending order . <i>This option is only available in the device list.</i>
ID:	The names of the list entries are sorted in <i>ascending</i> order according to the physical device ID. <i>This option is only available in lists that include target modules.</i>
Comment+:	The comments are sorted alphabetically in <i>ascending</i> order. <i>This option is only available in lists that include target modules.</i>
Comment-:	The comments are sorted alphabetically in <i>descending</i> order. <i>This option is only available in lists that include target modules.</i>

Limiting the entries using the view filter

The **Show** field enables you to limit the list of entries in the list field of some menus:

The *Select* menu lists all target modules by default. The view filter can limit the target module list of a particular view group (marked as *folder* in the web application).

ADVICE: Further information regarding the administration of the target modules of a view filter are provided in the chapter *Administering view filters* on page 74.

NOTE: If the *Config Panel* web application is used to create and administrate groups (folders) for the view filter, any number of folders can be added to the superior folder.

The on-screen display only shows the superior view filter. The included target modules of inferior locations are automatically listed.

How to change the view filter of the entries to be displayed:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press the **Tab** key to move the cursor to the **Show** field in the menu header.
3. Press **F8** to select the desired view filter.

ADVICE: You can select the *ALL* view filter directly by pressing **Ctrl+A**.

Showing an additional column in the Select menu

The *Target info* function enables you to display an additional info column in the *Select* menu list field. The column can display the physical ID or the select keys of the target module.

How to display an additional info column in the Select menu:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F9** to call the *Operation* menu.
3. Press **H** (repeatedly) or select the **H - Target info** entry and press **F8** (repeatedly) to choose one of the following options:

off:	hide additional column
id:	display the physical ID of the target modules
select keys:	show the select keys of the target modules
comment:	display the comments of the target modules

ADVICE: After the on-screen display has been called, activate the *Target info* function in the *Select* menu by pressing **Ctrl+H**.

Configuration

Many of the on-screen display's basic functions and features can be adjusted to the user's demands.

You can change various settings e.g. define the hotkey and adjust the on-screen display's position and font size.

All adjustable settings are described on the following pages.

Changing the hotkey to call the on-screen display

The hotkey to call the on-screen display (OSD) is used at all user modules within the matrix system. This hotkey enables you to open the on-screen display in order to operate and configure the system.

NOTE: In the default, the hotkey **Ctrl+Num** is preset.

The hotkey consists of at least one hotkey modifier key and an additional hotkey, which you can select.

Both the **Ctrl** hotkey modifier key and the **Num** hotkey can be changed.

How to change the hotkey to call the on-screen display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Hotkey** entry and press **Enter**.
5. Use the **arrow keys** for selecting *at least* one of the listed hotkey modifiers in the **Modifier** entry. Afterwards, press **F8**.

Ctrl:	<i>Ctrl</i> key
Alt:	<i>Alt</i> key
Alt Gr:	<i>Alt Gr</i> key
Win:	<i>Windows</i> key
Shift	<i>Shift</i> key

- Press **F8** to select a hotkey in the **Key** entry. The on-screen display can be called up by pressing the hotkey and the selected hotkey modifier(s) at the same time.

Num:	<i>Num</i> key
Pause:	<i>Pause</i> key
Insert:	<i>Insert</i> key
Delete:	<i>Delete</i> key
Home:	<i>Home</i> key
End:	<i>End</i> key
PgUp	<i>Page Up</i> key
PgDn	<i>Page Down</i> key
Space	<i>Space</i> key

- Press **F2** to save your settings.

Opening the on-screen display via double keypress

Instead of opening the OSD with the key combination **Hotkey+Num**, you can define a key to press twice to open the OSD.

How to define the key to open the OSD via double keypress:

- Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
- Press **F11** to call the *Configuration* menu.
- Select the **System** entry and press **Enter**.
- Select the **OSD via 2x keypress** entry and press **F8** to select the desired option:

off:	Open OSD via double keypress disabled (default)
Ctrl:	Open OSD via double keypress of <i>Ctrl</i> key
Alt:	Open OSD via double keypress of <i>Alt</i> key
Alt Gr:	Open OSD via double keypress of <i>Alt Gr</i> key
Win:	Open OSD via double keypress of <i>Win</i> key
Shift:	Open OSD via double keypress of <i>Shift</i> key
Print:	Open OSD via double keypress of <i>Print</i> key

Cursor-Left:	Open OSD via double keypress of <i>Cursor-Left</i> key
Cursor-Right:	Open OSD via double keypress of <i>Cursor-Right</i> key
Cursor-Up:	Open OSD via double keypress of <i>Cursor-Up</i> key
Cursor-Down:	Open OSD via double keypress of <i>Cursor-Down</i> key

5. Press **F2** to save your settings.

Automatic closing of the OSD after inactivity

If desired, you can set the OSD to close automatically after a period of inactivity.

The period of inactivity can be defined by entering a value between **5** and **99** seconds.

NOTE: To disable the function, enter the value 0 .
--

How to change the period of inactivity after which the OSD closes:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Under **Close OSD when inactive for [s]** you can define a time span between **5** and **99** seconds.
4. Press **F2** to save your settings.

Adjusting the on-screen display’s transparency

In the on-screen display’s default settings, the screen content under the OSD is semi-visible. The screen content shines through the part that is covered by the OSD.

You can either adjust or turn off the OSD’s transparency in the personal profile of a user.

How to adjust the on-screen display’s transparency:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.

3. Select the **OSD transparency** entry and press **F8** (repeatedly) to select one of the following options:

high:	Screen content almost completely visible
average:	Screen content semi-visible (default)
low:	Screen content slightly visible
off:	Screen content is covered

4. Press **F2** to save the changes.

Adjusting the information display

NOTE: You can set the information display separately for targets with view rights and all other targets.

When switching to a target module, a temporary information display (5 seconds) opens. The display informs you about the console name, the name of the currently accessed target module and provides further information.

The information display can also be permanently displayed or deactivated. The selected setting is assigned to your user account and stored in your *Personal Profile*.

ADVICE: When active, the temporary information can be recalled by pressing **Ctrl+Caps Lock**.

How to change the general settings of the information display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Display** entry and press **F8** (repeatedly) to select one of the following options:

temp:	show information display (five seconds)
perm:	permanent information display
off:	deactivate information display

4. Press **F2** to save the changes.

How to change the settings of the information display for targets with view right:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **View only display** entry and press **F8** (repeatedly) to select one of the following options:

Use regular OSD info:	Using the general setting of the information display (see above)
5 seconds:	Temporary information display
Perm:	Permanent information display
Off:	Deactivate information display

4. Press **F2** to save the changes.

Changing the colour of the information display

By default, information displays (like when accessing a target module) are shown in light green. In their personal profiles, users can change the colour of the information display.

How to change the colour of the information display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Display color** entry and press **F8** (repeatedly) to select one of the following options:

Light green:	Show information display in light green (default)
Black, dark red, dark yellow, dark blue, purple, dark turquoise, silver, yellow, blue, fuchsia, light turquoise or white	Show information display in the selected colour

4. Press **F2** to save the changes.

Defining a standard view filter

After the user login, the *Select* menu (see page 24) is displayed. The default setting of the *Select* menu displays all target modules. By applying the view filter (see page 18), the displayed target modules can be filtered.

Use the *Default view filter* setting to activate a certain view filter directly after accessing the *Select* menu.

NOTE: The preset view filter is applied directly after the on-screen display has been called and after the user has logged in to the matrix system.

The use of a view filter (see page 11) allows you to change the default and therefore activate another filter.

How to select a standard view filter for the Select menu:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Default location** entry and press **F8** (repeatedly) to select the desired setting.

All: All target modules are displayed.

ADVICE: Press **Ctrl+A** to select this view filter directly.

Last: The view filter that was used by the last user is applied when the *Select* menu is called.

Selection of a folder: The view filter of the selected group is applied if the *Select* menu is called.

4. Press **F2** to save your changes.

IMPORTANT: If the *LAST* option has been selected and two users are using one user account at the same time, the view filter of the previously active person is stored.

Changing the display's position

When accessing a target module, the information display of the matrix system e.g. provides you with the name of the accessed target module and the name of the user module.

By default, the information display is located in the left upper corner at the console monitor. You can adjust the display's position according to your wishes.

Your individual setting is assigned to your user account and stored in your *Personal Profile*.

How to change the display position:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Set display position** entry and press **Enter**.
4. The menu on the right-hand side opens at the display position.
5. Use the **arrow keys** or the mouse to move the menu to the desired position.

+ Display position F2: Save

NOTE: Press **Ctrl+D** to reset the display's position.

6. Press **F2** to save your settings or press **Esc** to cancel.

Changing the OSD position

By default, the information is located in the centre of the console monitor. You can adjust the display's position according to your wishes.

The selected setting is assigned to your user account and stored in your *Personal Profile*.

How to change the OSD position:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Set menu position** entry and press **Enter**.
4. Use the **arrow keys** or the mouse to move the menu to the desired position.

NOTE: Press **Ctrl+D** to reset the on-screen display's position.

5. Press **F2** to save your settings or press **Esc** to cancel the process.

Selecting a keyboard layout for on-screen display entries

If other characters are displayed on the screen when entering characters on the keyboard of the console monitor, the keyboard layout set for the keyboard is not appropriate.

In this case, determine which keyboard layout the connected keyboard meets to and then configure it in the settings of the console module.

How to select the keyboard layout for the user module keyboard:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module whose settings you want to change and press **F5**.
5. Select the **OSD key. layout** entry and press **F8** to select one of the following options:

German:	Germany
English US:	USA
English UK:	Great Britain
French:	France
Spanish:	Spain
Lat. American:	Latin America
Portuguese:	Portugal
Swedish;	Sweden

6. Press **F2** to save your settings.

Operating the on-screen display by mouse

In the default settings of the matrix system, the on-screen display (OSD) can only be called with the configured key combination.

If a Microsoft »IntelliMouse Explorer« or another compatible mouse with five keys is connected to the user console, you can call the on-screen display through the mouse keys four and five at the side of the mouse

How to (de)activate the mouse support to operate the on-screen display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.

3. Select the **Console** entry and press **Enter**.
4. Select the user module whose settings you want to change and press **F5**.
5. Select the **OSD by mouse** entry and press **F8** to select one of the following options:

yes:	calls the OSD via mouse keys 4 and 5 of a compatible mouse
no:	deactivates the possibility to call the OSD by mouse

6. Press **F2** to save your settings.

(De)activating the on-screen display

This function defines if the users at the user module are enabled to activate the on-screen display or if they are only allowed to switch via select keys.

How to (de)activate the on-screen display at the user module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module you want to (de)activate and press **F5**.
5. Select the **OSD blocked** entry and press **F8** to select one of the following options:

yes:	on-screen display blocked
no:	on-screen display available
full:	on-screen display call-up and display of info overlays disabled

6. Press **F2** to save your settings.

Adjusting the OSD resolution

In the defaults of the matrix switch the OSD is displayed on the console monitor in a resolution of 1024 × 768 pixels if the monitor does support this resolution. If the monitor does not support this resolution, a resolution of 640 × 480 pixels is used.

You can also set the OSD resolution for the entire system (see table below). Adjusting the resolution for the entire system includes all user modules. However, you can also individually set the OSD resolution for each user module.

How to adjust the OSD resolution of the entire system:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **OSD resolution** entry and press **F8** to select one of the following options:

auto:	If supported by the monitor, the OSD is displayed in a resolution of 1024 × 768 pixels. If the monitor does not support this resolution, a resolution of 640 × 480 pixels is used. (<i>default</i>).
640×480/60:	OSD is displayed in a resolution of 640 × 480 pixels
720×400/70:	OSD is displayed in a resolution of 720 × 400 pixels
1024×768/60:	OSD is displayed in a resolution of 1024 × 768 pixels

5. Press **F2** to save your settings.

How to adjust the OSD resolution of a particular user module:**How to configure the freeze mode for individual user modules:**

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **OSD resolution** entry and press **F8** to select one of the following options:

system:	Use systemwide (see above) setting (<i>default</i>).
auto:	If supported by the monitor, the OSD is displayed in a resolution of 1024 × 768 pixels. If the monitor does not support this resolution, a resolution of 640 × 480 pixels is used. (<i>default</i>).
640×480/60:	OSD is displayed in a resolution of 640 × 480 pixels
720×400/70:	OSD is displayed in a resolution of 720 × 400 pixels
1024×768/60:	OSD is displayed in a resolution of 1024 × 768 pixels

6. Press **F2** to save your settings.

Overview of the menus and functions

The following pages show the main menus of the on-screen display.

Select menu

The *Select* menu is usually displayed after the on-screen display has been called.

The target modules of the matrix system are displayed in this menu:

Select	
Sort Alph+on	Show ALL
Search	
▶ CPU-001	
2 CPU-002	
1 CPU-003	
F9: Operation	F10: Pers. Profile
F11: Config	F12: Info

The chapter *Accessing target modules (basic functions)* on page 27 ff. describes how to access the user module via target module.

Both the *Search* and *Sort* function as well as the view filter can be used to limit the displayed target modules. Further information regarding these functions are provided on page 10 ff.

Operation menu

After you called the on-screen display, press **F9** to open the *Operation* menu. This menu lists all functions of the KVM matrix system that the user can carry out directly:

Function	Description
A – Autoscan	page 49
B – Autoskip	page 50
C – Stepscan	page 52
D – Disconnect	page 4
E – User logout	page 5
G – Return to last target	page 27
H – Target info	page 12
X – Selection dialog	page 38

Personal Profile menu

After you called the on-screen display, press **F10** to open the *Personal Profile* menu. The menu settings only apply for the user whose name is displayed in the right corner.

This menu lists the settings of the matrix system, which can be individually defined for every user:

Function	Description
Display	page 16
Scantime	page 50
Stepkeys	page 53
Multuser display	page 89
Default view filter	page 18
Default action	page 28
Scanmode set	page 53
Selectkey set	page 33
Script key set	page 42
Push-Get key set	page 136
Set display position	page 18
Set menu position	page 19
Change password	page 60

Configuration menu

After you called the on-screen display, press **F11** to open the *Configuration* menu. This menu enables you to configure the settings of the devices connected to KVM the matrix system as well as all user settings.

Function	Description
User	page 59
User group	page 64
Target	page 76
Target group	page 71
View filter	page 74
EDID	page 113
Scripting function	page 37
Console	page 100
System	page 116
Network	page 120
Tradeswitch function	page 166

Information menu

After you called the on-screen display, press **F12** to open the *Information* menu . This menu provides information on the different devices and versions of the KVM matrix system.

Function	Description
Firmware information	page 129
Feature information	page 132
Hotkey information	page 129
Hardware information	page 130
Console status	page 109

Accessing target modules (basic functions)

Switching analog video, keyboard, mouse, and audio signals to a user module allows you to operate the computer connected to the target module.

This chapter describes how to access the target modules by using the on-screen display. Information on how to access the target modules via select keys are provided on page 31 ff.

Accessing a target module via on-screen display

The on-screen display of the matrix system allows you to access a target module via a user module.

How to access a target module via on-screen display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Use the **arrow** keys to select the target module you want to access.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

3. Press **Enter**.

NOTE: A target module can also be accessed using *select keys*. Further information regarding this topic are provided on page 31.

Returning to the previously accessed target module

The *Return to last target* function allows you to switch from the currently accessed target module to the previously accessed target module.

NOTE: This function does not apply if you have only worked on the currently accessing target module since your login.

How to return to the last accessed target module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F9** to call the *Operation* menu.

3. Press **G** or select the **G - Return to last target** entry and press **Enter**.

ADVICE: After the on-screen display has been called, you are enabled to activate the *Return to last target* function in the *Select* menu by pressing **Ctrl+G**.

Disconnecting the target module

The *Disconnect* function disconnects the current connection to the target module. After the function has been carried out, the *Select* menu is displayed.

NOTE: After the *Disconnect* function has been carried out, you are still logged in at the matrix system.

Use the *User logout* function described on page 5 to log out of the system.

How to disconnect the connection to a target module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F9** to call the *Operation* menu.
3. Press **D** or select the **D - Disconnect** entry and press **Enter**.

ADVICE: After the on-screen display has been called, you are enabled to activate the *Disconnect* function by pressing **Ctrl+D**.

Enhanced functions

Configuring default actions after a user logon

After the user has logged on to a user module, the OSD usually opens on the screen of said user module.

The configuration setting **Default execution** allows you to define a target module that is automatically accessed after the user logs on, or a script that runs automatically.

How to select a default target that is automatically accessed after a user logon:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Default execution** entry and press **F8** (repeatedly) to select **target**.

4. Select the **Default target** entry and press **Enter**.

The *Default Target* menu opens. If already defined, the footer displays the currently selected target module (*Current*).

5. Select the target module to be accessed directly after the login.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

6. Press **F8** to activate the selection. The active target module is marked with an arrow (▶).
7. Press **F2** to save your changes.

How to select a default script or a script group that is automatically executed after a user login:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Default execution** entry and press **F8** (repeatedly) to select **script**.
4. Select the **Default script** entry and press **Enter**.

The *Default Script* menu opens. If already defined, the footer displays the currently selected script (*Current*).

5. Select the script to be executed directly after the login.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

6. Press **F8** to activate the selection. The active script is marked with an arrow (▶).
7. Press **F2** to save your changes.

How to disable the configured default action:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Default execution** entry and press **F8** (repeatedly) to select **off**.
4. Press **F2** to save your changes.

Messages when accessing a target module

»No free route to target«

For every time a user module simultaneously accesses a target module connected to the slave matrix switch, a data link is established from the master to the slave matrix switch.

IMPORTANT: The number of possible data links to the slave matrix switch depends on how many *CPU* ports of the master matrix switch are connected to the *Console* ports of the slave matrix switch.

In case all available data links are occupied, the message »No free route to target« is displayed when you try to access the target module. As soon as a data link is available, the desired connection can be established.

»No route to target known« or »Unknown route to target«

This message is shown when you try to access a target module connected to a slave matrix switch to which no connection can be established.

Check if the slave matrix switch is switched on and properly connected to the master matrix switch.

»Target not available«

This message is shown when the target module to which the target computer was connected has been removed from the system.

Ask the administrator of the matrix system if the desired target computer has been connected to another target module or if it has been removed from the system.

Accessing target modules via select keys

After the select key modifier(s) and a select key set have been adjusted and a select key set has been activated in the user account, the target module can be accessed with key combinations.

Accessing a target module using select keys

Calling the on-screen display is not required when accessing the target module using select keys. The target module can be accessed faster via select keys.

How to access a target module via select keys:

1. Press the select key modifier(s) that have been adjusted in the matrix system and the select keys assigned to the target module.

EXAMPLE:

- Select key modifiers: **Alt Gr + Shift**
- Select keys for target module: **S**

Press **Alt Gr + Shift** and the select key **S**. As soon the keys are released, the switching to the target module takes place.

Further information:

- *Changing the select key modifier and the valid keys* on page 31
- *Administrating select key sets* on page 32
- *Assigning a select key set to a user account* on page 35

Changing the select key modifier and the valid keys

The select keys enable fast access to a particular target computer by pressing a key combination. For this, select key sets can be created in the matrix system.

Both the select key modifier and a select key set define the key combination to be pressed to access a particular target computer.

You can also define valid keys for the select keys.

How to change the select key modifier or the valid keys:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select **System** entry and press **Enter**.
4. Select the **Select key** entry and press **Enter**.
5. Use the **arrow keys** to select *at least* one of the select key modifiers listed in the **Modifier** entry. Afterwards, press **F8**.

Ctrl:	<i>Ctrl</i> key
Alt:	<i>Alt</i> key
Alt Gr:	<i>Alt Gr</i> key
Win:	<i>Windows</i> key
Shift	<i>Shift</i> key

6. Select the **Valid keys** entry and press **F8** to select one of the following options:

Num:	<i>only numerical keys</i> are interpreted as select keys when pressed in combination with the select key modifier
Alph:	<i>only alphabetic keys</i> are interpreted as select keys when pressed in combination with the select key modifier
AlphNum:	<i>alphabetical and numerical keys</i> are interpreted as select keys when pressed in combination with the select key modifier

IMPORTANT: Both the selected valid keys and the select key modifier are *no longer* provided as key combinations to the operating system and the applications on the target computer.

7. Press **F2** to save your settings.

Administrating select key sets

The KVM matrix system enables you to create 20 global select key sets or ten individual select key sets for each user.

Within the select key sets, you can define the select key sets for the target modules you wish to access.

NOTE: The global select key sets are displayed in the *Personal Profile* menu of all users of the matrix system.

Creating a select key set

How to create a select key set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Select key set** entry and press **Enter**.
4. Press **F3** and enter the following data in the *Add select key set* menu:

Name:	Enter the new select key set name and press Enter .
Global:	Select yes by pressing F8 if you want the select key set in the personal profile to be available for all users of the system. default: no
NOTE: This option can only be activated by users with the <i>Superuser</i> right (see page 67).	
Return to last target:	Add, change or delete the special select key for quick access to the last activated target module.

5. Press **F2** to save your inputs and to create the select key sets.

Changing a select key set

How to change the name and/or *Global* setting of a select key set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Select key set** entry and press **Enter**.
4. Select the select key set whose setting you want to change.

5. Press **F5** to change the following data in the *Edit select key set* menu:

Name:	Enter the new name of the select key set and press Enter .
Global:	Press F8 for selecting yes if you want to make the select key set in the personal profile available to all users of the system. default: no
Return to last target:	Add, change or delete the special select key for quick access to the last activated target module.

6. Press **F2** to save your settings.

Defining the select keys for the target modules

NOTE: Global select key sets can only be edited by users with activated *Superuser* right (see page 67).

Without this right, only the select keys, which are assigned to the target modules, can be viewed.

How to define the select keys for target modules:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu
3. Select the **Select key set** entry and press **Enter**.
4. Choose a select key set and press **F5**.
5. Select the **Members** entry and press **Enter**.

The *Assign select key set* dialogue opens. The left column displays the name of the target module and the right column shows the assigned select key(s).

6. Select the target module you want to assign a select key to or whose select key you want to change.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

7. Press **F5** and enter the desired select key.

NOTE: The chapter *Changing the select key modifiers and the valid keys* provides information on how to use valid keys as select key set.

8. If you want to create or change the select keys for other target modules, repeat steps 6 and 7.
9. Press **F2** to save your settings.

Assigning a select key set to a user account

By assigning a select key set to a user account, the select keys defined in the set are interpreted and the particular target module is accessed.

How to assign a select key set to a user account or cancel the existing assignment:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Select key set** entry and press **Enter**.
4. Select the desired select key set.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Press **F8** to (de)activate the assignment.

NOTE: An assigned select key set is marked with an arrow (▶).

6. Press **F2** to save your settings.

Deleting a select key set

NOTE: Only users with the *Superuser* right (see page 67) are allowed to delete a global select key set.

How to delete a select key set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Select key set** entry and press **Enter**.
4. Select the select key set you want to delete and press **F4**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Scripting function

IMPORTANT: Using the scripting function requires the purchase and activation of the premium function **IP-Control-API**.

The scripting function lets users store the switching condition of one or multiple consoles or of the entire system.

The switching conditions are stored in a script. The scripts stored in the matrix system can be accessed and executed via OSD provided that the console is assigned with the respective rights.

Users can create their own scripts and execute them. Global scripts can be executed by users without the **Superuser** right only if these users are assigned with **Script execute rights** for the global script.

NOTE: You can create up to 1024 scripts within a matrix system.

Executing scripts

The scripts stored in the matrix system can be executed via the on-screen display of the KVM matrix system.

In the defaults, after accessing the OSD at a user module, you can select a computer via the *Select* menu.

ADVICE: Press **X** in the *Operation* menu or use the hotkey **Ctrl + X** on the *Select* menu to access the *Script* menu (see page 5).

If desired, you can use your personal profile to define that the *Script menu* is shown directly after accessing the OSD (see page 38).

You can also use the mouse to switch between select menu and script menu (see page 38).

Executing a script via on-screen display

How to execute a script via on-screen display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. If the OSD is opened in the *Select* menu, press **Ctrl+X** to switch to the *Script* menu.
3. Use the **arrow keys** to select the script you want to execute.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

4. Press **Enter**.

Editing the default menu mode

In the defaults, after accessing the OSD at a user module, you can select a computer via the *Select* menu. If desired, you can use your personal profile to define that the *Script* menu is shown directly after accessing the OSD.

ADVICE: Independent of the default setting, you can always use the hotkey **Ctrl+X** to switch between *Select* menu and *Script* menu.

How to edit the default menu mode:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Def. selection dialog** entry and press **F8** (repeatedly) to select one of the following options:

select:	The <i>Select</i> menu is shown after accessing the OSD.
script:	The <i>Script</i> menu is shown after accessing the OSD.

4. Press **F2** to save your settings.

Switching threshold to switch the menu mode by mouse

In addition to switch the menu mode via the hotkey **Ctrl+X** you can also use the mouse to switch between menu modes.

ADVICE: After the activation of the switching of the menu mode by mouse, you can move the mouse to the left or to the right to switch between the two modes in the *Select* menu and in the *Script* menu.

IMPORTANT: Switching the menu mode by mouse is not possible if the entry is not available in the *Select* menu or in the *Script* menu!

How to activate/deactivate the switching threshold and/or adjust its sensitivity:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Sel. dialog replace sens** entry.
4. Adjust the sensitivity of the switching threshold by entering a value between 1 and 10.

NOTE: To deactivate the switching between menus by mouse, enter 0.

5. Press **F2** to save your settings.

Creating, editing and deleting scripts

Creating scripts

NOTE: Users without **Superuser** rights can create and store scripts only for their console. The options **Owner** (*currentuser*) and **Scope** (*console*) are auto-assigned and can not be viewed or edited.

Users with **Superuser** rights can view and edit all options.

How to create a script:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Scripting function** entry and press **Enter**.
4. Press **F3** and enter the following data under *Add Script*:

Name: Enter the desired name of the script key set and press **Enter**.

Owner: Press **F8** to select if the script should be assigned to the logged on user account (**current user**) or if it should be used globally by all users (**none**).

NOTE: Executing global scripts requires **Script execute rights** for the script..

Scope: Select if the switching condition of the user module (**console**), the entire system (**system**) or a list if user modules (**console list**) should be stored in the script.

The master console of a Tradeswitch console is provided with the option **workplace**.

NOTE: When selecting the option **console list** you can define the list of user modules via the **Consoles** entry.

5. Press **F2** to save your settings and the script.

Editing the settings of a script

NOTE: Users without **Superuser** rights can view and edit only the names and **Enable** settings of their own scripts.

Users with **Superuser** rights can view and edit all settings of all scripts.

How to edit the settings of a script:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Scripting function** entry and press **Enter**.
4. Select the script you want to edit and press **F5**.
5. Enter the following data under *Edit Script*:

Name:	Enter the desired name of the script key set and press Enter .
Enable:	Select if the script should be activated and editable (yes) or if it should be deactivated (no).
Ignore device response:	Select whether to ignore (yes) or analyze (no) the device response to the execution of the script.
<p>NOTE: The function can only be activated if the script is executed on another device.</p>	
Execution delay:	You can delay the execution of the script by up to 999 seconds after it is called. Enter the desired delay time in seconds.
Owner:	Press F8 in the user list to assign a script to a user or to cancel the assignment. If the script is not assigned to any user account, it is a global script. global scripts can be used by all users.
<p>NOTE: Executing global scripts requires Script execute rights for the script.</p>	
Script Availability	Select the user modules whose script menu lists this script.
Available via EasyControl	Select whether the script should be available in the EasyControl tool of the web application.

6. Press **F2** to save your settings.

Deleting a script

How to delete a script:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Scripting function** entry and press **Enter**.
4. Select the script you want to delete and press **F4**.
5. Confirm the security prompt with **Yes** and press **Enter**.

Defining rights to execute scripts

NOTE: Users are always able to view and delete their *own* scripts (**Owner**) without having to be assigned with additional rights.

Executing *global* scripts requires **Script execute rights** for the script.

You can assign this right directly in the settings of a user account. As an alternative, you are able to administrate this right via user groups (see *Efficient user group administration* on page 58).

How to change the right to execute global scripts:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. If you want to change this right for a user account, select the **User** entry.
For changing this right for a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose rights to execute scripts you want to edit and press **F5**.
6. Select the **Script execute rights** entry and press **Enter**.
7. Select the script from the list whose execute rights you want to edit.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

8. Press **F8** to select one of the following options:

no:	Denies right to execute script
yes:	Grants right to execute script

9. Repeat steps 7. and 8. to edit the execute rights of another script.

10. Press **F2** to save your settings.

Executing a script with script keys

After the script key modifier(s) and a script key set have been adjusted and a script key set has been activated in the user account, scripts can be executed at the console keyboard via key combinations.

Opening the on-screen display is not required to execute scripts using script keys. This way, scripts can be executed much faster.

How to execute a script with script keys:

1. Press the script key modifier(s) that have been adjusted in the matrix system and the script keys assigned to the script.

EXAMPLE:

- Script key modifiers: **Win+Shift**
- Script key for script: **1**

Press and hold **Win+Shift** together with the script key **1**. After releasing the keys, the script is executed.

Further information:

- *Changing the script key modifier and the valid keys* on page 42
- *Administrating script key sets* on page 43
- *Assigning script key sets to user accounts* on page 46

Changing the script key modifier and the valid keys

Script keys enable the fast execution of scripts by pressing a key combination. For this, script key sets can be created in the matrix system.

Both the script key modifier and a script key set define the key combination to be pressed to execute a script.

You can also define valid keys for the script keys.

How to change the script key modifier or the valid keys:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Script key** entry and press **Enter**.
5. Use the **arrow keys** to select *at least* one of the script key modifiers listed under **Modifier**. Afterwards, press **F8**:

Ctrl:	<i>Ctrl</i> key
Alt:	<i>Alt</i> key
Alt Gr:	<i>Alt Gr</i> key
Win:	<i>Windows</i> key
Shift	<i>Shift</i> key

6. Select the **Valid keys** entry and press **F8** to select one of the following options:

Num:	<i>only numerical keys</i> are interpreted as script keys when pressed in combination with the script key modifier
Alph:	<i>only alphabetic keys</i> are interpreted as script keys when pressed in combination with the script key modifier
AlphNum:	<i>alphabetical and numerical keys</i> are interpreted as script keys when pressed in combination with the script key modifier

IMPORTANT: Both the selected valid keys and the script key modifier are *no longer* provided as key combinations to the operating system and the applications on the target computer.

7. Press **F2** to save your settings.

Administrating script key sets

The KVM matrix system enables you to create 20 global script key sets or ten individual script key sets for each user.

Within the script key sets, you can define script keys to execute scripts.

NOTE: Global script key sets are displayed in the *Personal Profile* menu of all users of the matrix system.

Creating a script key set

How to create a script key set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Script key set** entry and press **Enter**.
4. Press **F3** and enter the following data under *Add Script Key Set*:

Name:	Enter the desired name of the script key set and press Enter .
Global:	Press F8 for selecting yes if you want to make the script key set in the personal profile available to all users of the system. Default: no
NOTE: This option can only be activated by users with the <i>Superuser</i> right (see page 67).	

5. Press **F2** to save your settings and the script key set.

Changing name and global allocation of a script key set

How to change the name and/or global allocation of a script key set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Script key set** entry and press **Enter**.
4. Select the script key set whose name or global allocation you want to change.
5. Press **F5-Taste** and change the following data under *Edit Script Key Set*:

Name:	Enter the desired name of the script key set and press Enter .
Global:	Press F8 for selecting yes if you want to make the script key set in the personal profile available to all users of the system. Default: no

6. Press **F2** to save your settings.

Defining script keys for scripts

NOTE: Global script key sets can be edited only by users with activated *Superuser* right (see page 67).

Without this right, only script keys assigned to scripts can be viewed.

How to define script keys for scripts:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Script key set** entry and press **Enter**.
4. Select a script key set and press **F5**.
5. Select the **Members** entry and press **Enter**.

The *Assign script key set* dialogue opens. The left column shows the name of the scripts and the right column shows the assigned script key(s).

6. Select the script you want to assign a script key to or whose script key you want to edit.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

7. Press **F5** and enter the desired script key.

NOTE: The chapter *Changing the script key modifier and the valid keys* on page 42 provides information on how to edit valid keys that are used as script keys.

8. Repeat steps 6. and 7. to define or change the script keys of other scripts.
9. Press **F2** to save your settings.

Assigning script key sets to user accounts

By assigning a script key set to a user account, the script keys defined in the set are interpreted and the particular script is executed.

How to assign a script key set to a user account or cancel the existing assignment:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Script key set** entry and press **Enter**.
4. Select the desired script key set.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Press **F8** to activate or deactivate the assignment.

NOTE: Script key sets that are already assigned to a user account are marked with an arrow (▶).

6. Press **F2** to save your settings.

Deleting script key sets

NOTE: Only users with the *Superuser* right (see page 67) are allowed to delete global script key sets.

How to delete a script key set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Script key set** entry and press **Enter**.
4. Select the script key set you want to delete and press **F4**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Confirm the security prompt with **Yes** and press **Enter**.

Push events

NOTE: This function is available only after activating the additional **IP-Control-API** function.

Push event keys let users at consoles trigger push events via XML control. The triggered push event contains the following information:

- the string entered by the user,
- the console’s name and device ID,
- name and device ID of the target switched to the console.

Triggering push events

You can trigger push events by pushing and holding the push event key modifier and entering a valid string (see below).

PUSH EVENT OF THE XML SERVICE

```

<?xml version="1.0" encoding="utf-8"?>
<root>
  <pushNotification type="user_push_event">
    <sourceId>0x00000115</sourceId>
    <sourceCl>IpConsole</sourceCl>
    <sourceName>CON</sourceName>
    <text>123</text>
    <targetId>0x00001D4E</targetId>
    <targetCl>IpCpu</targetCl>
    <targetName>CPU</targetName>
    <originatorId>0x00000115</originatorId>
    <originatorCl>IpConsole</originatorCl>
    <originatorName>CONn</originatorName>
  </pushNotification>
</root>

```

<!-- device ID of user module on which the push event was triggered -->

<!-- device class -->

<!-- device name-->

<!-- user input -->

<!-- device ID of target module -->

<!-- device class of target module -->

<!-- device name of target module -->

<!-- device ID of user module operated by user -->

<!-- device class -->

<!-- device name -->

NOTE: The values of **<originatorId>** and **<sourceId>** differ only when using Trade-switching.

Changing push event key modifiers and valid keys

You can trigger push events by pushing and holding the push event key modifier and entering a valid string (see entry **Valid keys**).

How to change push event key modifiers or valid keys:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to open the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Push event key** entry and press **Enter**.
5. Under **Modifier**, select *at least* one modifier key by selecting the control box with the **arrow keys** and press **F8** to confirm your selection:

Ctrl:	<i>Ctrl</i> key
Alt:	<i>Alt</i> key
Alt Gr:	<i>Alt Gr</i> key
Win:	<i>Windows</i> key
Shift:	<i>Shift</i> key

6. Under **Valid keys**, press **F8** to select one of the following options:

Num:	<i>Only numerical keys</i> are interpreted as push event keys when pressed together with the push event key modifier.
Alph:	<i>Only alphabetic keys</i> are interpreted as push event keys when pressed together with the push event key modifier.
AlphNum:	<i>Numerical and alphabetical keys</i> are interpreted as push event keys when pressed together with the push event key modifier

7. Press **F2** to save your settings.

Switching the target modules automatically or manually

Auto scanning all target modules (Autoscan)

The *Autoscan* function successively accesses all target modules that are mentioned in the active scanmode set and available to the user.

The *Scantime* setting (see page 50) enables you to define how long a target module is to be accessed.

When accessing the target modules, the workplace name, the name of the currently accessed target module, and a note regarding the *Autoscan* function are displayed.

NOTE: If the *Autoscan* function is active, the keyboard and mouse inputs are transmitted to the currently accessed target module.

During your inputs, the *Autoscan* function stops and continues after you finished your inputs.

Applying the *Autoscan* function

Requirements for using the *Autoscan* function:

- *Creating a scanmode set* (see page 53)
- *Assigning a scanmode set to a user account* (see page 56)

How to start the *Autoscan* function:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F9** to call the *Operation* menu.
3. Press **A** or select the **A - Autoscan** entry and press **Enter**.

ADVICE: After the on-screen display has been called, you can activate the *Autoscan* function in the *Select* menu by pressing **Ctrl+A**.

How to stop the *Autoscan* function:

1. Press the hotkey **Ctrl+Num** (default) to call the on-screen display.

This causes the *Autoscan* function to stop.

Configuring the scantime of the Autoscan function

By default, each target module is accessed for five seconds. After that, the target module is disconnected and the next target module is accessed.

Select a time span between 1 and 99 seconds to define how long the target module is to be accessed.

How to change the scantime:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Move the cursor to the **Scantime** entry and enter a span between **1** and **99** seconds.
4. Press **F2** to save your settings.

Auto scanning all active target modules (Autoskip)

The *Autoskip* function successively accesses any target module that is included into the active scancode set and available to the user.

The connected computer must be active to carry out this function.

The *Scantime* setting (see page 50) enables you to define how long each target module is to be accessed.

When accessing the target modules, the workplace name, the name of the currently accessed target module, and a note regarding the *Autoskip* function are displayed.

NOTE: If the *Autoskip* function is active, the keyboard and mouse inputs are transmitted to the currently accessed target module.

During the inputs, the *Autoskip* function stops and continues after you finished your inputs.

Applying the Autoskip function

Requirements for using the *Autoskip* function:

- *Creating a scanmode set* (see page 53)
- *Assigning a scanmode set to a user account* (see page 56)

How to start the *Autoskip* function:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F9** to call the *Operation* menu.
3. Press **B** or select the **B - Autoskip** entry and press **Enter**.

ADVICE: After the on-screen display has been called, you are enabled to activate the *Autoskip* function in the *Select* menu by pressing **Ctrl+B**.

How to stop the *Autoskip* function:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
This causes the *Autoskip* function to stop.

Configuring the scantime of the *Autoskip* function

By default, each target module is accessed for five seconds. After that, the target module is disconnected and the next target module is accessed.

Select a time span between 1 and 99 seconds to define how long the target module is to be accessed.

How to change the scantime:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Move the cursor to the **Scantime** entry and enter a span between **1** and **99** seconds.
4. Press **F2** to save your settings.

Scanning the target modules manually (Stepscan)

By pressing a key, the *Stepscan* function successively accesses any target module that is included in the scanmode set and available to the user.

When accessing the target modules, the workplace name, the name of the currently accessed target module, and a note regarding the *Stepscan* function are displayed.

(De)activating the Stepscan function

Requirements to use this function:

- *Creating a scanmode set* (see page 53)
- *Configuring keys to scan the targets manually* (see page 53)
- *Assigning a scanmode set to a user account* (see page 56)

How to activate the Stepscan function:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F9** to call the *Operation* menu.
3. Press **C** or select the **C - Stepscan** entry and press **Enter**.

ADVICE: After the on-screen display has been called, you are enabled to activate the *Stepscan* function in the *Select* menu by pressing **Ctrl+C**.

How to deactivate the Stepscan function:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
This causes the *Stepscan* function to stop.

Switching between the target modules

How to switch between target modules via Stepscan function:

1. Press the **Up** stepkey (default) to access the next target module or the **Down** stepkey (default) to access the previous target module.

Configuring keys to scan the targets manually

By pressing a key, the *Stepscan* function successively switches to all target modules that are available to the user.

You can select different keys to access the next (default **Up**) or the previous (default **Down**) target module.

How to select the keys for using the *Stepscan* function:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Stepkeys** entry and press **F8** (repeatedly) to select between the following options:

Up/Down:	<i>Up</i> and <i>Down</i> arrow keys
PgUp/PgDn:	<i>Page ↑</i> and <i>Page ↓</i> keys
Num Up/Down:	<i>Up</i> and <i>Down</i> arrow keys of the numeric keypad
Num PgUp/PgDn:	<i>Page ↑</i> and <i>Page ↓</i> keys of the numeric keypad
Num +/-	<i>plus</i> and <i>minus</i> keys of the numeric keypad

4. Press **F2** to save your changes.

Administrating the scanmode sets

The matrix system enables you to create 20 global select key sets or ten individual scanmode sets for each user.

The select key sets allow you to define the computers to be accessed when performing the *Autoscan*, *Autoskip* or *Stepscan* function.

NOTE: The global scanmode sets are displayed in the *Personal Profile* menu of all users of the matrix system.

Creating a scanmode set

How to create a scanmode set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Scanmode set** entry and press **Enter**.

4. Press **F3** and collect the following data in the *Add Scanmode Set* menu:

Name:	Enter the desired scanmode set name and press Enter .
Global:	Select yes by pressing F8 if you want the scanmode set in the personal profile to be available for all users of the system. default: no
NOTE: This option can only be activated by users with the <i>Superuser</i> right (see page 67).	

5. Press **F2** to save your settings.

Changing the name and global allocation of a scanmode set

How to change the name and/or *Global* setting of a scanmode set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Scanmode set** entry and press **Enter**.
4. Select the scanmode set whose setting you want to change.
5. Press **F5** to change the following data in the **Edit Scanmode Set** menu:

Name:	Enter the desired scanmode set name and press Enter .
Global:	Select yes by pressing F8 if you want the scanmode set in the personal profile to be available for all users of the system. default: no
NOTE: This option can only be activated by users with the <i>Superuser</i> right (see page 67).	

6. Press **F2** to save your settings.

Assigning the target modules to a scanmode set

NOTE: Global scanmode sets can only be edited by users with activated *Superuser* right (see page 67).

Without this right, only the assigned target modules can be viewed.

How to assign target modules to a scanmode set or cancel the existing assignment:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Scanmode set** entry and press **Enter**.
4. Press **F5** to edit the selected scanmode set.
5. Select the **Members** entry and press **Enter**.

The *Scanmode Set Members* menu opens. This menu lists all target modules within the matrix system that you are allowed to access.

6. Mark a target module to be assigned to the scanmode set or whose assignment is to be cancelled.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

7. Press **F8** to (de)activate the selection.

NOTE: The target module that has been assigned to the scanmode set is marked with an arrow (▶).

8. If you want to assign further target modules to the scanmode set, repeat steps 6 and 7.
9. Press **F2** to save your settings.

Assigning a scanmode set to a user account

A scanmode set defines the targets to be accessed when the *Autoscan*, *Autoskip* or *Step-scan* function is carried out.

How to assign a scanmode set to the user account or cancel the existing assignment:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Scanmode set** entry and press **Enter**.
4. Select the desired scanmode set in the list field.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Press **F8** to (de)activate the selection.

NOTE: An assigned scanmode set is marked with an arrow (▶).

6. Press **F2** to save your settings.

Deleting a scanmode set

NOTE: Only users with activated *Superuser* right (see page 67) can delete a global scanmode set.

How to delete a scanmode set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to open the *Personal Profile* menu.
3. Select the **Scanmode set** entry and press **Enter**.
4. Select the scanmode set you want to delete and press **F4**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Users and Groups

Efficient rights administration

The matrix system administrates up to 256 user accounts and the same amount of user groups. Each user within the system can be a member of up to 20 groups.

Both user accounts and user groups can be provided with different rights.

ADVICE: The rights administration can almost completely be carried out through user groups. Therefore, the user groups and the assigned rights have to be adequately planned and implemented.

This way, the user rights can be quickly and efficiently changed.

The effective right

The effective right determines the right to carry out a particular function.

IMPORTANT: The effective right is the maximum right that consists of the user account's individual right and the rights of the assigned group(s).

In the OSD, the individual right is highlighted in yellow. The effective right is highlighted in green.

Press **Ctrl+F12** to open the **Right Source** window. Here you can see the groups the effective right results from.

Example: The user *JDoe* is member of the groups *Office* and *TargetConfig*.

The following table shows the user account rights, the rights of the assigned groups, and the resulting effective right:

Right	User <i>JDoe</i>	Group <i>Office</i>	Group <i>TargetConfig</i>	Effective right
Target config	No	No	Yes	Yes
Change own password	No	Yes	No	Yes
Target access	Full	View	No	Full

The settings of the *Target config* and *Change own password* rights result from the rights assigned to the user groups. The *Target access* right which, in this case, enables full access to a target module, was given directly in the user account.

NOTE: To be able to better differentiate between individual and effective right displayed in the menus of the user management, the rights are highlighted in different colours.

- Individual rights are displayed in *yellow*.
- Effective rights are displayed in *green*.

Efficient user group administration

User groups enable the creation of a shared right profile for several users with identical rights. Furthermore, the user accounts that are included in the member list can be grouped and therefore no longer have to be individually configured. This facilitates the rights administration within the matrix system.

If the rights administration takes place within the user groups, the user profile only stores general data and user-related settings (key combinations, language settings, ...).

When initiating the matrix system, it is recommended to create different groups for users with different rights (e. g., »Office« and »IT«) and assign the respective user accounts to these groups.

EXAMPLE: Create more groups if the user rights are to be further divided. If, for example, some users of the »Office« group are to be provided with the *multi-access* right, a respective user group can be created:

- Create a user group (e. g., »Office_MultiAccess«) with identical settings for the »Office« group. The *multi-access* right is set to *full*. Assign the respective user accounts to this group.
- Create a user group (e. g., »MultiAccess«) and only set the *multi-access* right to *Yes*. In addition to the »Office« group, also assign the respective user accounts to this group.

In both cases, the user is provided with the *full* effective right for *multi-access*.

ADVICE: The user profile offers the possibility to provide extended rights to a group member.

Administrating user accounts

Creating a new user account

A matrix system can contain up to 256 user accounts.

The owner of a user account is provided with individual login data, rights and user-related settings for the system.

How to create a new user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User** entry and press **Enter**.
4. Press **F3** and enter the following data in the *Add User* menu:

Name:	username of the new account
Password:	password of the new account
Repeat:	repeat new password

5. Press **F2** to save your inputs and create a user account.

IMPORTANT: The recently created user account can neither configure nor access the target modules.

Before the account can be used, it has to be added to an existing user group or provided with individual rights.

Renaming the user account

How to rename a user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User** entry and press **Enter**.
4. Select the user account you want to rename and press **F5**.
5. Select the **Name** entry and press **Enter**.
6. Enter the new name and press **Enter**.
7. Press **F2** to save your settings.

Changing the user account password

NOTE: The personal password can be changed in the *Personal Profile* menu (see page 4) if the user account is provided with the *Personal Profile* or the *Change own password* right.

How to change the user account password:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User** entry and press **Enter**.
4. Select the user account whose password you want to change and press **F5**.
5. Select the **Password** entry and press **Enter**.
6. Enter the following data into the *Change Password* menu:

New:	Enter the new password.
Repeat:	Repeat the new password.

7. Press **F2** to save your settings.

Changing the user account rights

A user account can be assigned with different rights.

The following table lists the different rights. Further information regarding these rights are provided in the respective chapters.

Name	Right	Page
Change own password	Change own password	page 69
Multi access	Access mode when a target computer is simultaneously accessed	page 78
Personal profile	Change personal user settings	page 68
Script execute rights	Carry out a global script	page 41
Push-Get rights	Carry out <i>Push-Get function</i>	page 139
Superuser right	Unrestricted access to the configuration of the system	page 67
Target access rights	Access to a target module	page 76
Target config	Configuration of target modules	page 81
Target group access rights	Access to a target group	page 77
Target multi access rights	Access if a target computer is accessed by several users	page 78
Target USB access	Access USB devices for all target computers	page 79
Target (group) USB access rights	Access USB devices for a certain target module or target group	page 80
WebIf login	Login to the <i>Config Panel</i> web application	page 130

Changing a user account's group membership

NOTE: Any user within the matrix system can be a member of up to 20 user groups.

How to change a user account's group membership:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User** entry and press **Enter**.
4. Select the user account whose group membership you want to change and press **F5**.
5. Select the **Group membership** entry.
6. Select the user group to which you want to add a user account or from which you want to delete a user account.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

7. Press **F8** to add the user account to or delete it from the selected user group.

NOTE: User groups to which the user account is assigned to are marked with an arrow (▶).

8. Repeat steps 6 and 7 to edit the group membership for further accounts.
9. Press **F2** to save your settings.

(De)activating a user account

How to (de)activate a user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the user account you want to (de)activate and press **F5**.
4. Select the **Enable** entry and press **F8** to select one of the following options:

yes:	user account activated
no:	user account deactivated

5. Press **F2** to save your settings.

Deleting a user account

How to delete a user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User** entry and press **Enter**.
4. Mark the user account you want to delete and press **F4**.
5. Select **Yes** and press **Enter** to respond to the prompt for confirmation.

Administrating user groups

Creating a new user group

The matrix system can contain up to 256 user groups.

How to create a new user group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User group** entry and press **Enter**.
4. Press **F3** and enter the user group name.
5. Press **F2** to save your inputs and create a user group.

IMPORTANT: The recently created user group can neither configure nor access the target modules.

Renaming a user group

How to rename a user group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User group** entry and press **Enter**.
4. Select the user group you want to rename and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Name** entry and press **Enter**.
6. Enter the new name and press **Enter**.
7. Press **F2** to save your settings.

Changing the user group rights

The user groups can hold different rights.

The following table lists the rights that can be assigned to a user group. The rights are described in the respective chapters.

Name	Right	Page
Change own password	Change own password	page 69
Multi access	Access mode when a target computer is simultaneously accessed	page 78
Personal profile	Change personal user settings	page 68
Script execute rights	Carry out a global script	page 41
Push-Get rights	Carry out <i>Push-Get function</i>	page 139
Superuser right	Unrestricted access to the configuration of the system	page 67
Target access rights	Access to a target module	page 76
Target config	Configuration of target modules	page 81
Target group access rights	Access to a target group	page 77
Target multi access rights	Access if a target computer is accessed by several users	page 78
Target USB access	Access USB devices for all target computers	page 79
Target (group) USB access rights	Access USB devices for a certain target module or target group	page 80
WebIf login	Login to the <i>Config Panel</i> web application	page 130

Administrating the user group members

How to administrate the members of a user group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User group** entry and press **Enter**.
4. Select the user group whose members you want to administrate and press **F5**.
5. Select the **Member management** entry and press **Enter**.
6. Select the user account you want to add to or delete from the user group.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

7. Press **F8** to add the user account to the selected user group or to delete it from this group.

User accounts that are assigned to the user group are marked with an arrow (▶).

8. Repeat steps 6 and 7 to change the group membership for further accounts.
9. Press **F2** to save your settings.

(De)activating a user group

How to (de)activate a user group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User group** entry and press **Enter**.
4. Select the user group whose status you want to change and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Enable** entry and press **F8** to select one of the following options:

yes:	activate user group
no:	deactivate user group

IMPORTANT: If the user group is deactivated, the group rights do *not* apply to the assigned members.

6. Press **F2** to save your settings.

Deleting a user group

How to delete a user group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User group** entry and press **Enter**.
4. Select the user group you want to delete and press **F4**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Rights regarding the user account

The »Superuser« right

The *Superuser* right enables you to fully access and configure the matrix system.

NOTE: The information on the user rights that have been assigned before are still stored when the *Superuser* right is activated. After the *Superuser* right has been withdrawn, the saved rights do apply again.

How to change the *Superuser* right of a user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. If you want to change this right for a user account, select the **User** entry.
For changing this right for a user group, select the **Usergroup** entry.
4. Press **Enter**.

5. Select the user account or the user group whose *Superuser* rights you want to change and press **F5**.
6. Select the **Superuser right** entry and press **F8** to select one of the following options:

yes:	full access to KVM matrix system
no:	access authorisation according to user and group rights

7. Press **F2** to save your settings.

Changing settings in the »Personal Profile« menu

How to change a user account's operating rights:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. If you want to change this right for a user account, select the **User** entry.
For changing this right for a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose config rights you want to change and press **F5**.
6. Select the **Operation rights** entry and press **Enter**.
7. Select the **Personal Profile** row and press **F8** to select one of the following options:

yes:	allows to view and edit the personal profile
no:	denies to view and edit the personal profile

8. Press **F2** to save your settings.

Changing your own password

How to change a user account's operation rights:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. If you want to change this right for a user account, select the **User** entry.
For changing this right for a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose config rights you want to change and press **F5**.
6. Select the **Operation rights** entry and press **Enter**.
7. Select the **Change own password** row and press **F8** to select one of the following options:

yes:	allows to change the password of the own user account
no:	denies to change the password of the own user account

8. Press **F2** to save your settings.

Authorisation to execute the »Replace device« function

If a computer or a target module is replaced by new device, the previous config settings can be copied to the new device. After the config settings have been copied to the new device, it can be operated immediately.

In the default settings, the authorisation to execute the function is limited to the administrator and all users with activated superuser rights.

If desired, the authorization can be granted to other users.

How to change the right to change your own password:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. If you want to change this right for a user account, select the **User** entry.
For changing this right for a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose config rights you want to change and press **F5**.

6. Select the **Operation rights** entry and press **Enter**.
7. Select the **Replace device** row and press **F8** to select one of the following options:

yes:	Allow users to execute the function
no:	Deny users to execute the function

8. Press **F2** to save your settings.

Target groups and view filters

Difference between target groups and view filters

The target modules of the matrix system can be organised into target groups and view filters.

Intended use of target groups

Target groups enable the administrator to quickly assign the rights of a user or a user group for all target modules within a group.

NOTE: The different target modules can be members of *several* target groups.

Intended use of target groups

View filters enable the users of a matrix system to organise the different target modules into view groups. Especially in large matrix systems, the creation of view groups gives you the possibility to keep a better overview over the system.

You can group the target modules according to their view filter (e.g. the server room) or to any other features (e.g. to the operating system of the connected computer).

Adminstrating target groups

The »New digital Targets« target group

The *New digital Targets* target group is preconfigured in the matrix system. This group automatically contains any target module that is connected to the system. For this, the computer connected to the module also has to be switched on.

If you want to provide a user or a user group with particular rights to all recently connected target modules, change the device group rights of either the user account or the user group.

Creating a new target group

How to create a new target group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Target group** entry and press **Enter**.
4. Press **F3** to create a new group.
5. In the **Name** line, enter the name of the target group.
6. Select **Device class** and press **F8** to create a group for *digital* target modules or for *remote targets*.
7. Press **F2** to save your inputs and create a target group.

NOTE: The rights for this target group can be assigned when access rights to a target group (see page 77) of either the user account or the user group are changed.

Renaming a target group

How to rename a target group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Target group** entry and press **Enter**.
4. Select the target group you want to rename and press **F5**.
5. Select the **Name** entry and press **Enter**.
6. Enter the new name and press **Enter**.
7. Press **F2** to save your settings.

Administrating the target group members

NOTE: You can assign up to 20 target modules to a target group within the matrix system.

How to administrate the members of a target group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Target group** entry and press **Enter**.

4. Select the target group whose members you want to administrate and press **F5**.
5. Select the **Members** entry and press **Enter**.
6. Select the target module you want to add to or delete from the target group.

NOTE: The special *MEMBERS* and *NONMEMBERS* options of this menu's view filter (see page 11) enable you to only list the target modules that are or are not assigned to this group.

You can also use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

7. Press **F8** to add the target module to the selected target group or to delete it from this group.

NOTE: The target modules that are assigned to a target group are marked with an arrow (▶).

8. Repeat steps 6 and 7 to edit the group membership of further target modules.

Deleting a target group

How to delete a target group:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Target group** entry and press **Enter**.
4. Select the target group you want to delete and press **F4**.
5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Administrating view filters

Creating a new view filter

How to create a new view filter:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **View filter** entry and press **Enter**.
4. Press **F3** and enter the view filter name.
5. Press **F2** to save your inputs and create a view filter.

Assigning a target module to a view filter

How to assign a view filter to a target module or cancel the existing assignment:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **View filter** entry and press **Enter**.
4. Select the view filter which you want to assign a target module to or whose assignment you want to cancel and press **F5**.
5. Select the **Members** entry and press **Enter**.

The *Assign View Filter* menu opens. This menu contains a list of all target modules within the matrix system.

6. Mark a target module which you want to assign to the view filter or whose assignment you want to cancel.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

7. Press **F8** to (de)activate the assignment.

NOTE: A target module, which is assigned to a view filter, is marked with an arrow (▶).

8. Repeat steps 6 and 7 for further target modules.
9. Press **F2** to save your settings.

Renaming a view filter

How to rename a view filter:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **View filter** entry and press **Enter**.
4. Select the view filter you want to rename and press **F5**.
5. Select the **Name** entry and press **Enter**.
6. Enter the new name and press **Enter**.
7. Press **F2** to save your settings.

Deleting a view filter

The created view filters can be deleted at any time. Deleting a view filter has no effect on the target modules assigned to the view filter.

How to delete a view filter:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **View filter** entry and press **Enter**.
4. Select the view filter you want to delete and press **F4**.
5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Target modules

The target modules serve to connect the target computers to the matrix system. The target modules can be accessed through the user modules.

Adjusting the access and config rights

Accessing a target module

ADVICE: It is recommended to use target groups to assign the target access rights (see page 65).

This way, you are able to keep an overview of the KVM matrix systems. It also benefits the operating performance within the on-screen display of the system.

In order to carry out setting deviating from the rights assigned to the existing target groups, you can assign individual access rights in addition to the group rights.

How to change the user account's target access rights:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. If you want to change this right of a user account, select the **User** entry.
For changing the right of a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose target access rights you want to change and press **F5**.
6. Select the **Target access rights** entry and press **Enter**.
7. Select the desired target module whose access right you want to change.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

8. Press **F8** to select one of the following options:

no:	denies access to the computer connected to the target module
view:	enables to view the screen content of the computer connected to the target module
full:	full access to the computer connected to the target module

NOTE: The *View mode* enables you to access the monitor image of the target computer. Inputs, however, are *not* possible.

9. Repeat steps 7 and 8 to change the access rights to further target modules.

10. Press **F2** to save your settings.

Accessing a target group

How to change the user account's target group access right:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. If you want to change this right of a user account, select the **User** entry.
For changing the right of a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose target group access rights you want to change and press **F5**.
6. Select the **Target group access rights** entry and press **Enter**.
7. Select the desired target group whose access rights you want to change.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

8. Press **F8** to select one of the listed options:

no:	denies access to the computer connected to the group's target modules
view:	enables to view the screen content of the computer connected to the group's target modules
full:	full access to the computer connected to the group's target modules

NOTE: The *View mode* enables you to access the monitor image of the target computer. Inputs, however, are *not* possible.

9. Repeat steps 7 and 8 to change the access rights to further target modules.

10. Press **F2** to save your settings.

Access mode when simultaneously accessing a target computer

In the default settings of the KVM matrix system, only one user can access a target computer.

This restriction can be lifted by changing the access rights for a user account or a user group.

You can either change the global settings to allow multiple users to access a target computer at the same time (for all target computers a user or a user group has access to) *or* you can change the rights for particular target computers or target groups only.

NOTE: The right for simultaneous access depends on the user's effective right (see page 57). The effective right is the highest right that results from the individual right of the user accounts and the rights of the assigned group(s).

How to change the multi access rights:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. If you want to change this right of a user account, select the **User** entry.
For changing the right of a user group, select the **Usergroup** entry.
4. Press **Enter**.

5. Select the user account or the user group whose multi access rights you want to change and press **F5**.
6. Select the **Operation rights** entry and press **Enter**.
7. Select the **Multi access** entry and press **F8** (repeatedly) to select one of the following options:

no:	denies access to an already accessed target computer
view:	allows to view the screen content of the target computer; <i>no</i> inputs possible
full:	full access to an already accessed target computer

8. Press **F2** to save your settings.

Access to USB devices

In the defaults of the matrix system, users have access to USB devices of a channel group.

This right can be denied by changing the right »Access to USB devices« of a user account or a user group.

The right to access USB devices of a certain target computer can be denied either globally (for all target computers a user or a user group can access) *or* for certain target computers or groups.

NOTE: The access right depends on the user's effective right (see page 57). The effective right is the highest right that results from the individual right of user accounts and the rights of assigned group(s).

How to change the right to access USB devices for *all* target computers:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. If you want to change this right of a user account, select the **User** entry.
For changing the right of a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose rights you want to change and press **F5**.

6. Select the **Operation rights** entry and press **Enter**.
7. Select the **Target USB access** entry and press **F8** (repeatedly) to select one of the following options:

yes:	Allow access to USB devices of the channel group.
no:	Deny access to USB devices of the channel group.

8. Press **F2** to save your settings.

How to change the right to access USB devices for *a certain* target module or target group:

NOTE: You can configure and apply access to USB devices if the user account or the user group are assigned with *general access rights* (see page 76 f.) for the target computer.

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. If you want to change this right of a user account, select the **User** entry. For changing the right of a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose rights you want to change and press **F5**.
6. Select the **Target (group) USB access** entry and press **Enter**.
7. Select the target module or target group whose rights you want to change.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

8. Press **F8** (repeatedly) to select one of the following options:

yes:	Allow access to USB devices of the channel group.
no:	Deny access to USB devices of the channel group.

9. Press **F2** to save your settings.

Rights for configuring the target modules

How to change the target config rights:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. If you want to change this right of a user account, select the **User** entry.
For changing the right of a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose rights to edit and configure the target modules you want to change and press **F5**.
6. Select the **Config rights** entry and press **Enter**.
7. Select the **Target Config** entry and press **F8** to select one of the following options:

yes:	allows the right to view and edit the target module config
no:	denies the right to view and edit the target module config

8. Press **F2** to save your settings.

Basic configuration of the target modules

Renaming a target module

During the booting process of the matrix system, the target modules are automatically named. The text *CPU-ID* is put before the physical device ID.

All target modules that are automatically named can be renamed.

ADVICE: The target modules can be renamed in the *Configuration* (see below) or the *Select* menu (see page 82).

How to rename a target module in the *Configuration* menu:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the target module you want to rename and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Name** entry and press **Enter**.
6. Enter the new name and press **Enter**.

NOTE: The message »Name exists« is displayed if a target module with the same name has already been connected to the system.

The settings of such target modules are stored within the matrix system and are only visible in the *Config Panel* web application. If necessary, use the web application to delete the target module from the system.

Afterwards, this name can be assigned to another target module.

7. Press **F2** to save your settings.

How to rename a target module in the *Select* menu:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Select the target module to be renamed.

NOTE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

3. Press **F5**.
4. Change the name and press **Enter**.

NOTE: The message »Name exists« is displayed if a target module with the same name has already been connected to the system.

The settings of such target modules are stored within the matrix system and are only visible in the *Config Panel* web application. If necessary, use the web application to delete the target module from the system.

Afterwards, this name can be assigned to another target module.

Deleting a target module from the KVM matrix system

If the matrix system is not able to detect a target module that has already been connected to the system, the device is defined as inactive.

Therefore, the list entry of the target module you want to permanently remove from the system has to be manually removed.

NOTE: Only inactive target modules can be deleted.

How to delete a target module that is inactive or disconnected from the system:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the target module you want to delete and press **F4**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Copying the target module config settings

If a target module of the KVM matrix system is replaced by another device, it is possible to copy the previous config settings to the new device.

After the config settings have been copied to the new device, it can be operated immediately.

IMPORTANT: The target module whose settings you want to copy is afterwards deleted from the KVM matrix system.

How to copy the target module config settings:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

4. Select the active target module to which you want to copy the config settings of a target module that is switched off or disconnected from the matrix system and press **F7**.
5. Select the target module whose settings you want to copy and press **Enter**.

NOTE: Only target modules that are switched off or disconnected from the system are listed in this menu.

6. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.
7. Press **F2** to save your settings.

Settings for special hardware

(De)Activating an USB keyboard mode the »Generic USB« mode

USB target modules support different USB input devices. You can use the special features of a USB input device after selecting the specific USB keyboard mode.

As an alternative to the specific USB keyboard modes, you can also use the **generic USB** mode. In this mode, the data from the USB devices connected to the top **Keyb./Mouse** interface is transmitted to the active target module.

IMPORTANT: The **generic USB** mode supports USB mass storage devices and many available HID device. However, being able to operate particular USB device in generic USB mode can not be guaranteed.

IMPORTANT: When connecting a USB hub or a USB composite device, which contains multiple USB devices, only one of the connected HID devices can be used in **generic USB** mode.

- **USB keyboards:** In addition to the keys of standard keyboard layouts, the default USB keymode **PC Multimedia** supports several multimedia keys like **Loud** and **Quiet**.

When using *Apple* keyboards, special keyboard modes let you use the special keys of these keyboards.

The following table lists the supported USB keyboards:

INPUT DEVICE	SETTING
PC keyboard with standard keyboard layout	▸ PC Standard:
PC keyboard with additional multimedia keys	▸ Multimedia
Apple keyboard with numeric keypad (A1243)	▸ Apple A1243

- **Displays and tablets:** You can operate computers connected to the target module with one of the supported *displays* or *tablets*:

INPUT DEVICE	SETTING
HP 2310tk	▸ HP 2310t
iiyama T1931	▸ iiyama T1931
iiyama TF2415MC	▸ iiyama TF2415MC
NOTTROT N170 KGE	▸ NOTTROT N170 KGE
Wacom Cintiq 21UX	▸ Wacom Cintiq 21US
Wacom Intuos3	▸ Wacom Intuos 3
Wacom Intuos4 S	▸ Wacom Intuos 4 S
Wacom Intuos4 M	▸ Wacom Intuos 4 M
Wacom Intuos4 L	▸ Wacom Intuos 4 L
Wacom Intuos4 XL	▸ Wacom Intuos 4 XL
Wacom Intuos5 S	▸ Wacom Intuos 5 S
Wacom Intuos5 M	▸ Wacom Intuos 5 M
Wacom Intuos5 L	▸ Wacom Intuos 5 L

- **Generic-USB mode:** In this mode, data of the USB device connected to the top **Keyb./Mouse** socket of the user module is transmitted to the target module without being altered.

INPUT DEVICE	SETTING
any USB mass storage or USB HID device	▸ Generic USB

IMPORTANT: The **generic USB** mode supports many available USB mass storage devices and HID devices. However, being able to operate particular device in generic USB mode can not be guaranteed.

- **Controller:** The **ShuttlePRO v2** multimedia controller is used to control various audio and video programs. With a special USB keyboard mode, you can use the controller to operate the computer connected to the target module:

INPUT DEVICE	SETTING
Contour ShuttlePRO v2	▸ Contour Shuttle Pro 2

- **LK463-compatible keyboard:** You can connect an LK463-compatible keyboard to the user module. The arrangement of the 108 keys of such keyboards corresponds to the OpenVMS keyboard layout.

A special USB keyboard mode ensures that the pressing of a special key on this keyboard is transmitted to the target computer:

INPUT DEVICE	SETTING
LK463-compatible keyboard	▸ LK463

How to select a USB keyboard mode:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the target module whose settings you want to change and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **USB keyboard** entry and press **F8** to select one of the options.

6. Click **OK** to save your settings.

IMPORTANT: After changing the keyboard layout of *Sun Keyboards*, Sun computers require a reboot.

Defining the EDID profile to be used

The EDID information (*Extended Display Identification Data*) of a monitor inform the graphics card of a connected computer about the technical features of the device.

The EDID profile of the monitor, which is connected to the user module, is not available at the target module. Therefore, the target module transmits a standard profile to the computer. The EDID information of this profile are optimised for the majority of available graphics cards.

We provide additional profiles for special resolutions.

ADVICE: In some cases it is recommended to read out the EDID profile of the console monitor (see page 113 f.) and activate the configuration of the target module.

How to choose the EDID profile to be transmitted to the computer:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Target** entry and press **Enter**.
4. Select the target module whose settings you want to change and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **EDID** entry and press **F8** to choose between the standard profile (**Device specific default profile**) or another profile from the list.

default: activates the device-specific default profiles

user: activates a user-defined profile

IMPORTANT: Select the **Assign EDID** entry to choose the user-defined profile and press **Enter**.

Select the desired profile and press **F8**.

Press **F2** to save your settings.

NOTE: The names of the special G&D profiles provide information on the maximum resolution and refresh rate for the profile.

The **GUD DVI1024D4 060 1280×1024/60** profile is provided for a resolution of 1280×1024 pixels at 60 Hz refresh rate.

- Press **F2** to save your settings.

Reducing the colour depth of the image data to be transmitted

In the default settings of a target module, the central module transmits the image information with a maximum colour depth of 24 bit to the user module.

Using a high resolution and displaying moving images can result in the user module “skipping” several images.

In such cases, reduce the colour depth of the image data to 18 bits. This way the data volume to be transmitted can be reduced.

NOTE: Depending on the image contents, reducing the colour depth may result in slight colour grades.

How to change the colour depth of the image data to be transmitted:

- Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
- Press **F11** to call the *Configuration* menu.
- Select the **Target** entry and press **Enter**.
- Select the target module whose settings you want to change and press **F5**.

ADVICE: Use the menu’s *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

- Use the **Colour depth** entry and press **F8** to choose between the following options:

24 Bit: transmits the image data with a maximum colour depth of 24 bits

18 Bit: reduces the colour depth of image data to 18 bits

- Press **F2** to save your settings.

Enhanced functions

Remembering the last target module

Enable the **Remember last target** function in your personal profile to remember the target module the user last accessed even after the logout. After the next login, the user automatically accesses the last target module.

NOTE: Turning off the user module on which the user is logged in is treated like a logout.

IMPORTANT: When enabling the **Remember last target** function, the user's configured standard target is ignored.

How to enable/disable automatic access to the last accessed target module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Remember last target** entry and press **F8** (repeatedly) to select one of the following settings.

yes:	After the user logs in, the remembered target is accessed.
no:	After the user logs in, the configured standard target is accessed. If no standard target is configured, the Select menu opens (default).

4. Press **F2** to save your settings.

Displaying »Multiuser« information

If several users are accessing a target computer (*Multiuser* mode), the »*Multiuser*« information can be activated. This way, all accessing users are provided with the information that at least one other user is currently accessing the target computer.

NOTE: The setting to display the »*Multiuser*« information for the entire system are usually carried out in the *Configuration* menu. This setting of the *Personal Profile* menu enables you to individually configure this setting for each user account. Both possibilities are described on this page.

How to (de)activate the »Multiuser« information for the entire system:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Multiuser display** entry and press **F8** to select one of the following options:

yes:	activates »Multiuser« display
no:	deactivates »Multiuser« display

5. Press **F2** to save your settings.

How to (de)activate the »Multiuser« information for a particular user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Multiuser display** entry and press **F8** (repeatedly) to select one of the following settings.

System:	The global setting made in the <i>Configuration</i> menu applies for this user account.
on:	displays <i>Multiuser</i> information
off:	does <i>not</i> display <i>Multiuser</i> information

4. Press **F2** to save your settings.

Remote gateways and remote targets

The target modules of the **RemoteAccess-IP-CPU** series let you integrate virtual machines into a digital matrix switch. You can access these virtual machines via network.

NOTE: To establish a network connection to virtual machines, you can use the **SSH, VNC** or **RDP** protocol.

Like other targets, the virtual machines connected via these target modules are integrated into the OSD and the operating concept of the matrix switch:

As usual, you connect to a virtual machine (*remote target*) via the **Select** menu in the OSD and can also use functions such as *push-get*, *multi-user access* or *CrossDisplay-Switching* with these virtual machines.

The instructions and functions provided in the chapter *Target modules* on page 76 ff. also apply for remote targets (apart from marked exceptions).

To connect a *remote target*, you need to configure the *remote gateway* and the different *remote targets*.

NOTE: The following terms are important to distinguish in connection with remote targets:

- **Remote gateway:** Each connected target module of the **RemoteAccess-IP-CPU** series is listed under *Remote Gateways* in the web application.

Remote gateways establish a connection between a KVM matrix system and virtual machines

- **Remote targets:** Configured virtual machines are called remote targets within a KVM matrix system. They are listed under *Remote targets* in the web application
- **Remote pools:** A remote pool groups all remote targets that are accessible via the remote gateways included in the pool.

Configuring remote gateways

IMPORTANT: The configuration of the remote gateway (name, comment and network interface) is only possible in the web application. For detailed information, please refer to the separate manual of the web application.

Configuring remote targets

Changing the name of a remote target

How to change the name of a remote target:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to rename and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Name** entry and press **Enter**.
6. Enter the new name and press **Enter**.

NOTE: The message »Name exists« is displayed if a target module with the same name has already been connected to the system.

The settings of such target modules are stored within the matrix system and are only visible in the *Config Panel* web application. If necessary, use the web application to delete the target module from the system.

Afterwards, this name can be assigned to another target module.

7. Press **F2** to save your settings.

Saving the resolution of a virtual machine

To make sure the video signal from the virtual machine is displayed correctly on the console modules, you need to provide information about the resolution set in the virtual machine.

How to save the resolution set in a virtual machine in the KVM matrix system:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the **Resolution** entry and press **F8** to choose between the following options:

ADVICE: Press the **Ctrl+F8** key combination to display a list of all options. Select the desired option and press **Enter**.

1024x768
1280x1024
1680x1050
1600x1200
1920x1200
2048x2160
2560x1440
2560x1600

6. Press **F2** to save your settings.

Reducing the colour depth of the image data to be transmitted

By default, a remote target transmits image information with a maximum colour depth of 24 bit to the console module.

When using a high image resolution and displaying moving images, it may happen in exceptional cases that some images are "skipped" on the console module.

In this case, reduce the colour depth of the image data to be transmitted to 18 bit. This can reduce the data volume to be transmitted.

NOTE: Depending on the content of the image, slight colour gradations may occur when reducing the colour depth.

How to reduce the colour depth of image data to be transmitted:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the **Colour depth** entry and press **F8** to choose between the following options:

- | | |
|----------------|---|
| 24 Bit: | Transmit image data with a maximum colour depth of 24 bits. |
| 18 Bit: | Reduce colour depth of image data to 18 bits. |

Holding a connection

IMPORTANT: Activating this option may pose a security risk, since reconnecting to the remote target *within the holding period* does not require a new login!

In the default setting of the matrix switch, the existing connection is disconnected when switching from a *remote target* to a *classic target* or to a remote target of another pool. The connection to the classic target is then established.

You can also hold the connection to the remote target for a specified period of time (**1 to 10** minutes). Within this time span, you can quickly continue the existing connection by reconnecting to the console module.

NOTE: When connecting to another remote target of the same pool, the existing connection cannot be maintained, since only one connection via a remote gateway is possible at any time.

How to set the hold period of a connection:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to rename and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the **Keep session** entry and press **F8** to choose between the following options:

ADVICE: Press the **Ctrl+F8** key combination to display a list of all options. Select the desired option and press **Enter**.

No:	Connection is not held
× min:	Hold connection × minute/s (1 to 10 minutes) long.

6. Press **F2** to save your settings.

Defining the basic connection parameters for a remote target

How to configure the basic connection parameters for a remote target:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Specify the IP address or virtual machine name in the **Server** line.

6. Use the **Protocol** entry and press **F8** to choose between the following options:

SSH
VNC
RDP

7. Press **F2** to save your settings.

Saving login data

To automatically log on a user after connecting to the virtual machine, you can save the login data in the web application.

How to save the login data of a virtual machine:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Enter the following values:

Username	Enter the username of the user to log on.
Password	Enter the password of the user to log on.

NOTE: Depending on the configuration of the virtual machine, it is sometimes necessary to enter both username *and* password; sometimes you only need to enter the password!

6. Press **F2** to save your settings.

Defining the RDP connection parameters for a remote target

How to configure the RDP connection parameters for a remote target:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **RDP** line and press **Enter**.
6. Specify in the **Port** through which the connection to the Terminal Server is established.
7. Specify the IP address or virtual machine name in the **Server** line.
8. Use the **RemoteFX** entry and press **F8** to choose between the following options:

off:	By default, RemoteFX optimisation is disabled. Only enable RemoteFX Optimisation if the RDP server supports it!
image:	RemoteFX optimisation for static images (Image) of a common desktop environment
video:	RemoteFX optimisation for moving images (Video).

9. Press **F2** to save your settings.

Defining the VNC connection parameters for a remote target

How to configure the VNC connection parameters for a remote target:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **VNC** line and press **Enter**.

6. Specify in the **Port** through which the connection to the Terminal Server is established.
7. Select the **Quality** line and press the **F8** key to select the quality level between **0** (low) and **9** (high).
8. Select the **Compression** line and press the **F8** key to select the compression level between **0** (fast) and **9** (best).
9. Use the **Local cursor** entry and press **F8** to choose between the following options:

off:	Only the cursor of the virtual machine is displayed.
on:	The local cursor (circle) of the <i>RemoteAccess-CPU</i> is displayed in addition to the cursor of the virtual machine.

10. Press **F2** to save your settings.

Defining the streaming connection parameters for a remote target

How to configure the streaming connection parameters for a remote target:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 11 ff.) to limit the selection of list entries.

5. Select the **Streaming** line and press **Enter**.
6. In the **Audio delay** line, enter the delay in the range from -2500 to 2500 ms.
7. In the **RTSP transport** line, select the *TCP* or *UDP* protocol.
8. Press **F2** to save your settings.

Adjusting the mouse speed

If *CrossDisplay-Switching* is enabled, the mouse speed is not controlled by the operating system of the target computer, but by the matrix switch.

If the cursor on the monitor of the target computer moves too fast or too slow, you can adjust the speed in the matrix switch.

You can adjust the mouse speed for the entire system (see *Adjusting the mouse speed* on page 174) or for one target module only.

How to change the mouse speed of a specific target module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the remote target you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the **Mouse speed** entry and press **F8** to choose between the following options:

System:	Apply the system mouse speed setting for the remote target
[value]:	Use individual mouse speed (level 1 to 10).

6. Press **F2** to save your settings.

User modules

The target computers connected to the KVM matrix system are operated at the user modules of the system.

Operating modes of user modules

Depending on the intended use of the user module, the module's operating mode can be selected from the following three options:

Standard operating mode

NOTE: This operating mode is preset in the default.

The *Standard* operating mode only permits access to the matrix system after the user has entered their username and password.

The user rights can be individually adjusted in the settings of the user accounts.

Open Access operating mode

In this mode, the access to the matrix system is not password-protected.

For this user module, you can configure the same access rights as for a user account.

IMPORTANT: The configured access rights apply for all users at this user module.

Video operating mode

A video console (only possible when combined with the optional *Push/Get function*) is especially suited when used with a projector since mouse and keyboard do not have to be connected.

If the video console is provided with mouse and keyboard, inputs can only be made in the on-screen display.

It is possible to configure the same access rights for this user module as for a user account.

IMPORTANT: The configured access rights apply for all users at this user module.

NOTE: A video console is *not* displayed. The accessing video console is therefore not highlighted to other accessing users. A user without *Multiuser* rights can access the user module simultaneously to the video console.

Selecting the user module's operating mode

How to select the user module's operating mode:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the **Console type** entry and press **F8** to select an access type:

Standard:	Standard operating mode
Open Access:	Open Access operating mode
Video:	Video operating mode

NOTE: By selecting the *Open Access* or *Video* options, you can activate further submenus to configure the access rights.
The settings are explained in the chapter *Administrating user accounts* on page 59 ff.

5. Press **F2** to save your settings.

Basic configuration of the user modules

Renaming a user module

How to rename a user module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module you want to rename and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Name** entry and press **Enter**.
6. Enter the new name and press **Enter**.
7. Press **F2** to save your settings.

(De)activating the user module

If you want to deny a user module the access to the matrix system, the user module can be deactivated.

NOTE: After the user module has been deactivated, the monitor displays the message »*This console has been disabled*«. It is therefore not possible to call the on-screen display or the login box.

If a user is currently accessing this user module, access is *immediately* withdrawn.

How to (de)activate the user module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the user module you want to (de)activate and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

4. Select the **Enable** entry and press **F8** to select one of the following options:

yes:	activate user module
no:	deactivate user module

5. Press **F2** to save your settings.

Enabling/disabling the keyboard support for user modules

By default, user modules start without a keyboard. After the startup, the console monitor shows the OSD of the matrix switch. Operating the OSD, however, requires a keyboard.

As an alternative, the user module can interrupt startup by showing a message regarding the missing keyboard. Once you connect a keyboard to the user module, the startup process continues.

How to enable/disable the startup of a user module without a keyboard:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.

3. Select the user module you want to (de)activate and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

4. Select the **Keyboard support** entry and press **F8** to select one of the following options:

yes: User module can be started only when a keyboard is connected.
no: User module can be started without a keyboard (default).

5. Press **F2** to save your settings.

Copying the user module config settings

If a user module of the matrix system is replaced by another device, the config settings of the device can be copied to the new device.

The new device can be operated immediately.

IMPORTANT: The user module whose settings are to be copied is deleted from the system.

How to copy the user module config settings:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

4. Select the active user module to which you want to copy the config settings of an inactive or disconnected user module. Press **F7**.
5. Select the user module whose settings you want to copy and press **Enter**.

NOTE: This menu only list user modules that are switched off or disconnected from the system.

6. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.
7. Press **F2** to save your settings.

Deleting a user module from the matrix system

If the matrix system is not able to detect a target module that already has been connected to the system, the device is considered inactive.

Therefore, you have to manually delete the list entry of the user module you want to permanently remove from the system.

NOTE: Only inactive user modules can be deleted by the administrator and all users with the *Superuser* right.

How to delete an inactive or disconnected user module from the system:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module you want to delete and press **F4**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Settings for special hardware

Adjusting the scancode set of a PS/2 keyboard

If a key is pressed on the PS/2 keyboard, the keyboard processor sends a data packet that is called scan code. The two common scan code sets (sets 2 and 3) contain different scan codes.

The KVM switch interprets all inputs of the PS/2 keyboard with scan code set 2.

If the pipe (“|”) cannot be entered or if the arrow keys of the keyboard do not work as expected, it is recommended to switch to scan code set 3.

How to select the scancode set of the PS/2 keyboard:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.

4. Select the user module whose settings you want to change and press F5.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Scancode** entry and press F8 to select the scancode sets **2** or **3**.
6. Press F2 to save your settings.
7. Restart the user module to apply your changes.

Activating the support for special PS/2 keyboards

How to activate the support for a special PS/2 keyboard:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press F11 to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

4. Select the **Enh. keyboard** entry and press F8 to select the keyboard type:

default:	standard keyboard
PixelPower Clarity (blue):	special <i>PixelPower Clarity (blue)</i> keyboard
PixelPower Rapid Action:	special <i>PixelPower Rapid Action</i> keyboard
SKIDATA1:	special <i>SKIDATA1</i> keyboard

5. Press F2 to save your settings.

Support of any USB device

In the **Generic-USB** mode, the data from the USB devices connected to the top **Keyb./Mouse** interface is transmitted to the active target module.

NOTE: When the **Generic-USB** mode is enabled, it is *not possible* to operate the OSD with a keyboard connected to the top **Keyb./Mouse** interface.

In the **Generic-USB** mode, you can connect USB hubs or USB composite devices to the top **Keyb./Mouse** interface of the user module.

USB composite devices are USB devices that are connected to a computer via *one* USB cable, but consist of separate HID devices (e.g. keyboard/mouse or touchpad/mouse).

When connecting a USB hub or a USB composite device containing multiple USB devices, only the first of the connected USB devices can be used in the **Generic USB** mode. The OSD informs you if other USB devices of the composite device or the hub are detected.

NOTE: In the *Multi User* mode, the generic USB device is available at the first active user module. Once this user module logs off and another user module logs in, the generic USB device of the other user module is available.

How to enable/disable the generic USB mode of the user module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

4. Select the **Generic USB** entry and press **F8** to select the keyboard type:

off:	You can connect either a USB keyboard or a USB mouse to the top Keyb./Mouse interface of the user module.
on:	The data from any USB device connected to the top Keyb./Mouse interface is transmitted to the active target module.

IMPORTANT: To use the generic USB device, enable the **Generic USB**-mode of the target modules you want to access (see page 84).

5. Press **F2** to save your settings.

Reinitialising USB input devices

After connecting a USB keyboard or mouse to the KVM extender, the input devices are initialised and can be used immediately.

Some USB input devices require a reinitialisation of the USB connection. Enable the automatic reinitialisation of USB devices if a USB keyboard or mouse does not respond to your inputs during operation.

How to enable/disable the reinitialisation of USB devices:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

4. Select the **USB Auto Refresh** entry and press **F8** to select the keyboard type:

off:	The connected USB input devices do not need to be reinitialised.
all:	All USB devices are regularly reinitialised.
only faulty:	The status of USB devices is monitored. If the communication with a USB devices is interrupted, the device is reinitialised (<i>recommended setting</i>).

5. Press **F2** to save your settings.

Enhanced functions

Setting the auto user logout

The user module can be configured so that it auto-disconnects the access to the target module after a user has been inactive for a certain amount of time. After the configured period of time, the user is logged out from the matrix system.

How to set the auto user logout:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module whose settings you want to change and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Auto logout (min)** entry and press **Enter**.

- Enter a number between **1** and **99** minutes to set the auto logout and press **Enter**.

NOTE: The value »0« deactivates the automatic user logout.

- Press **F2** to save your settings.

Auto-disconnecting the access to a target module

The user module can be configured so that the active access to a target module is auto-disconnected after the user has been inactive for a certain amount of time.

If the on-screen display is opened at the moment of disconnection, it remains on the screen even after it has been auto-disconnected.

In case the on-screen display is closed at the moment of disconnection, the message displayed on the right appears on the screen of the user console.

CON-Admin Not connected

How to auto-disconnect the access to a target module:

- Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
- Press **F11** to call the *Configuration* menu.
- Select the **Console** entry and press **Enter**.
- Select the user module whose settings you want to change and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

- Select the **Auto disconnect (min)** entry and press **Enter**.
- Enter a number between **1** and **99** minutes to start the screensaver and press **Enter**.

NOTE: The value »0« deactivates the auto disconnection when a target module is accessed.

- Press **F2** to save your settings.

Viewing technical information about the user modules

The *Console status* menu provides detailed information about the user modules and displays e.g. the physical ID, the accessing user, and the firmware version.

How to call detailed information about the user modules:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F12** to call the *Information* menu.
3. Select the **Console status** entry and press **Enter**.
4. Press **F8** (repeatedly) to select the information to be displayed in the right-hand column:

ID:	displays physical device ID
Port:	displays connection port at matrix switch
User:	displays active user
Target:	displays accessing target module
Firmware:	displays firmware version of user module
Type:	displays operating type of user module
Comment:	displays a comment about the user module ADVICE: Press Enter to show the comment viewer of the user module. Press F5 to switch to the comment editor.

5. Press **Esc** to leave the menu.

Remembering the username in the login box

If the same user often works at a certain user module, their username can be saved as default in the login box.

After a user has logged out of the system, the login box remembers the username of the last active user.

How to remember the username in the login box:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module whose settings you want to change and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Remember last username** entry and press **F8** to select one of the following options:

yes:	remember last username
no:	do not remember last username

6. Press **F2** to save your settings.

Setting the hold time for the screensaver

The screensaver deactivates the screen display at the user module after the user has been inactive for a configurable amount of time.

NOTE: This setting works independently from the screensaver settings of the target computer.

How to set the hold time of the screensaver:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.

4. Select the user module whose settings are you want to change and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Screensaver (min)** entry and press **Enter**.
6. Enter a number between 1 and **99** minutes to activate the screensaver and press **Enter**.

ADVICE: The value »0« deactivates the screensaver.

7. Press **F2** to save your settings.

Enabling or disabling DDC/CI support

Most of the target and user modules supported by the *ControlCenter-IP-XS* system are ready to support monitors with **DDC/CI** functionality.

After the function has been activated, the DDC/CI information is *transparently* forwarded to the monitor in order to support as many monitors as possible. However, we *cannot* guarantee the support for all monitors.

NOTE: The paragraph *Technical data* of the manuals of the target and user modules shows which modules (after an update to the latest firmware) support DDC/CI.

You can set the **DDC/CI** support for the entire system. The system-wide setting is used by all user modules. In addition, you can define these settings for each user module individually.

How to configure the system-wide setting of the DDC/CI support:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **DDC/CI support** entry and press **F8** to select the desired option:

Disabled:	The transmission of DDC/CI signals is disabled (default).
Target > monitor:	The transmission of DDC/CI signals is carried out exclusively from the target to the monitor.
Bidirectional:	The transmission of DDC/CI signals is carried out by bidirectionally.

5. Press **F2** to save your settings.

How to configure the individual settings of the DDC/CI support of a user module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module whose settings are you want to change and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **DDC/CI support** entry and press **F8** to select the desired option:

System:	Use system-wide setting (see above).
Disabled:	The transmission of DDC/CI signals is disabled (default).
Target > monitor:	The transmission of DDC/CI signals is carried out exclusively from the target to the monitor
Bidirectional:	The transmission of DDC/CI signals is carried out by bidirectionally.

6. Press **F2** to save your settings.

Administrating EDID profiles

The EDID information (*Extended Display Identification Data*) of a monitor inform the graphics card of a connected computer about various technical features of the device.

The EDID profile of the monitor that is connected to the user module, is not available at the target module. Therefore, the target module transmits a standard profile to the computer. The EDID information of the profile are optimised for the majority of available graphics cards.

We provide additional profiles for special resolutions.

ADVICE: In some cases it is recommended to read out the EDID profile of the console monitor (see page 87) and then activate the configuration of the target module.

Importing the EDID profile of a monitor

NOTE: An EDID profile can either be imported from a bin file or directly from a monitor, which is connected to the KVM switch.

How to import the EDID profile of a connected monitor:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **EDID** entry and press **Enter**.
4. Press **F3**.
5. Select the user module to which the monitor whose EDID profile you want to import is connected to and press **Enter**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

The imported data is displayed in the *Add EDID* entry.

6. If you wish, you can rename the EDID profile.
7. Press **F2** to save the imported EDID profile.

Renaming the EDID profile of a monitor

How to rename an existing EDID profile:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **EDID** entry and press **Enter**.
4. Choose the EDID profile you want to rename and press **F5**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Rename the EDID profile.
6. Press **F2** to save your settings.

Deleting the EDID profile of a monitor

How to delete an EDID profile:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **EDID** entry and press **Enter**.
4. Choose the EDID profile you want to delete and press **F4**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Respond to the confirmation prompt by selecting **Yes** and press **Enter**.

Defining the EDID profile to be applied for a target module

In some cases it is recommended to read out the EDID profile of the console monitor and then activate the configuration of the target module.

Detailed information regarding this topic is provided on page 87.

Shared editing

The matrix system enables two users with the respective rights to edit the settings at the same time.

If two users simultaneously change the user account settings, for example, the on-screen display informs the other user about these changes:

- The upper row of the footer displays a *purple* message, which highlights the changes of the other user.
- The changed setting or the menu item in the submenu, which contains this setting, is displayed in *green*.

If you made changes in this sector, the following options are provided to process the entered data when leaving the menu (by pressing **Esc**):

Save:	In order to save the changes, select this menu entry with the Tab key or the arrow keys and press Enter .
Discard:	In order to discard the changes, select this menu entry with the Tab key or the arrow keys and press Enter .
Cancel:	In order to cancel the data storage, select this menu entry with the Tab key or the arrow keys and press Enter . Your values are displayed again.
Load:	In order to load the current values from the databank, select this menu entry with the Tab key or the arrow keys and press Enter .

System settings and functions

Renaming the matrix switch

How to rename the matrix switch:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Name** entry and press **Enter**.
5. Enter the new name and press **Enter**.
6. Press **F2** to save your settings.

Select language

The specified *system language* is assigned to all user accounts by default. If required, you can permanently assign a (different) language to each user account.

NOTE: All language settings apply to both the web application and the OSD of the device.

How to set the system language:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Language** line and press the **F8** key to select the desired language (*English, German* or *French*).
5. Press **F2** to save your settings.

How to set the language of a *specific* user account:

How to change the password of your user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User** entry and press **Enter**.
4. Select the user account you want to rename and press **F5**.
5. Select the **Personal Profile** line and press the **Enter** key.
6. Select the **Language** line and press the **F8** key to select the desired language (*English, German or French*).
7. Press **F2** to save your settings.

Freeze mode

When the cable connection between the target module and the user module is lost during operation, the console monitor no longer shows an image in the default settings of the KVM matrix system.

Enable the freeze mode if you want to display the last image received at the user module before the loss of connection. This image is displayed until the connection is reestablished.

ADVICE: To emphasize the lost connection, the image last received is either highlighted by a coloured frame and/or the note **Frozen** and the time past since the loss of connection.

You can set the freeze mode for the entire system, too. The setting for the entire system applies to all user modules. In addition, you can set the freeze mode individually for each user module.

How to configure the freeze mode for the entire system:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Freeze function** entry and press **F8** to select one of the following options:

off:	Shows no image when connection is lost (default).
on:	Shows last image when connection is lost.

5. If the *Freeze function* is enabled, select one of the options under **Freeze visualization**:

frame:	Shows a coloured frame when connection is lost.
OSD:	Shows the note Frozen and the time past since the loss of connection.
frame+OSD:	Shows a coloured frame and the note Frozen with the time past since the loss of connection.

6. Press **F2** to save your settings.

How to configure the freeze mode for individual user modules:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Freeze function** entry and press **F8** to select one of the following options:

system:	Apply setting to the entire system (see above).
off:	Shows no image when connection is lost.
on:	Shows last image when connection is lost.

6. When the *Freeze function* is explicitly enabled for this user module, enable one or both options under **Freeze visualization**:

frame:	Shows a coloured frame when connection is lost.
OSD:	Shows the note Frozen and the time past since the loss of connection.
frame + OSD:	Shows a coloured frame and the note Frozen with the time past since the loss of connection.

7. Press **F2** to save your settings.

Network settings

The network port on the back panel of the matrix switch enable you to carry out the following network functions:

- execute the matrix switches' network configuration
- authenticate against directory services (LDAP, Active Directory, RADIUS, TACACS+)
- time synchronisation via NTP server
- forward log messages to syslog servers
- execute firmware updates and backups

NOTE: The functions listed above are carried out in the *Config Panel* web application and described in the manual of the web application.

Configuring the network port

NOTE: In the defaults, the following settings are pre-selected:

- IP address of *network interface A*: **192.168.0.1**
- global network settings: settings obtained using **DHCP**

Configure the network settings in the on-screen display in order to make the matrix switch available for the entire network.

How to configure the network port settings:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Network** entry and press **Enter**.
4. Select the **Interfaces** entry and press **Enter**.

5. Enter the following data in the **Interface A** (interface *Network A*) or **Interface B** (interface *Network B*) section:

Operational mode:	Press F8 to select the operating mode of the interface Network A : <ul style="list-style-type: none">▪ Off: switches off network interface.▪ Static: uses static settings.▪ DHCP: obtains the settings from a DHCP server.
IP address:	Enter the interface IP address. <i>This setting is auto obtained in the DHCP operating mode.</i>
Netmask:	Enter the network netmask. <i>This setting is auto obtained in the DHCP operating mode.</i>
Connection type:	Press F8 to define if the network port and its communication partner are to negotiate the connection type automatically (Auto) or select one of the listed types.

6. Press **F2** to save your settings.

Configuring the global network settings

In complex networks, the global network settings ensure that the matrix switch is available from all sub networks.

How to configure the global network settings:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Network** entry and press **Enter**.
4. Select the **Interfaces** entry and press **Enter**.

5. Enter the following data in the **Main Network** paragraph:

Global preferences	Select the operating mode by pressing F8 : <ul style="list-style-type: none">▪ Static: uses static settings.▪ DHCP: auto obtains the settings described below from a DHCP server.
Hostname:	Enter the matrix switch hostname.
Domain:	Enter the domain the matrix switch is to belong to.
Gateway:	Enter the gateway IP address.
DNS Server 1:	Enter the DNS server IP address.
DNS Server 2:	Enter the IP address of another DNS server (option).

6. Press **F2** to save your settings.

Resetting the netfilter rules

In the default settings, all network computers can access the system's IP address (open system access).

With the *Config Panel* web application, you can create netfilter rules to control the access to the matrix system. After a netfilter rule has been created, the open system access is deactivated and all incoming data packets are compared to the netfilter rules.

The created netfilter rules can also be deleted with this function.

How to delete the created netfilter rules:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Reset netfilter configuration** entry and press **Enter**.
5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Defining the ports of the KVM-over-IP connection

To establish the **KVM-over-IP** connection by the end devices, the **control port** and the **communication port** must be defined.

How to configure the ports of the KVM-over-IP connection:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **KVM connection** entry and press **Enter**.
4. Enter the following data:

Control Port:	Enter the number of the port to be used.
Communication Port:	Enter the number of the port to be used.

5. Press **F2** to save your settings.

Determination of the type of video transmission

In the default setting, the target modules (**IP-CPU**) send the video streams via multicast to the user modules (**IP-CON**).

This option allows users with »Target multi access« right to connect to a computer to which *another* user is already connected.

IMPORTANT: The multicast streams are controlled by the network switches and enable efficient distribution of the streams to multiple recipients at the same time.

Please note the requirements for the *network switch* for sending the video streams via multicast. Refer to the Installation Guide for detailed information.

Alternatively, you can specify that the target modules (**IP-CPU**) send the video streams via *unicast* to the workstation modules (**IP-CON**).

The connection of a user to a computer to which another user is already connected is *not* possible in this mode (message: **No multicast video**)!

NOTE: This option places significantly *less* demands on the network switch.

You can define the type of video transmission system-wide. The system-wide setting is applied by default by all target modules. In addition, you can specify the type of video transmission individually for each target module.

How to configure the system-wide multicast or unicast video transmission setting:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **System** entry and press **Enter**.

4. Select the **Multicast video** entry and press **F8** to select one of the following options:

on:	By default, the target modules (IP-CPU) send the video stream via <i>multicast</i> to the user modules (IP-CON). This option (<i>standard</i>) allows users with »Target multi access« right to connect to a computer to which <i>another</i> user is already connected.
off:	The target modules (IP-CPU) send the video stream via <i>unicast</i> to the user modules (IP-CON) by default. The connection of a user to a computer to which another user is <i>already</i> connected is <i>not</i> possible in this mode (message: No multicast video)!

5. Press **F2** to save your settings.

IMPORTANT: The selected setting is only applied when a new connection is established. Existing connections are retained unchanged.

How to configure the individual multicast or unicast video transmission settings of a target module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the target module you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **Multicast video** entry and press **F8** to select one of the following options: Press **F2** to save your settings.

system:	Apply system-wide setting (see above).
on:	This target module (IP-CPU) sends the video stream via multi-cast to other user modules (IP-CON). This option allows users with »Target multi access« right to connect to this computer, even if <i>another</i> user is already connected.
off:	This target module (IP-CPU) sends the video stream via uni-cast to other user modules (IP-CON). It is not possible to connect a user to this computer if <i>another</i> user is already connected (message: No multicast video).

IMPORTANT: The selected setting is only applied when a new connection is established. Existing connections are retained unchanged.

Enhanced functions

Automatically restore sessions from user modules

Network interruptions lead to the termination of active sessions to the user modules in the affected network segment.

The **Restore console session timeout** function can be used to specify a timeout period for automatically restoring sessions to such user modules as soon as a stable network connection is available again.

How to determine the status of the network interfaces:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Network** entry and press **Enter**.
4. Select the **System** entry and press **Enter**.
5. Select the entry **Restore console session timeout** and edit the time within the range of 1 to 60 seconds.

NOTE: Enter the value **0** to disable this function.

6. Press the **F2** key to save the changes made.

Reading out the status of the network interface

The current status of the network interface can always be read out via the on-screen display.

How to detect the status of the network interfaces:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Network** entry and press **Enter**.
4. Select the **Link Status** entry and press **Enter**.

5. The **Interface A** (*Network A* interface) paragraph provides you with the following data:

Link detected:	connection to network established (yes) or interrupted (no).
Auto-negotiation:	The transmission speed and the duplex mode have been configured automatically (yes) or manually by the administrator (no).
Speed:	transmission speed
Duplex	duplex mode (full or half)

NOTE: Press **Enter** to update the displayed data.

6. Press **Esc** to leave the menu.

Checking the availability of a host in the network (Ping)

The on-screen display of a user module can be used to test the availability of a particular host (e. g., a computer or a network device) in the network.

How to check the availability of a host in the network:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Network** entry and press **Enter**.
4. Select the **Ping Host** entry and press **Enter**.
5. Use the **Host** entry to enter the IP address or the host name and press **Enter**.
6. The test results are displayed in the following table:

Transmitted:	number of transmitted data packets
Received:	number of received data packets
Lost:	number of lost data packets
Min. RTT:	minimum round-trip-time
Avg. RTT:	average round-trip-time
Max. RTT:	maximum round-trip-time

NOTE: A message informs the user if the host name cannot be resolved into an IP address.

7. Press **Esc** to leave the menu.

Resetting the default settings

This setting resets the default settings of the matrix switch. All settings that have been changed by the user are reset.

How to reset the default settings of the matrix switch:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Set system defaults** entry and press **Enter**.
5. Select **Delete dynamic ports** and press **F8** to enable/disable the option to delete the Dynamic Port configuration.
6. Select **Delete network config** and press **F8** to enable/disable the option to delete the network interface configuration.
7. Press **Enter** to reset the default settings.

Retrieving information about the system

Hotkey settings

The active hotkey, the valid select keys and the tradeswitch keys are displayed in the *Hotkey information* menu.

How to display the hotkey settings:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F12** to call the *Information* menu.
3. Select the **Hotkey information** entry and press **Enter**.
The desired information is displayed.
4. Press **Esc** to leave the menu.

Displaying firmware information of the matrix system

The *Firmware information* menu displays the firmware of the matrix switch, the user module, and the accessing target module.

How to call the Firmware information:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F12** to call the *Information* menu.

3. Select the **Firmware information** entry and press **Enter**.

The desired information is displayed.

4. Press **Esc** to leave the menu.

Displaying hardware information of the matrix switch

The hardware information of the matrix switch can be displayed in the *Hardware information* menu.

This menu lists e.g., the firmware version, the device's serial number, and the MAC addresses of the network ports.

How to display the hardware information:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F12** to call the *Information* menu.
3. Select the **Hardware information** entry and press **Enter**.
The desired information is displayed.
4. Press **Esc** to leave the menu.

Rights administration

Login rights for the »Config Panel« web application

The *Config Panel* web application offers a graphical user interface to configure the matrix system.

The web application provides an alternative to configuring the matrix switches via the devices' on-screen display at the user consoles and can be applied independently from the user modules in the network.

IMPORTANT: For applying the web application, the user accounts or the user groups have to hold the *WebIfLogin* right.

How to change the login right for the *Config Panel* web application:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. If you want to change this right of a user account, select the **User** entry.
For changing this right for a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose login rights for the *Config Panel* web application you want to change and press **F5**.
6. Select the **Config rights** entry and press **Enter**.

7. Select the **WebIf Login** entry and press **F8** to select one of the following options:

yes:	allows access to <i>Config Panel</i> web application
no:	denies access to <i>Config Panel</i> web application

8. Press **F2** to save your settings.

Optional premium functions

The functional range of the matrix system can be expanded by purchasing additional premium functions.

Name	Function	Description
Push-Get function	The Push-Get function enables you to push the image to or get the image from any computer connected to the matrix system to the display of another user console.	page 133
IP-Control-API	Use the C++ class library supplied with this additional function to externally access the matrix system over a TCP/IP connection.	page 141
Tradeswitch function	The Tradeswitch function optimises the operation of user modules that monitor several computers over several monitors. Instead of connecting keyboard and mouse to every monitor, the Tradeswitch function provides a central keyboard/mouse for all operating tasks of the user console.	page 166

Activating a premium function

NOTE: The premium functions can be activated in the *Config Panel* web application. The necessary steps are described in the manual of the web application.

Displaying the premium functions

The *Feature information* menu lists the activated premium functions.

How to display the list of active premium functions:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F12** to call the *Information* menu.
3. Select the **Feature information** entry and press **Enter**.

The desired information is displayed.

Push-Get function (optional)

NOTE: The functions and settings described in this chapter are only available if the additional *Push-Get function* has been purchased.

The Push-Get function enables you to shift the image to or get the image from any computer connected to the KVM matrix system to the monitor of another user console.

This way, you can exchange and edit computer or display contents.

The addressed user console can be a standard console or a large screen projection, for example.

Moving the screen content (Push)

Moving the monitor content to another user module

How to move the screen contents to another user module:

1. Press the hotkey **Ctrl+Num** (default) to call the on-screen display.
2. Use the *Select* menu to choose the target module whose screen content you want to move.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

3. Press **F7** to open the **Push** menu.

The menu displays all active user modules within the KVM matrix system, which you have access to and are therefore allowed to perform the *Push-Get* function. The right-hand column additionally provides you with the names of the target modules that are accessing the user module.

4. Select the user module to which the screen content is to be moved to and press **Enter**.

Stopping the moving of the screen content

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F7** to call the **Push** menu.

The menu displays all active user modules within the KVM matrix system, which you have access to and are therefore allowed to perform the *Push-Get* function. The right-hand column additionally provides you with the names of the target modules that are accessing the user module..

3. Select the user module to be disconnected from the target module with the **arrow keys** and press **F4**.

Getting the screen content (Get)

Getting the screen content from another user module

How to get the screen content from another user module:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F8** to call the *Get* menu.
3. The menu displays all active user modules within the KVM matrix system, which you have access to and are therefore allowed to perform the *Push-Get* function. The right-hand column additionally provides you with the names of the target modules that are accessing the user module.
4. Use the **arrow keys** to select the user module whose screen content you want to access and press **Enter**.

NOTE: This function stops if another target module (see page 4) is accessing the user module.

Moving screen contents via push get keys

After having defined push get key modifier(s) and a push get key set and after having activated a push get key set in the user account, you can move the screen content of the user module between screens by using the console keyboard.

Push screen contents	<ol style="list-style-type: none"> 1. Press and hold configured modifier key(s). 2. Press P 3. Press push get key of user module. 4. Release configured modifier key(s).
Stop moving of screen contents	<ol style="list-style-type: none"> 1. Press and hold configured modifier key(s). 2. Press D 3. Press push get key of user module. 4. Release configured modifier key(s).
Get screen contents	<ol style="list-style-type: none"> 1. Press and hold configured modifier key(s). 2. Press G 3. Press push get key of user module. 4. Release configured modifier key(s).

Setting push get keys

After you adjust the push-get key modifier(s) and a push/get key set and activate the push-get key set in the user account, you can use key combinations on the console keyboard to move screen contents.

Changing push-get key modifiers and valid keys

Push-get keys let you move screen contents from or to a console by using key combinations. For this, you can create *Push-get key sets* in the matrix system.

In combination with a defined push-get key modifier a push-get key set defines the key combination to be pressed for moving screen contents.

In addition to the push-get key modifier you can also define valid keys to be used as push-get keys.

How to change push-get key modifiers or valid keys:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select **System** entry and press **Enter**.
4. Select the **Push-Get key** entry and press **Enter**.
5. Use the **arrow keys** to select *at least* one of the Push-Get key modifiers listed in the **Modifier** entry. Afterwards, press **F8**.

Ctrl:	<i>Ctrl</i> key
Alt:	<i>Alt</i> key
Alt Gr:	<i>Alt Gr</i> key
Win:	<i>Windows</i> key
Shift	<i>Shift</i> key

6. Select the **Valid keys** entry and press **F8** to select one of the following options:

Num:	<i>Only numerical keys</i> are interpreted as push-get keys when pressed in combination with the push get key modifier
Alph:	<i>Only alphabetic keys</i> are interpreted as push-get keys when pressed in combination with the push get key modifier
AlphNum:	<i>Alphabetical and numerical keys</i> are interpreted as push-get keys when pressed in combination with the push get key modifier

IMPORTANT: Both the selected valid keys and the Push-Get key modifier are *no longer* provided as key combinations to the operating system and the applications on the target computer.

7. Press **F2** to save your settings.

Administrating push get key sets

The KVM matrix system allows you to create 20 global push get key sets or ten individual push get sets for each user.

Within push get key sets you can define push get keys for selected user modules to move the screen content of a console.

NOTE: Global push get key sets are displayed in the personal profile of all users of the KVM matrix system.

Creating push get key sets

How to create push get key sets:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Push-Get key set** entry and press **Enter**.

4. Press **F3** and enter the following data in the *Add Push-Get key set* menu:

Name:	Enter the new Push-Get key set name and press Enter .
Global:	Select yes by pressing F8 if you want the Push-Get key set in the personal profile to be available for all users of the system. default: no
NOTE: This option can only be activated by users with the <i>Superuser</i> right (see page 67).	

5. Press **F2** to save your inputs and to create the Push-Get key sets.

Changing name, comment or global allocation

How to change the name, comment and/or the *Global* setting of push get key sets:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Push-Get key set** entry and press **Enter**.
4. Select the Push-Get key set whose setting you want to change.
5. Press **F5** to change the following data in the *Edit Push-Get key set* menu:

Name:	Enter the new name of the Push-Get key set and press Enter .
Global:	Press F8 for selecting yes if you want to make the Push-Get key set in the personal profile available to all users of the system. default: no

6. Press **F2** to save your settings.

Defining push get keys for user modules

NOTE: Global push get key sets can only be edited by users with activated *Superuser* rights (see page 67).
Without this right, only push get keys assigned to the user modules can be viewed.

How to define push get keys for user modules:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu
3. Select the **Push-Get key set** entry and press **Enter**.
4. Choose a Push-Get key set and press **F5**.
5. Select the **Members** entry and press **Enter**.

The *Assign Push-Get key set* dialogue opens. The left column displays the name of the target module and the right column shows the assigned Push-Get key(s).

6. Select the user module you want to assign a Push-Get key to or whose Push-Get key you want to change.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

7. Press **F5** and enter the desired Push-Get key.

NOTE: You can change the valid keys for use as Push-Get key as described in section *Changing push-get key modifiers and valid keys* on page 135.

8. If you want to create or change the Push-Get keys for other target modules, repeat steps 6 and 7.
9. Press **F2** to save your settings.

Assigning push get key sets to user accounts

By assigning a push get key set to a user account, the push get keys of the set are evaluated for entries at the console and the screen content of the console can be moved between monitors.

How to assign a push get key set to a user account or cancel an existing assignment:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Push-Get key set** entry and press **Enter**.

4. Select the desired Push-Get key set.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Press **F8** to (de)activate the assignment.

NOTE: An assigned Push-Get key set is marked with an arrow (▶).

6. Press **F2** to save your settings.

Deleting push get key sets

NOTE: Global push get key sets can only be deleted by users with activated *Superuser* rights (see page 67).

How to delete a push get key set:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F10** to call the *Personal Profile* menu.
3. Select the **Push-Get key set** entry and press **Enter**.
4. Select the Push-Get key set you want to delete and press **F4**.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Changing a user account's Push-Get right

How to change a user account's Push-Get right:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. If you want to change this right of a user account, select **User** entry. For changing the rights of a user group, select the **Usergroup** entry.
4. Press **Enter**.
5. Select the user account or the user group whose right to execute the *Push-Get* function you want to change and press **F5**.
6. Select the **Push-Get rights** entry and press **Enter**.

7. Select the user module whose user rights you want to change.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

8. Press **F8** to select one of the following options:

yes:	allows usage of <i>Push-Get</i> function
no:	denies usage of <i>Push-Get</i> function

9. Repeat steps 7 and 8 to change the *Push-Get* right for further user modules.
10. Press **F2** to save your settings.
11. Press **Esc** to leave the menu.

IP-Control-API (optional)

After you activate the additional »IP-Control-API« function, use the supplied C++ class library to access the KVM matrix system over a TCP/IP connection.

You can also use the network interfaces to send text-based commands in the form of XML files to the matrix switch.

ADVICE: The separate chapter *Controlling the matrix switch via XML* on page 142 ff. provides you with detailed information on this topic.

Supported functions via API and text-based control

You can use the API functions or text-based control to perform the following functions:

- **Logon User:** user logon at user module
- **Logout User:** user logout at user module
- **Connect CPU:** accesses target module with user module
- **Disconnect CPU:** disconnects active access
- **Get Connections:** queries connection data of »occupied« user modules
- **Get MatrixSwitches:** queries known matrix switches
- **Get CPUs:** queries known target modules
- **Get Consoles:** queries known user modules
- **Redirection:** redirects keyboard and mouse data

Controlling the matrix switch via XML

IMPORTANT: Activate the additional »IP-Control-API« function to send text-based commands.

XML enables you to control digital matrix switches using third-party devices (e.g. AMX® and Crestron®). The matrix switch uses the ethernet interface to process any XML commands received from third-party devices.

Structure of a valid XML document

Any commands are transmitted as XML documents to the G&D device. Valid XML documents start with an optional, standardized header. On the top level, they are surrounded by the **<root>** tag:

STRUCTURE OF A VALID XML DOCUMENT

```
<?xml version="1.0" encoding="utf-8"?>    <!-- optional header -->
<root>                                     <!-- start tag of document -->
</root>                                    <!-- end tag of document -->
```

Any commands you want to execute are placed between a tag that starts and ends the document (**root**). The commands are described on page 152.

Selecting devices

As of version 1.1, the XML API lets you specify devices not only by ID, but also by name.

Use the attribute **type** to select devices via ID ("**id**") or via name ("**name**"). The attribute is supported by all commands referring to devices with a name.

ADVICE: The use of the **type** attribute is optional. If you do not use this attribute, devices are identified via ID.

USING THE NAME OF A USER MODULE FOR IDENTIFICATION

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <logon>
    <IpConsole type="name">CON1</IpConsole>
    <User>JohnDoe</User>
    <Password>secret</Password>
  </logon>
</root>
```

USING THE ID OF A USER MODULE FOR IDENTIFICATION

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <logon>
    <IpConsole type="id">0x22222222</IpConsole>
    <User>JohnDoe</User>
    <Password>secret</Password>
  </logon>
</root>
```

Use of device IDs

For responses and messages, device IDs are output as hexadecimal values including the prefix **0x** (as of version 1.1 of the XML API).

IMPORTANT: In version 1.0, device IDs were often output as described above. In some responses, however, IDs were output as hexadecimal values.

In commands, device IDs can be stated as hexadecimal values including the prefix **0x**, as octal values including the prefix **0** or as decimal values.

Responses and messages of G&D devices

As of version 1.1 of the XML API, G&D devices respond with a *complete* XML document after processing an XML document.

IMPORTANT: In some cases, version 1.0 of the XML API sent a message in unstructured plain text.

Responses of G&D devices

Responses of the device are included in a **<result>** tag.

The attribute **<type>** includes the name of the executed command. When executing several commands within an XML document (see below), you can assign the responses to the different commands.

In the following example, data of a user module was requested. The available information is listed within `<item>` tags:

EXEMPLARY RESPONSE OF XML API

```
<?xml version="1.0" encoding="utf-8"?>
<root>
<result type="list">
  <IpConsole>
    <item>
      <id>0x22222222</id>
      <cl>IpConsole</cl>
      <type>IP-CON</type>
      <name>CON1</name>
      <ownerId>0x11111111</ownerId>
      <ownerCl>IpMatrix</ownerCl>
      <enable>1</enable>
      <poweredOn>true</poweredOn>
    </item>
  </IpConsole>
</result>
</root>
```

Messages of G&D devices

If the XML service is not able to process a request, the service responds with an error document:

STRUCTURE OF AN ERROR DOCUMENT

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <Error>Invalid request document</Error>
</root>
```

Depending on the type of message, responses to commands, which are not executed by the XML service itself, but are delegated to the device service of the matrix switch, are output in different XML containers.

The following containers are used for this purpose:

- Error messages are output within the container `<Error>`.
- Warnings are output within the container `<Warning>`.
- Success messages and general messages not fitting the categories given above are output within the container `<commandStatus>`.

IMPORTANT: Until version 1.0 of the XML API, all responses of delegated commands were output within the container `<commandStatus>`.

EXEMPLARY ERROR MESSAGE

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <result type="logon">
    <Error>authentication failed</Error>
  </result>
</root>
```

Combining multiple commands in an XML document

You can combine several commands within one XML document. The XML service processes the commands in the same order in which they are listed in the XML document.

An XML document as described above can look as follows:

COMBINING MULTIPLE COMMANDS IN ONE XML DOCUMENT

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <login>
    <IpConsole>0x22222222</IpConsole>
    <User>JohnDoe</User>
    <Password>secret</Password>
  </login>
  <connect>
    <IpConsole>0x22222222</IpConsole>
    <IpCpu>0x33333333</IpCpu>
  </connect>
  <showmessage>
    <Type>INFO</Type>
    <Text> Message</Text>
    <IpConsole>0x22222222</IpConsole>
  </showmessage>
</root>
```

The corresponding response combines individual commands in one document.

Push notifications for events occurred

For TCP connection, the service for text-based control sends *push notifications* to inform users about events occurred.

Such events are reported via **<pushNotification>** container. The type of notification is listed as **type** attribute of this tag.

EXAMPLE: Connecting and disconnecting of devices triggers push notifications for every channel. It is not important how the connection was established or disconnected (e.g. via OSD or XML).

PUSH NOTIFICATION WHEN ESTABLISHING A CONNECTION

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <pushNotification type="connection_event">
    <consoleId>0x22222222</consoleId>
    <consoleCl>IpConsole</consoleCl>
    <consoleName>CON1</consoleName>
    <targetId>0x33333333</targetId>
    <targetCl>IpCpu</targetCl>
    <targetName>CPU1</consoleName>
    <userName>JohnDoe</userName>
  </pushNotification>
</root>
```

PUSH NOTIFICATION WHEN DISCONNECTING A CONNECTION

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <pushNotification type="disconnection_event">
    ><consoleId>0x22222222</consoleId>
    <consoleCl>IpConsole</consoleCl>
    <consoleName>CON1</consoleName>
    <targetId>0x33333333</targetId>
    <targetCl>IpCpu</targetCl>
    <targetName>CPU1</consoleName>
  </pushNotification>
</root>
```

ADVICE: When evaluating push notifications, you can reproduce any switching processes of the device, for example.

By default, the following notifications are active:

- **connection_event:** Connection between user module and target module established
- **disconnection_event:** Connection between user module and target module disconnected
- **user_push_event:** Push event triggered by user
- **channel_select_event:** Kanalwechsel

In addition, you can subscribe to the following notifications:

- **device_online_event:** Status change of a module to *online*
- **device_offline_event:** Status change of a module to *offline*
- **peripheral_power_on_event:** The computer connected to the target module is active.
- **peripheral_power_off_event:** The computer connected to the target module is inactive.
- **redirect_event:** Redirection of keyboard and mouse data executed

Subscribing to push notifications

NOTE: The subscription applies only for the connection on which the *subscribe* command is sent.

Use the **<subscribe>** container, to subscribe to push notifications for one or more types of notifications.

Within the **<Notification>** tag, you can specify the type of notification (see above) by using the **type** attribute.

To activate notifications for the event that the device status changes, you can use the following XML document:

ACTIVATING NOTIFICATIONS FOR CHANGES OF THE DEVICE STATUS

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <subscribe>
    <Notification type="device_online_event"/>
    <Notification type="device_offline_event"/>
  </subscribe>
</root>
```

Unsubscribing from push notifications

NOTE: The unsubscription applies only for the connection on which the *subscribe* command is sent.

Use the **<unsubscribe>** container, to unsubscribe to push notifications for one or more types of notifications.

Within the **<Notification>** tag, you can specify the type of notification (see above) by using the **type** attribute.

To activate notifications for events regarding connections, you can use the following XML document:

DEACTIVATING NOTIFICATIONS FOR EVENTS REGARDING CONNECTIONS

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <unsubscribe>
    <Notification type="connection_event"/>
    <Notification type="disconnection_event"/>
  </unsubscribe>
</root>
```

Configuration and encryption

As of version 1.1, the XML API supports two ways of encryption:

- **Transport encryption:** If this type of encryption is enabled, the entire outgoing data stream is encrypted by the XML service.
Incoming XML commands are only accepted and executed when encrypted with the identical key and initialisation vector.
- **Password encryption:** This type of encryption encrypts only the passwords of user accounts included in XML responses of G&D devices. For this, a subset of XML encryption (see page 150) is used.
Within XML commands, passwords can either be encrypted (recommended) or in plain text when sent to the device.

Both types of encoding use the **CBC-3DES** algorithm. The required key and the initialization vector (only required with transport encryption) are configured in the web application *Config Panel*.

Configuring accesses of devices for XML control

Use the web application *Config Panel* to define »remote control« accesses and their settings.

IMPORTANT: These accesses are required to control the device via XML.

How to create a new access or edit an existing access:

1. In the directory tree, click **KVM matrix systems > [Name] > Matrix switches**.
2. Right-click the device you want to configure and click **Configuration** on the context menu.
3. Click the **Network> Remote Control** tabs.
4. To add a new remote control access, click **Add**.
To edit an existing access, click **Edit**.

5. Enter or edit the following data:

Access:	Select the protocol (TCP) or (UPD) to process XML communication.
Port:	Enter the port to process XML communication. Ports 80, 443 and 27996 are used for other services. They are <i>not</i> available for XML control.
Status:	Select if access is Enabled or Disabled .
Encryption:	The following types of encryption are supported: <ul style="list-style-type: none"> ▪ Unencrypted: Select the option None to transmit data without encryption (default). ▪ Password encryption: Select the option Password: CBC-3DES to transmit login passwords with encryption. ▪ Transport encryption: Select the option CBC-3DES to encrypt the entire connection.
Encryption key:	After enabling an encryption type, enter the key (192 bit) in the form of 48 hex digits.
Initialization vector:	Enabling the encryption type CBC-3DES additionally requires an initialization vector. Enter the initialization vector (64 bit) in the form of 16 hex digits.

6. Click **OK** to save your settings and to close the window.

Instructions for encrypting passwords

If the transcription type *transport encryption* is enabled, the entire outgoing data stream is encrypted. When using *Password encryption*, however, only the passwords of user accounts are encrypted in XML requests.

NOTE: In XML requests, passwords can either be encrypted (recommended) or in plain text when sent to the device.


A subset of the W3C standard **XML encryption** is used to encrypt passwords. An **<EncryptedData>** container replaces the password with the XML namespace "**http://www.w3.org/2001/04/xmlenc#**". This container includes the **<CipherData>** container, which includes the **<CipherValue>** container:

PASSWORD AS EMBEDDED ENCRYPTED TEXT

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <logon>
    <IpConsole>0x22222222</IpConsole>
    <User>JohnDoe</User>
    <Password>
      <EncryptedData xmlns="http://www.w3.org/2001/04/xmlenc#">
        <CipherData>
          <CipherValue>B2Wmn52teOPvY31wq0L4nw==</CipherValue>
        </CipherData>
      </EncryptedData>
    </Password>
  </logon>
</root>
```

The encrypted data block (**CipherValue**) consists of a combination of initialization vector and encrypted text with BASE64-coded padding.

The data block is formed as follows:

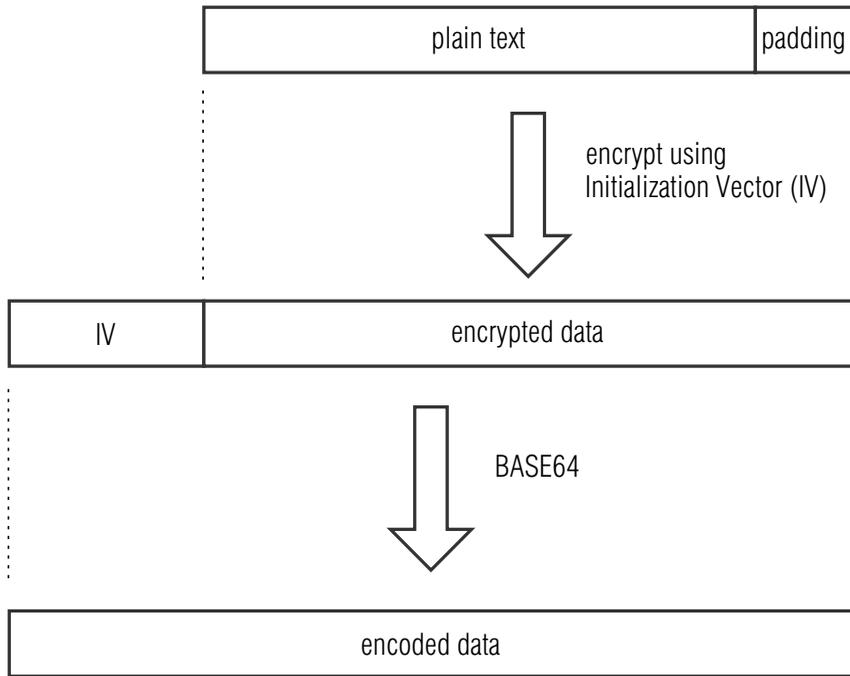

Padding is required to make the data block to be encrypted multiple times larger than block size (8 bytes). The XML API expects that the last byte of the padding states the number of added padding bytes. The padding bytes are to be randomly selected.

The initialization vector is required for stream ciphers (here: **CBC**). It is randomly selected in the encryption mode **Password encryption**. Its size corresponds to the block size of the selected encryption (8 bytes).

Commands

User logon and user logoff

User can log in with the command **<logon>**.
The command **<logoff>** logs users off.

A successful login requires the following parameters:

<IpConsole>	IP user module of user logon
<User>	Name of user who wants to log in
<Password>	Password of user who wants to log in
<DropMinorErrors>	The message that an user has already logged on or logged off is suppressed.
<AllowTemporaryLogon/>	Allow temporary user login to OpenAccess or video console

Transmitting username and password is not required when logging in.

USER LOGIN

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <logon>
    <IpConsole>0x22222222</IpConsole>
    <User>JohnDoe</User>
    <Password>secret</Password>
  </logon>
</root>
```

NOTE: Information about *optional* password encryption is given on page 150.

USER LOGOFF

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <logoff>
    <IpConsole>0x22222222</IpConsole>
  </logoff>
</root>
```

Establishing a connection to a target module or disconnecting a connection

The command **<connect>** allows a user module to access a target module.

The ID or name of the target module to be accessed and the ID or name of the user module are used as parameters:

<IPConsole>	IP user module
<IpCpu>	IP target module
<VtCpu>	Target module of the RemoteAccess series
<CloseDialogs>	Close OSD after establishing a connection (connect)
<OpenSelectDialog>	Close OSD after disconnection (disconnect)
<DropMinorErrors>	The message that a target module is already connected or disconnected is suppressed.

ESTABLISHING A CONNECTION

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <connect>
    <IpConsole>0x22222222</IpConsole>
    <IpCpu>0x33333333</IpCpu>
    <CloseDialogs/>
  </connect>
</root>
```

DISCONNECTING A CONNECTION

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <disconnect>
    <IpConsole>0x22222222</IpConsole>
    <OpenSelectDialog/>
  </disconnect>
</root>
```

Transferring the configuration settings of a module

If a module within the KVM matrix system is replaced by another module, you can use the command **<movedevice>** to transfer the configuration settings of the previous module to the new module.

Once the configuration settings have been transferred, the new module is immediately ready for use.

The ID of the old and the new module and the access data of the user account are transferred as parameters.

IMPORTANT: The transmission of the configuration settings is only possible if both modules belong to the same device class (e.g. **DVIconsole**).

<IpConsole>	IP user module
<IpCpu>	IP target module
<User>	Name of the user account (has to be assigned with the required rights) to execute the command
<Password>	User password

HOW TO TRANSFER THE CONFIGURATION SETTINGS OF A USER MODULE

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <movedevice>
    <IpConsole>0x22222222</IpConsole>
    <IpConsole>0x33333333</IpConsole>
    <User>JohnDoe</User>
    <Password>secret</Password>
  </movedevice>
</root>
```

Defining the master workplace of a tradeswitch workplace

Within a tradeswitch workplace, you have to define a user module to which you want to connect a keyboard and a mouse. This master workplace also provides information displays containing information about the current connection.

Use the command **<setworkplacemasterconsole>** to determine the master workplace of a specific tradeswitch workplace.

The ID of the tradeswitch workplace and the master user module as well as the access data of the user account are transferred as parameters.

IMPORTANT: To delete the assignment of the master workstation, execute the command without the **<IpConsole>** parameter.

<Workplace>	Tradeswitch workplace
<IpConsole>	IP user module
<User>	Name of the user account (has to be assigned with the required rights) to execute the command
<Password>	User password

HOW TO DEFINE THE MASTER WORKPLACE

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <setworkplacemasterconsole>
    <Workplace>101</Workplace>
    <IpConsole>0x22222222</IpConsole>
    <User>JohnDoe</User>
    <Password>secret</Password>
  </setworkplacemasterconsole>
</root>
```

HOW TO DELETE THE ASSIGNMENT OF THE MASTER WORKPLACE

How to delete the assignment of the master workplace

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <setworkplacemasterconsole>
    <Workplace>101</Workplace>
    <User>JohnDoe</User>
    <Password>secret</Password>
  </setworkplacemasterconsole>
</root>
```

Showing messages

Use the command **<showmessage>** to send a message to a user module. Users at the user module can see the message on their OSD.

NOTE: As of version 1.1 of the XML API, you can add an optional timeout (time in seconds). After the time elapses, the message closes automatically.

The following parameters are required to send commands:

<Type>	Type of message (INFO , WARNING or ERROR)
<Text>	Text of message to be shown
<Timeout>	Time in seconds after which the message is closed automatically
<IpConsole>	IP user module

SHOWING A MESSAGE (WITH TIMEOUT)

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <showmessage>
    <Type>INFO</Type>
    <Text>Message</Text>
    <Timeout>5</Timeout>
    <IpConsole>0x22222222</IpConsole>
  </showmessage>
</root>
```

Opening or closing the OSD

Use the commands **<openmenu>** and **<closemenu>** to open or close the OSD (*Select menu*) on a user module.

The following parameters are required to send commands:

<openmenu> Open OSD on a user module

<closemenu> Close OSD on a user module

OPEN OSD

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <openmenu>
    <IpConsole>0x22222222</IpConsole>
  </openmenu>
</root>
```

CLOSE OSD

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <closemenu>
    <IpConsole>0x22222222</IpConsole>
  </closemenu>
</root>
```

Redirecting keyboard and mouse data

NOTE: Redirecting keyboard and mouse data to another user module or target module requires the premium **Tradeswitching** function.

With the optional Tradeswitching function, you can use the command **<redirect>** to redirect a device's in- and outputs to another device.

IMPORTANT: As of version 1.1 of the XML API, the command **<redirect>** supports a new syntax. The earlier syntax is supported as well.

In the new syntax, the target of the redirection is stated by a device-specific marker. The same applies to the source.

<IpConsole>	IP user module (tag can be used for source and target)
<IpCpu>	IP target module (tag can be used for target only)

REDIRECTING KEYBOARD AND MOUSE DATA

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <redirect>
    <IpConsole>0x22222222</IpConsole>
    <IpCpu>0x33333333</IpCpu>
  </redirect>
</root>
```

Executing scriptlets

You can use the command **<executeScriptlet>** to execute a scriptlet stored in the matrix switch.

The following parameters are required to send the command:

<IpConsole>	IP user module that is used to trigger the scriptlet
<Name>	Name of script

NOTE: The scriptlet can be executed only if a user with the required rights is logged on at the user module .

EXECUTING SCRIPTLETS

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <executeScriptlet>
    <IpConsole>0x22222222</IpConsole>
    <Name>MeinScriptlet</Name>
  </executeScriptlet>
</root>
```

Listing information about devices and connections

Use the command **<list>** to list information about devices and connections.

The parameters of the command define the type of information you want to list:

<IpMatrixswitch>	Data about IP matrix switch
<IpCpu>	Data about IP target modules
<IpConsole>	Data about IP user modules
<VtCpu>	Data about remote targets
<Workplace>	Data about configured Tradeswitch workplaces
<Team>	Data about channel groups
<MatrixConnectionList>	Data about connections between the connected devices

- **List of information about matrix switches**

REQUESTING DATA FROM MATRIX SWITCHES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <IpMatrixSwitch/>
  </list>
</root>
```

LIST OF INFORMATION ABOUT A MATRIX SWITCH

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <result type="list">
    <IpMatrixSwitch>
      <item>
        <id>0x11111111</id>           <!-- ID -->
        <cl>IpMatrix</cl>           <!-- Device class -->
        <type>ControlCenter-IP</type> <!-- Variant -->
        <name>Matrix1</name>        <!-- Name -->
        <poweredOn>true</poweredOn> <!-- Status of power supply -->
        <pushGet>yes</pushGet>      <!-- Push/Get function enabled? -->
        <tradeSwitching>yes</tradeSwitching> <!-- TradeSwitch function enabled? -->
        <ipSwitching>yes</ipSwitching> <!-- IP-Control-API enabled? -->
        <monitoring>yes</monitoring> <!-- Monitoring enabled? -->
        <matrixGuard>yes</matrixGuard> <!-- MatrixGuard enabled? -->
      </item>
    </IpMatrixSwitch>
  </result>
</root>
```

- **List of information about a user module**

REQUESTING DATA FROM USER MODULES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <IpConsole/>
  </list>
</root>
```

LIST OF INFORMATION ABOUT USER MODULES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <result type="list">
    <IpConsole>
      <item>
        <id>0x22222222</id>           <!-- ID -->
        <cl>IpConsole</cl>         <!-- Device class -->
        <type>IP-CON</type>        <!-- Variant -->
        <name>CON1</name>          <!-- Name -->
        <ownerId>0x11111111</ownerId> <!-- ID of connected device -->
        <ownerCl>IpMatrix</ownerCl> <!-- Device class of connected device -->
        <enable>1</enable>         <!-- User module enabled? -->
        <poweredOn>false</poweredOn> <!-- Status of power supply -->
      </item>
    </IpConsole>
  </result>
</root>
```

- **List of information about a target module**

REQUESTING DATA FROM TARGET MODULES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <IpCpu/>
  </list>
</root>
```

LIST OF INFORMATION ABOUT TARGET MODULES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <result type="list">
    <IpCpu>
      <item>
        <id>0x33333333</id>           <!-- ID -->
        <cl>IpCpu</cl>             <!-- Device class -->
        <type>DVI-CPU (2.0)</type>  <!-- Variante-->
        <name>CPU1</name>          <!-- Name -->
        <poweredOn>false</poweredOn> <!-- Status of power supply -->
      </item>
    </IpCpu>
  </result>
</root>
```

- **List of connections between connected devices**

ADVICE: You can restrict the list of connections to a specific user or target module. To do this, use the **<IpConsole>** or **<IpCpu>** parameter.

REQUESTING CONNECTIONS BETWEEN CONNECTED DEVICES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <MatrixConnectionList/>
  </list>
</root>
```

LIST OF CONNECTIONS BETWEEN CONNECTED DEVICES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <result type="list">
    <MatrixConnectionList>
      <item>
        <cpuId>0x33333333</cpuId>           <!-- CPU ID -->
        <cpuCl>IpCpu</cpuCl>               <!-- CPU device class -->
        <cpuName>CPU1</cpuName>            <!-- CPU name -->
        <cpuPoweredOn>false</cpuPoweredOn> <!-- CPU power supply -->
        <signalType>normal</signalType>    <!-- Signal: normal|viewonly -->
        <consoleId>0x22222222</consoleId> <!-- CON ID -->
        <consoleCl>IpConsole</consoleCl>   <!-- CON device class -->
        <consoleName>CON1</consoleName>    <!-- CON name -->
        <connectionOwnerId>0x11111111</connectionOwnerId> <!-- Matrix ID -->
        <connectionOwnerCl>IpMatrix</connectionOwnerCl> <!-- Matrix class -->
        <consoleConfigEnable>1</consoleConfigEnable> <!-- CON enabled? -->
        <consolePoweredOn>true</consolePoweredOn> <!-- CON power supply -->
        <userName>JohnDoe</userName>      <!-- Username -->
      </item>
    </MatrixConnectionList>
  </result>
</root>
```

▪ **List of configured Tradeswitch workplaces**

NOTE: The output of the list of workplaces has been changed.
 The output lists the members of a workplace within a **<members>** container.

REQUESTING DATA OF CONFIGURED TRADESWITCH WORKPLACES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <Workplace/>
  </list>
</root>
```

LIST OF CONFIGURED TRADESWITCH WORKPLACES

```

<?xml version="1.0" encoding="utf-8"?>
<root>
  <result type="list">
    <Workplace>
      <item>
        <id>0x88888888</id>                                <!-- Workplace ID -->
        <name>Workplace1</name>                            <!-- Workplace name -->
        <catcenterId>0x11111111</catcenterId>             <!-- Matrix ID -->
        <catcenterCl>IpMatrix</catcenterCl>              <!-- Matrix class -->
        <masterconsoleId>0x22222222</masterconsoleId>   <!-- ID of master console -->
        <masterconsoleCl>IpConsole</masterconsoleCl>    <!-- Class of master console -->
        <members>
          <item>
            <id>0x22222222</id>                            <!-- Member ID (CON or CPU) -->
            <cl>IpConsole</cl>                             <!-- Member class -->
            <keys>1</keys>                                  <!-- Member key -->
          </item>
          <item>
            <id>0x22222223</id>
            <cl>IpConsole</cl>
            <keys>2</keys>
          </item>
          <item>
            <id>0x22222224</id>
            <cl>IpConsole</cl>
            <keys>3</keys>
          </item>
          <item>
            <id>0x22222225</id>
            <cl>IpConsole</cl>
            <keys>4</keys>
          </item>
        </members>
      </item>
    </Workplace>
  </result>
</root>

```

▪ **Requesting a list of configured channel groups**

The list of configured port groups supports four different variants:

REQUESTING LIST OF ALL CHANNEL GROUPS

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <Team/>
  </list>
</root>
```

REQUESTING LIST OF ALL CHANNEL GROUPS WITH A USER MODULE AS MAIN CHANNEL

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <Team><IpConsole/></Team>
  </list>
</root>
```

REQUESTING LIST OF ALL CHANNEL GROUPS WITH A PARTICULAR USER MODULE AS MAIN CHANNEL

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <Team><IpConsole>0x22222222</IpConsole></Team>
  </list>
</root>
```

REQUESTING LIST OF ALL CHANNEL GROUPS WITH A PARTICULAR TARGET MODULE AS MAIN CHANNEL

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <list>
    <Team><IpCpu>0x33333333</IpCpu></Team>
  </list>
</root>
```

This is an exemplary response of the XML service:

LIST OF CONFIGURED CHANNEL GROUPS

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <result type="list">
    <Team>
      <item>
        <leaderId>0x33333333</leaderId>      <!-- Leading device of group -->
        <leaderCl>IpCpu</leaderCl>         <!-- Class of leading device -->
        <members>
          <item>
            <id>0x33333334</id>           <!-- ID of group member -->
            <cl>IpCpu</cl>                <!-- Class of group member -->
            <slotType>KVM</slotType>      <!-- Assigned channel type (KVM|USB) -->
            <slot>0</slot>                 <!-- Number of channel -->
          </item>
        </members>
      </item>
    </Team>
  </result>
</root>
```

NOTE: If several **Members** are listed with the same **slot** and **slotType**, they are part of a device pool.

Requesting monitoring values

The XML tag **<monitor>** is used to request monitoring values. As parameter, the **<monitor>** tag expects the class tag (e.g. **<IpCpu>**) of the device class for which you want to request monitoring values.

REQUESTING ALL MONITORING VALUES OF ALL TARGET MODULES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <monitor>
    <IpCpu />
  </monitor>
</root>
```

In addition to the class tag, you can also add the ID or name of the requested monitoring value as shown in the example:

REQUESTING ALL MONITORING VALUES OF TARGET MODULE 0X33333333

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <monitor>
    <IpCpu><id>0x33333333</id></IpCpu>
  </monitor>
</root>
```

By stating the desired monitoring value, you can limit the list even further.

REQUESTING MONITORING VALUE »TEMPERATURE SWITCH« OF MATRIX SWITCH 0X11111111

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <monitor>
    <IpMatrixSwitch>
      <id>0x11111111</id>
      <monitorName>Temperature switch</monitorName>
    </IpMatrixSwitch>
  </monitor>
</root>
```

This is an exemplary response of the XML service:

LIST OF MONITORING VALUES OF MATRIX SWITCHES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <result type="monitor">
    <IpMatrixSwitch>
      <item>
        <id>0x11111111</id>
        <monitorName>Temperature switch</monitorName>
        <value>35.0</value>
        <alarm>off</alarm>
        <acknowledged>no</acknowledged>
      </item>
    </IpMatrixSwitch>
  </result>
</root>
```

NOTE: In addition to name and value of the respective monitoring value, the two flags **acknowledged** and **alarm** are always returned as well. With the **alarm** flags, you can check if the monitoring value lies inside (**off**) or outside (**on**) of its defined range. **Acknowledged** complies with the *Viewed* function of the web application.

You can list several device class tags within the XML tag **<monitor>**:

REQUESTING MONITORING VALUES OF ALL TARGET MODULES AND USER MODULES

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <monitor>
    <IpCpu />
    <IpCon />
  </monitor>
</root>
```

Tradeswitch function (optional)

NOTE: The functions and settings described in this chapter are only available if the purchased *Tradeswitch* function has been activated.

The Tradeswitch function optimises the operation of user modules, which monitor several computers over several monitors.

Instead of connecting keyboard and mouse to every monitor, the Tradeswitch function provides a central keyboard/mouse for all operating tasks of the user console.

In order to enable this, several modules of a KVM matrix system are arranged into groups. Each user module within a group is provided with a monitor, but only one of the group's user modules is provided with keyboard and mouse.

By using a hotkey, you can switch the two input devices to any monitor and each computer of the group can be operated.

Switching keyboard and mouse signals

The switching of the keyboard and mouse signals from a user module to another user module or a target computer is carried out by entering one of the configurable key combinations.

How to switch the keyboard and mouse signals:

1. Press the Tradeswitch key modifier adjusted in the KVM matrix system and the Tradeswitch key assigned to the target module.

EXAMPLE:

- Tradeswitch key modifier: **Ctrl+Shift**
- Tradeswitch key of a target module: **T**

Press **Ctrl+Shift** and the tradeswitch key **t**. When the keys are released, the keyboard and mouse signals are switched to the target module.

Further information:

- *Creating Tradeswitch workplaces* on page 167
- *Assigning devices to a Tradeswitch workplace* on page 170
- *Defining the master workplace of the Tradeswitch workplace* on page 171
- *Changing the Tradeswitch key and the valid keys* on page 168

Basic configuration

Creating Tradeswitch workplaces

How to create a new Tradeswitch workplace:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Tradeswitch function** entry and press **Enter**.
4. Press **F3** and enter the name of the new workplace in the **Add Workplace** menu.
5. Press **F2** to save your inputs and create the Tradeswitch workplace.

Renaming a Tradeswitch workplace

How to rename a Tradeswitch workplace:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Tradeswitch function** entry and press **Enter**.
4. Select the Tradeswitch workplace you want to rename.
5. Press **F5** and change the name in the **Name** entry.
6. Press **F2** to save your settings.

Deleting a Tradeswitch workplace

How to delete a Tradeswitch workplace:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Tradeswitch function** entry and press **Enter**.
4. Select the Tradeswitch workplace you want to delete and press **F4**.
5. Use the arrow keys to select **Yes** and press **Enter** to respond to the prompt for confirmation.

Changing the Tradeswitch key and the valid keys

The Tradeswitch keys enable you to switch the keyboard and mouse signals from one user module to another or to a target computer by pressing a key combination.

In the *Tradeswitch function* section of the *Configuration* menu, several user modules and/or target computers can be grouped to a workplace. You can also define the keys to be pressed for switching the keyboard and mouse signals to a particular user module or a particular target computer.

In addition to the Tradeswitch key modifier, you can also define the valid keys for the Tradeswitch keys.

How to change the Tradeswitch key modifier or the valid keys:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.
4. Select the **Tradeswitch key** entry and press **Enter**.
5. Select *at least* one of the listed select key modifiers in the **Modifier** entry by marking the respective box using the **arrow keys**. Press **F8**.

Ctrl:	<i>Ctrl</i> key
Alt:	<i>Alt</i> key
Alt Gr:	<i>Alt Gr</i> key
Win:	<i>Windows</i> key
Shift	<i>Shift</i> key

6. Select the **Valid keys** entry and press **F8** to select one of the following options:

Num:	<i>only numerical keys</i> are interpreted as select keys when pressed in combination with the select key modifier
Alph:	<i>only alphabetic keys</i> are interpreted as select keys when pressed in combination with the select key modifier
AlphNum:	<i>alphabetical and numerical keys</i> are interpreted as select keys when pressed in combination with the select key modifier

IMPORTANT: Both the selected keymode and the selected tradeswitch key modifier(s) are *no longer* provided as key combinations to the operating system and the applications on the target computer.

7. Press **F2** to save your settings.

Customizing the appearance of the tradeswitch frame

You can set the display duration of the tradeswitch frame as well as its appearance (color settings, transparency effect and frame width) system-wide.

Each user of the matrix system can use his or her personal profile to change the system-wide default by making an individual adjustment.

How to change the *system-wide* appearance of the tradeswitch frame:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select **System** and press **Enter**.
4. Customize the settings to suit your needs:

TS frame time:	Set the temporary display duration of the tradeswitch frame between 0.0 (off) and 10.0 seconds.
TS frame color:	Select the brightness and colour of the tradeswitch frame.
TS frame transparency:	Select the transparency effect (normal or high) of the Tradeswitch frame.
TS frame width:	Select the frame width (normal to quadruple) of the Trade-switch frame.

5. Press **F2** to save your settings.

How to change the appearance of the tradeswitch frame for a *specific* user account:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **User** entry and press **Enter**.
4. Select the user account you want to rename and press **F5**.
5. Select **Personal Profile** and press the **Enter** key.
6. Select the **TS frame settings** and press the **F8** key (repeatedly) to apply the *system setting* (see above) or to make your *own* setting (step 7).

7. Enter the following data when activating your *own* setting:

TS frame time:	Set the temporary display duration of the tradeswitch frame between 0.0 (off) and 10.0 seconds.
TS frame color:	Select the brightness and colour of the tradeswitch frame.
TS frame transparency:	Select the transparency effect (normal or high) of the Tradeswitch frame.
TS frame width:	Select the frame width (normal to quadruple) of the Trade-switch frame.

8. Press F2 to save your settings.

Detailed configuration of a Tradeswitch workplace

Assigning devices to a Tradeswitch workplace

NOTE: Giving the targets self-explanatory names referring to the function or the location of the device facilitates configuring the Tradeswitch workplace.

Detailed information on renaming the target modules is provided on page 82.

How to assign target or user modules to the Tradeswitch workplace:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Tradeswitch function** entry and press **Enter**.
4. Press **F5** to edit the selected Tradeswitch workplace.
5. Select the **Members** entry and press **Enter**.
6. The *Assign Tradeswitch Function* menu opens. The left-hand column displays the target module name or the user module name. The right-hand column provides the assigned Tradeswitch key(s).

ADVICE: The *view filter* (see page 11) can be used to either display the user modules (*Consoles*) or the target modules (*Targets*) in the list.

7. Select the user or the target module to assign a Tradeswitch key to or whose Tradeswitch key you want to change.

ADVICE: Use the menu's *search function* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

8. Press **F5** and enter the desired Tradeswitch key.
9. Repeat steps 7 and 8 to create or change the Tradeswitch keys.
10. Press **F2** to save your settings.

Defining the master workplace of the Tradeswitch workplace

ADVICE: Giving the targets self-explanatory names that refer to the function or the location of the device simplifies the configuration of the Tradeswitch workplace. Detailed information on how to rename the target modules can be found on page 82.

Define a user module within the Tradeswitch workplace to which keyboard and mouse are connected to. This master workplace also provides information on any accessing users.

How to define a master workplace of the Tradeswitch workplace:

1. Press the hotkey **Ctrl+Num** (default) to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Tradeswitch function** entry and press **Enter**.
4. Select the Tradeswitch workplace whose master workplace you want to change and press **F5**.
5. Select the **Members** entry and press **Enter**.
6. Select the desired master workplace and press **F8**.

NOTE: The active master workplace is marked with an arrow (▶).

7. Press **F2** to save your settings.

Enhanced functions

(De)activating the Tradeswitching information display

If you purchased the additional *Tradeswitch function*, the messages »Forwarding to...« (at the master workplace) or »Forwarded« (at the target workplace) can be displayed at the monitor.

How to (de)activate the Tradeswitching information display:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Console** entry and press **Enter**.
4. Select the user module you want to (de)activate and press **F5**.
5. Select the **Display Tradeswitching** entry and press **F8** to select one of the following options:

yes:	activated information display
no:	deactivated information display

6. Press **F2** to save your settings.

CDS mouse positioning

When moving the mouse cursor to an edge of the active monitor with a second monitor placed next to the active monitor, the mouse cursor remains at the position at which the switching to the module of the second monitor takes place.

NOTE: When switching between channels via CDS, a mouse cursor may be visible on several monitors.

In addition, when leaving the monitor, the matrix switch can position the mouse cursor so that it is barely visible. For this, you can use the settings **Right** and **Bottom**.

You can define this setting for the entire system. By default, all CDS user modules use the systemwide setting. However, you can also individually define the mouse position for each CDS user module.

How to change the system setting of the mouse position:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **System** entry and press **Enter**.

4. Select the **CDS mouse positioning** entry and press **F8** to select one of the following options:

off:	The mouse cursor remains at the position at which the switching to the module of the next monitor takes place (<i>default</i>).
on:	According to the CDS mouse hide setting the mouse cursor is positioned so that it is barely visible. Only during <i>multi-user access</i> , the cursor remains at the position at which the switching to the next monitor takes place.
on+Multi:	According to the CDS mouse hide setting, even during <i>multi-user access</i> , the mouse cursor is positioned so that it is barely visible.

ADVICE: You can activate or deactivate this function for particular modules independently from the selected system setting (see below).

5. If the *CDS mouse positioning* is enabled, select one of the options under **CDS mouse hideout**:

right:	The mouse cursor is placed at the right edge of the monitor so that it is barely visible.
bottom:	The mouse cursor is placed at the bottom edge of the monitor so that it is barely visible.

6. Press **F2** to save your settings.
7. Press **F2** to save your settings.

How to change the mouse position of a particular target module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the *Configuration* menu.
3. Select the **Target** entry and press **Enter**.
4. Select the target module you want to configure and press **F5**.

ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Select the **CDS mouse positioning** entry and press **F8** to select one of the following options:

System:	Use systemwide (see above) setting (<i>default</i>).
Off:	The mouse cursor remains at the position at which the switching to the module of the next monitor takes place.
On:	According to the CDS mouse hide setting the mouse cursor is positioned so that it is barely visible. Only during <i>multi-user access</i> , the cursor remains at the position at which the switching to the next monitor takes place.
On+Multi:	According to the CDS mouse hide setting, even during <i>multi-user access</i> , the mouse cursor is positioned so that it is barely visible.

6. When the *CDS mouse positioning* is explicitly enabled for this user module, enable one or both options under **CDS mouse hideout**:

Right:	The mouse cursor is placed at the right edge of the monitor so that it is barely visible.
Bottom:	The mouse cursor is placed at the bottom edge of the monitor so that it is barely visible.

7. Press **F2** to save your settings.

Adjusting the mouse speed

If *CrossDisplay-Switching* is enabled, the mouse speed is not controlled by the operating system of the target computer, but by the matrix switch.

If the cursor on the monitor of the target computer moves too fast or too slow, you can adjust the speed in the matrix switch.

You can adjust the mouse speed for the entire system or for one target module only.

How to change the system settings of the mouse speed:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **System** entry and press **Enter**.
4. Use the **Mouse speed** entry and press **F8** to choose a setting.

NOTE: You can enable or disable the function individually for specific modules regardless of the selected system setting (see below).

5. Press **F2** to save your settings.

How to change the mouse speed of a specific target module:

1. Press the **Ctrl+Num** (default) hotkey to open the on-screen display.
2. Press **F11** to call the **Configuration** menu.
3. Select the **Target** entry and press **Enter**.
4. Select the target module you want to configure and press **F5**.


ADVICE: Use the menu's *search function*, the *view filter* or the *sort criteria* (see page 10 ff.) to limit the selection of list entries.

5. Use the **Mouse speed** entry and press **F8** to choose between the following options:

System:	Apply the system mouse speed setting for the remote target
[value]:	Use individual mouse speed (level 1 to 10).

6. Press **F2** to save your settings.


NOTES

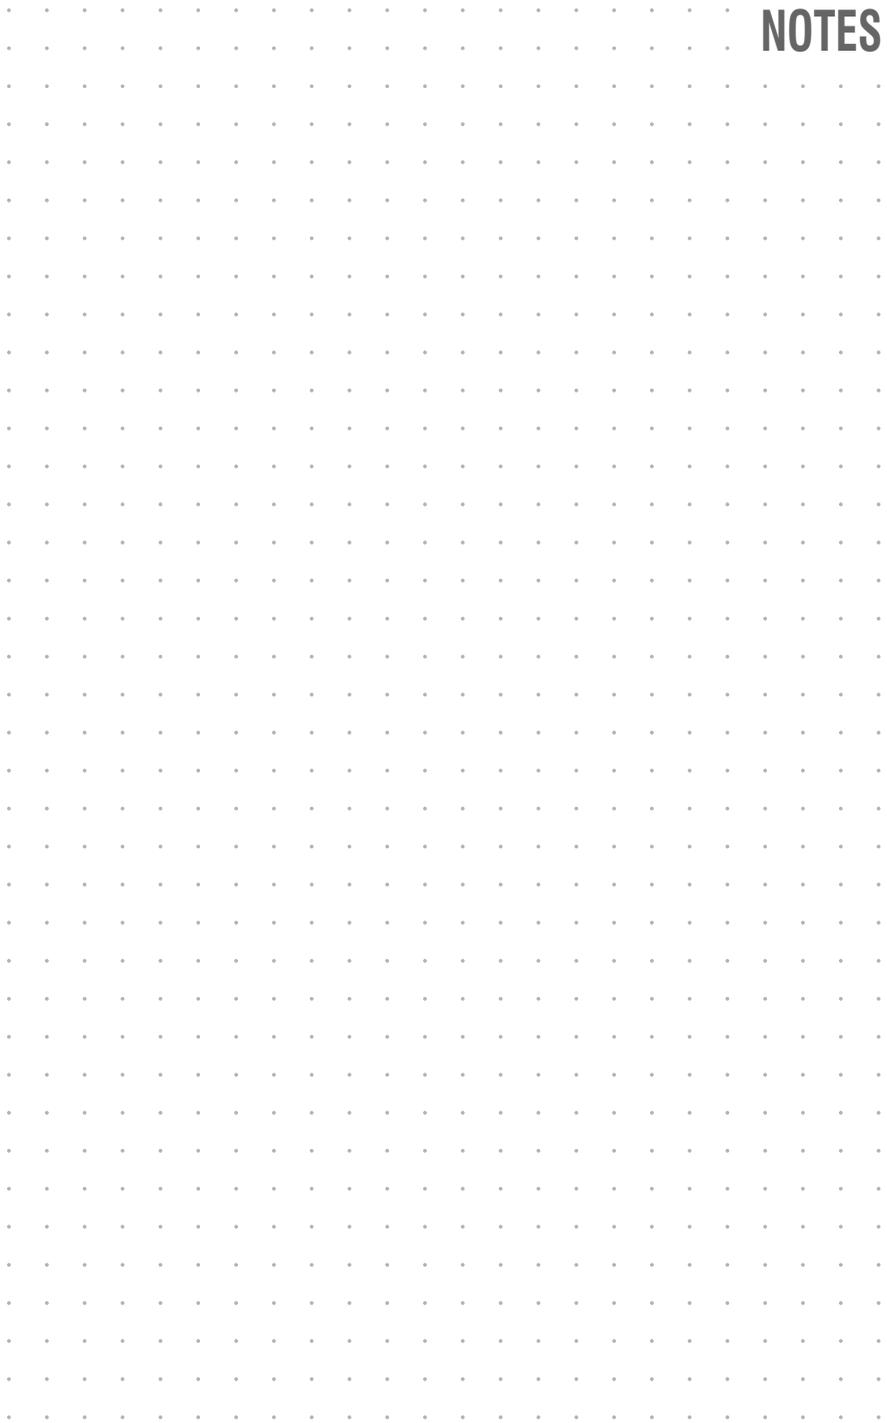

NOTES

A grid of small dots for taking notes, consisting of 20 columns and 30 rows of dots.

NOTES

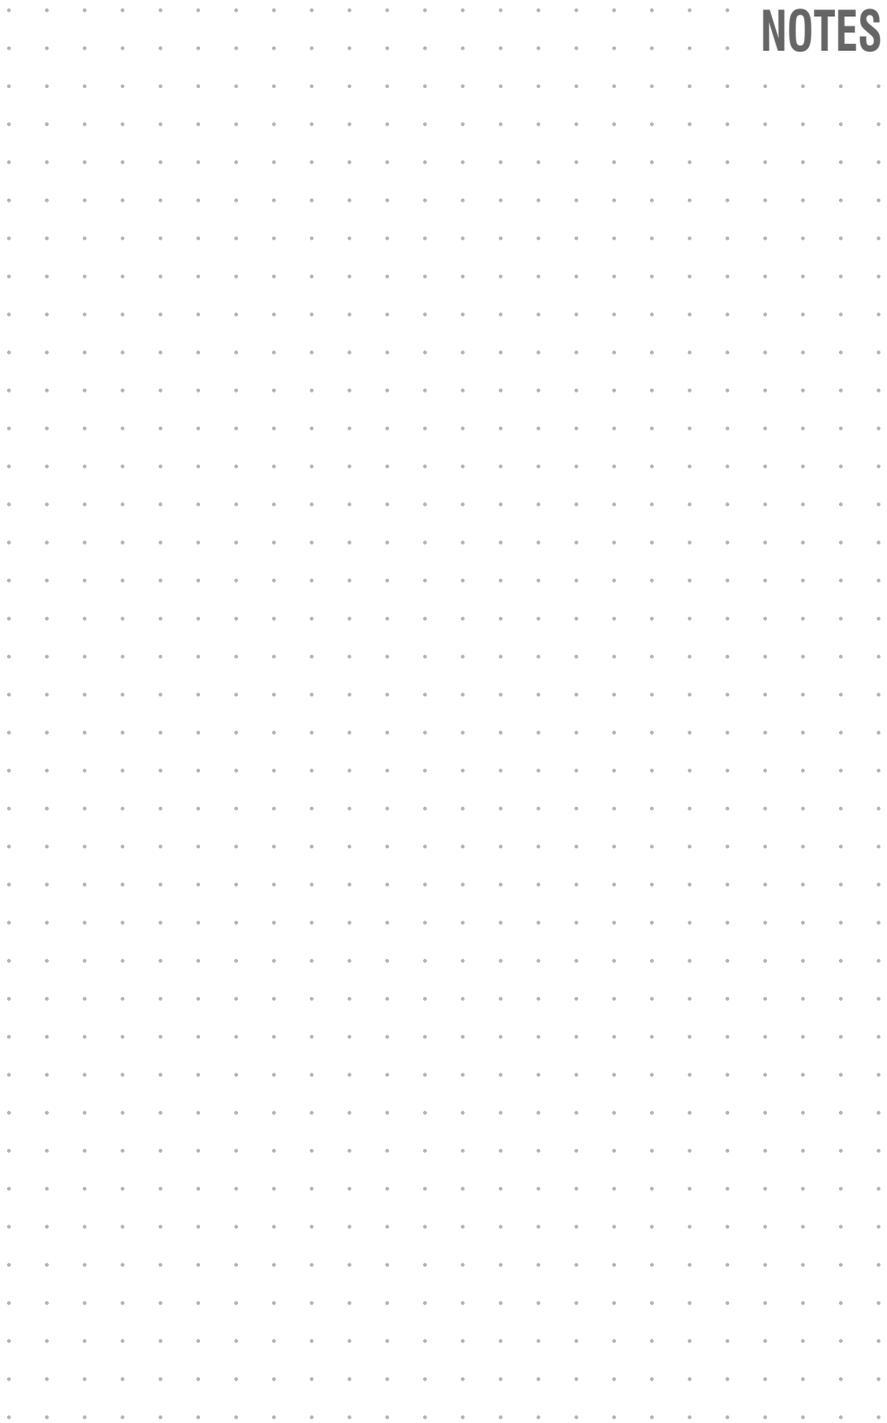



G&D. AND KVM FEELS RIGHT.

Hauptsitz | Headquarter

Guntermann & Drunck GmbH Systementwicklung

Obere Leimbach 9 | D-57074 Siegen | Phone +49 271 23872-0
sales@gdsys.com | www.gdsys.com

US-Büro | US-Office

G&D North America Inc.

4001 W. Alemada Avenue | Suite 100, Burbank, CA 91505 | Phone +1-818-748-3383
sales.us@gdsys.com | www.gdsys.com