



G&D Computer Modules

EN Installation and Operation
HDM-CPU series



About this manual

This manual has been carefully compiled and examined to the state-of-the-art.

G&D neither explicitly nor implicitly takes guarantee or responsibility for the quality, efficiency and marketability of the product when used for a certain purpose that differs from the scope of service covered by this manual.

For damages which directly or indirectly result from the use of this manual as well as for incidental damages or consequential damages, G&D is liable only in cases of intent or gross negligence.

Caveat Emptor

G&D will not provide warranty for devices that:

- Are not used as intended.
- Are repaired or modified by unauthorized personnel.
- Show severe external damages that was not reported on the receipt of goods.
- Have been damaged by non G&D accessories.

G&D will not be liable for any consequential damages that could occur from using the products.

Proof of trademark

- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- All product and company names mentioned in this manual, and other documents you have received alongside your G&D product, are trademarks or registered trademarks of the holder of rights.

© Guntermann & Drunck GmbH 2024. All rights reserved.

Version 1.12 – 18/04/2024

Guntermann & Drunck GmbH
Obere Leimbach 9
57074 Siegen

Germany

Phone +49 271 23872-0
Fax +49 271 23872-120

www.gdsys.com
sales@gdsys.com

FCC Statement

The devices named in this manual comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) the devices may not cause harmful interference, and (2) the devices must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Table of Contents

Safety instructions	1
---------------------------	---

Chapter A: Computer modules

Computer module »HDM-CPU«	4
Computer module »HDM-CPU-DH-UC«	9
Computer module »HDM-CPU-Fiber«	15
Computer module »HDM-CPU-Fiber-DH-UC«	21
Computer module »HDM-U-CPU«	28
Computer module »HDM-U-CPU-DH-UC«	33
Computer module »HDM-U-CPU-Fiber«	40
Computer module »HDM-U-CPU-Fiber-DH-UC«	46

Chapter B: Generic HID

Enabling/disabling the console module's Generic HID mode	52
Enabling/disabling the computer module's Generic HID mode	53

Chapter C: Extender mode

Opening the OSD in extender mode	55
Configuration	56

Safety instructions

Please read through the following safety guidelines before putting the G&D product into operation. The guidelines help to avoid damage to the product and prevent potential injuries.

Keep these safety guidelines ready to hand for all persons who use this product.

Observe all warnings and operating information given at the device or in this operating manual.

Disconnect all power sources

CAUTION: Shock hazard!

Before installation, ensure that the device has been disconnected from all power sources. Disconnect all power plugs and all power supplies of the device.

Débranchez toutes les sources d'alimentation

ATTENTION: Risque de choc électrique!

Avant l'installation, assurez-vous que l'appareil a été débranché de toutes les sources d'alimentation. Débranchez toutes les fiches d'alimentation et toutes les alimentations électrique de l'appareil.

Trennen Sie alle Spannungsversorgungen

VORSICHT: Risiko elektrischer Schläge!

Stellen Sie vor der Installation sicher, dass das Gerät von allen Stromquellen getrennt ist. Ziehen Sie alle Netzstecker und alle Spannungsversorgungen am Gerät ab.

Warning: electric shock

To avoid the risk of electric shock, you should not open the device or remove any covers. If service is required, please contact our technicians.

Ensure constant access to the devices' mains plugs

When installing the devices, ensure that the devices' mains plugs remain accessible at all time.

Do not cover the ventilation openings

For device variants with ventilation openings, it must always be ensured that the ventilation openings are not covered.

 Ensure correct installation position for devices with ventilation openings

For reasons of electric safety, devices with ventilation openings must only be installed in an upright, horizontal position.

 Do not insert any objects through the device's openings

Objects should never be inserted through the device's openings. Dangerous voltage could be present. Conductive foreign bodies can cause a short circuit, which can lead to fires, electric shocks or damage to your devices.

 Avoid tripping hazards

Avoid tripping hazards while laying cables.

 Use earthed voltage source

Only operate this device with an earthed voltage source.

 Use exclusively the G&D power pack

Only operate this device with the power packs included in delivery or listed in this operating manual.

 Do not make any mechanical or electrical alternations to the device

Do not make any mechanical or electrical alternations to this device. Guntermann & Drunck GmbH is not responsible for compliance with regulations in the case of a modified device.

 Do not remove device cover

The cover may only be removed by a G&D service technician. Unauthorised removal voids the guarantee. Failure to observe this precautionary measure can result in injuries and damage to the device.

 Operate the device exclusively in the intended field of application

The devices are designed for indoor use. Avoid extreme cold, heat or humidity.

Special advices for dealing with laser technology

The **Fiber** devices of the computer modules use components with laser technology which comply with laser class 1 or better.

They meet the requirements according to **EN 60825-1:2014** as well as **U.S. CFR 1040.10** and **1040.11**.

Class 1 Laser Product EN 60825-1:2014	Invisible laser beam, avoid direct eye exposure with optical instruments	Complies with 21 CFR 1040.10 and 1040.11
Produit laser de classe 1 EN 60825-1:2014	Laser invisible, évitez l'exposition directe des yeux avec des instruments optiques	Est conforme à 21 CFR 1040.10 et 1040.11
LASER KLASSE 1 EN 60825-1:2014	Unsichtbare Laserstrahlung, nicht direkt mit optischen Instrumenten betrachten	Complies with 21 CFR 1040.10 and 1040.11

Mind the following advices when dealing with laser beams:

Avoid direct eye exposure to beam

Never stare directly into the beam when wearing optical instruments!

Always connect optical connections or cover them with protection caps

Always cover the optical connections of the *Transmission* socket and the cable plugs with a connector or a protection cap.

Only use G&D certified transmission modules

It is not permitted to use fibre optic modules, which do not meet the requirements of laser class 1 in accordance to **EN 60825-1:2014**. By using such modules, the compliance with regulations and advices for the safe handling of laser technology cannot be guaranteed.

The guarantee of complying with all relevant instructions can only be given by applying original components. Therefore, the devices have to be operated with G&D certified transmission modules only.

A Computer modules

Computer module »HDM-CPU«

With **HDM-CPU** computer modules, you can connect a computer with **HDMI** graphics output to a digital matrix switch of the *ControlCenter-Compact* or *ControlCenter-Digital* series.

Users at the consoles of the matrix switch can access the computer module and operate the connected computer.



Package contents


- 1 × Computer module **HDM-CPU**
- 1 × HDMI video cable (*HDM-Cable-M/M-2*)
- 1 × USB device cable
- 2 × Audio cable
- 1 × Power pack (12V/2A, only with variants incl. PowerPack)
- 1 × Power cable (only with variants incl. PowerPack)
- 1 × »Safety instructions« flyer

Required accessories

- 1 × Category 5e (or better) twisted pair cable to connect the computer module to the matrix switch

Installation

Connecting the computer

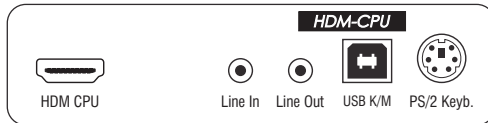

HDM CPU: Use the supplied video cables to connect the computer's *HDMI* video output to this interface.

Line In: Use one of the supplied audio cables to connect the computer's *Line Out* interface to this interface.


Line Out: Use one of the supplied audio cables to connect the computer's *Line In* interface to this interface.

NOTE: Keyboard signals can be transmitted to the computer using *either* the PS/2 or the USB interface.

USB K/M: Use the USB device cable to connect one of the computer's USB interfaces to this interface.

PS/2 Keyb.: Use an optional PS/2 cable to connect the computer's PS/2 keyboard interface to this interface.

Connection to the matrix switch

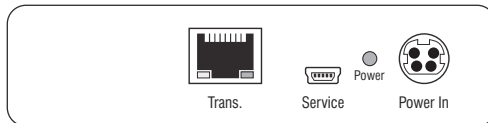

Trans.: Use a category 5e (or better) twisted pair cable to connect this interface to a *Dynamic Port* (RJ45) of a matrix switch.

ADVICE: You can also connect the computer module *directly* to a compatible console module.

Power supply

Power In: Insert the power pack's connection cable to this interface. Connect the power cable to the power pack and a power socket.

Status displays

The Power LED on the back panel of the computer module shows the status of the external power pack:

LED	Status	Meaning
Power	On	The external power pack is connected and the required voltage (12 Volt) is available.
	Off	The external power pack is not (properly) connected.

The flashing Transmission LEDs highlight the following operating statuses of the particular connection:

LED	Colour	Status	Meaning
Left	Yellow	Off	No console module accesses the computer module.
		On	A console module accesses the computer module.
		Blinking	The incoming video signal was not detected.
		Flashing	No voltage at PS/2 interface or USB bus.
Right	Green	Off	The computer module is turned off.
		On	A console module accesses the computer module.
		Blinking	The connection to the counterpart could not be established.
		Flashing	The connection to the counterpart is established. No console module is accessing.
	Yellow	Flickering	Keyboard and mouse inputs are forwarded by the accessing console module. The flickering is defined by the user's entries.
		Flashing	A firmware update is carried out.

Technical data

HDM-CPU		
Interfaces to computer	Video:	1 × HDMI
	Keyboard and mouse signals	1 × PS/2 socket 1 × USB-B
	Audio:	2 × 3,5 mm jack plug
Data transmission to the counterpart	Interface:	1 × RJ45 socket
	Transmission distance:	Max. 140 metres
Video	Format:	HDMI
	Colour depth:	24 bit
	Video bandwidth:	25 to 300 MP / s
	Max. resolution:	▪ 2560 × 1600 (60 Hz) ▪ 4096 × 2160 (30 Hz)
	Exemplary resolutions:	▪ 4096 × 2160 (24, 25 or 30 Hz) ▪ 3840 × 2160 (24, 25 or 30 Hz) ▪ 2048 × 2160 (60 Hz) ▪ 2048 × 2048 (60 Hz) › Further standardised resolutions within the video bandwidth possible.
	Vertical frequency:	24 Hz to 120 Hz
	Horizontal frequency:	25 kHz to 135 kHz
	DDC/CI:	The device supports monitors with a DDC/CI function. The DDC information are transparently forwarded to the monitor to support a maximum number of monitors. However, the support cannot be guaranteed for all monitor models.
Audio	Transmission type:	transparent, bidirectional
	Resolution:	24 Bit
	Refresh rate:	96 kHz
	Bandwidth:	22 kHz
Power supply	Type:	Portable power pack (12V/2A)
	Connector:	1 × Mini-DIN 4 socket
	Power input:	0.6A @ 12VDC
Housing	Material:	Anodised aluminium
	Dimensions (W × H × D):	Approx. 105 × 26 × 164 mm
	Weight:	Approx. 0.39 kg
Operational environment	Temperature:	+5 to +45°C
	Air humidity:	20% to 80%, non-condensing
Storage environment	Temperature:	-20 to +60°C
	Air humidity:	15% to 85%, non-condensing

HDM-CPU

Conformity

CE, UKCA, FCC class B, TAA, EAC, RoHS,
WEEE, REACH


Computer module »HDM-CPU-DH-UC«

With the **HDM-CPU-DH-UC** computer module you can connect a computer with up to two **HDMI** graphics outputs (dual monitor) to two *different* digital matrix switches of the *ControlCenter-Compact* or *ControlCenter-Digital* series by using one cable only.

ADVICE: If you use the first video channel only, you are able to display resolutions up to $4096 \times 2160 @ 30 \text{ Hz}$ (4K). Using both video channels allows resolutions up to $1920 \times 1200 @ 60 \text{ Hz}$. Detailed information about the supported resolutions is given in the chapter *Technical data* on page 13.

Users at the consoles of the matrix switch can access the computer module and operate the connected computer.

ADVICE: At consoles with only one monitor, use the key combination **Alt + arrow right** to switch to the video stream of the computer's second video output (see page 58).

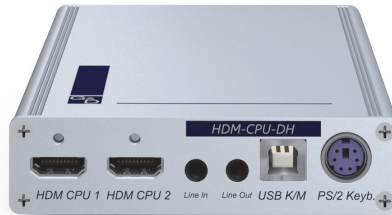

Package contents


- 1 × Computer module **HDM-CPU-DH-UC**
- 2 × HDMI video cable (*HDM-Cable-M/M-2*)
- 1 × USB device cable
- 2 × Audio cable
- 1 × Power pack (12V/2A, only with variants incl. PowerPack)
- 1 × Power cable (only with variants incl. PowerPack)
- 1 × »Safety instructions« flyer

Required accessories

- 2 × Category 5e (or better) twisted pair cables to connect the computer module to two *different* matrix switches

Installation

Connecting the computer

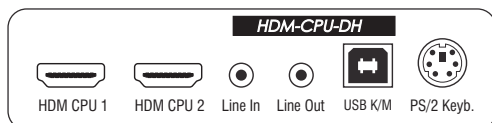

HDM CPU 1: Use one of the supplied video cables to connect the computer's first *HDMI* video output to this interface.

HDM CPU 2: Use one of the supplied video cables to connect the computer's second *HDMI* video output to this interface.

Line In: Use one of the supplied audio cables to connect the computer's *Line Out* interface to this interface.

Line Out: Use one of the supplied audio cables to connect the computer's *Line In* interface to this interface.

NOTE: Keyboard signals can be transmitted to the computer using *either* the PS/2 or the USB interface.


USB K/M: Use the USB device cable to connect one of the computer's USB interfaces to this interface.

PS/2 Keyb.: Use an optional PS/2 cable to connect the computer's PS/2 keyboard interface to this interface.

Connections to the matrix switches

IMPORTANT: Connect only one of the computer module's *Trans.* interfaces for each matrix switch!

NOTE: Only use category 5e (or better) twisted pair cables to connect the devices.

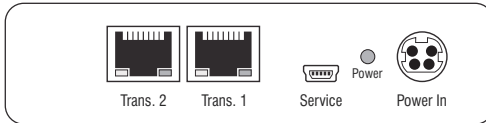

Connecting the first matrix switch

Trans. 1: Connect this interface to a *Dynamic Port* (RJ45) of the first matrix switch.

Connecting the second matrix switch

Trans. 2: Connect this interface to a *Dynamic Port* (RJ45) of the second matrix switch.

ADVICE: You can also connect the computer module *directly* to up to two compatible console modules.

Power supply

Power In: Insert the power pack's connection cable to this interface.

Start-up

Connect the power cable to the power pack and a power socket. The computer module starts as soon as it is supplied with power.

Status displays

The Power LED on the front panel of the computer module shows the status of the external power pack:

LED	Status	Meaning
Power	On	The external power pack is connected and the required voltage (12 Volt) is available.
	Off	The external power pack is not (properly) connected.

The flashing Transmission LEDs highlight the following operating statuses of the particular connection:

LED	Colour	Status	Meaning
Left	Yellow	Off	No console module accesses the computer module.
		On	A console module accesses the computer module.
		Blinking	The incoming video signal was not detected.
		Flashing	No voltage at PS/2 interface or USB bus.
Right	Green	Off	The computer module is turned off.
		On	A console module accesses the computer module.
		Blinking	The connection to the counterpart could not be established.
		Flashing	The connection to the counterpart is established. No console module is accessing.
		Flickering	Keyboard and mouse inputs are forwarded by the accessing console module. The flickering is defined by the user's entries.
	Yellow	Flashing	A firmware update is carried out.

Technical data

HDM-CPU-DH-UC		
Interfaces to computer	Video:	2 × HDMI
	Keyboard and mouse signals	1 × PS/2 socket 1 × USB-B
	Audio:	2 × 3,5 mm jack plug
Date transmission to counterparts	Interface:	2 × RJ45 socket
	Transmission distance:	Max. 140 metres
Video	Format:	HDMI
	Colour depth:	24 Bit
	Video bandwidth:	25 to 300 MP/s (Channel 1)
		25 to 165 MP/s (Channel 2)
		Max. 330 MP/s (total)
	Exemplary resolutions:	Channel 1: ▪ 2048 × 2048 @ 60 Hz (2K×2K) ▪ 2048 × 2160 @ 60 Hz ▪ 2560 × 1600 @ 60 Hz ▪ 3840 × 2160 @ 30 Hz (Ultra HD) ▪ 4096 × 2160 @ 30 Hz (4K)
		Channel 2: ▪ 1920 × 1200 @ 60 Hz ▪ 1280 × 1024 @ 85 Hz ▪ 1080p60 (Full HD) ▪ 640 × 480 @ 60 Hz ▸ Further VESA and CTA standardised resolutions possible within video bandwidth/pixel rate and horizontal/vertical frequency.
	Vertical frequency:	24 Hz to 120 Hz
	Horizontal frequency:	25 kHz to 135 kHz
	DDC/CI:	The device supports monitors with a DDC/CI function. The DDC information are transparently forwarded to the monitor to support a maximum number of monitors. However, the support cannot be guaranteed for all monitor models.
Audio	Transmission type:	transparent, bidirectional
	Resolution:	24 Bit
	Refresh rate:	96 kHz
	Bandwidth:	22 kHz
Power supply	Type:	Portable power pack (12V/2A)
	Connector:	1 × Mini-DIN 4 socket
	Power input:	0.7A @ 12VDC

HDM-CPU-DH-UC		
Housing	Material:	Anodised aluminium
	Dimensions (W × H × D):	Approx. 105 × 26 × 164 mm
	Weight:	Approx. 0.4 kg
Operational environment	Temperature:	+5 to +45°C
	Air humidity:	20% to 80%, non-condensing
Storage environment	Temperature:	-20 to +60°C
	Air humidity:	15% to 85%, non-condensing
Conformity	CE, UKCA, FCC class B, TAA, EAC, RoHS, WEEE, REACH	


Computer module »HDM-CPU-Fiber«

With **HDM-CPU-Fiber** computer modules, you can connect a computer with **HDMI** graphics output to a digital matrix switch of the *ControlCenter-Compact* or *ControlCenter-Digital* series.

NOTE: This computer module can only be connected to a compatible fiber port of *ControlCenter-Compact* matrix switches or *ControlCenter-Digital* matrix switches (requires **CCD-I/O 16-Card-Fiber**).

IMPORTANT: Both, the computer module and the fiber ports are available as *single-mode* variants or as *multimode* variants. Make sure that the port at the computer module, the fiber port and the optical fibers are compatible with each other.

Users at the consoles of the matrix switch can access the computer module and operate the connected computer.

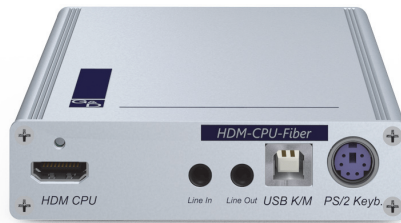

Package contents


- 1 × Computer module **HDM-CPU-Fiber**
- 1 × HDMI video cable (*HDM-Cable-M/M-2*)
- 1 × USB device cable
- 2 × Audio cable
- 1 × Power pack (12V/2A, only with variants incl. PowerPack)
- 1 × Power cable (only with variants incl. PowerPack)
- 1 × »Safety instructions« flyer

Required accessories

- 1 × Compatible optical fibre cable to connect the computer module to the matrix switch

Installation

Connecting the computer



HDM CPU: Use the supplied video cables to connect the computer's *HDMI* video output to this interface.

Line In: Use one of the supplied audio cables to connect the computer's *Line Out* interface to this interface.

Line Out: Use one of the supplied audio cables to connect the computer's *Line In* interface to this interface.

NOTE: Keyboard signals can be transmitted to the computer using *either* the PS/2 or the USB interface.

USB K/M: Use the USB device cable to connect one of the computer's USB interfaces to this interface.

PS/2 Keyb.: Use an optional PS/2 cable to connect the computer's PS/2 keyboard interface to this interface.

Connection to the matrix switch


IMPORTANT: The devices use components with laser technology which comply with laser class 1.

They meet the requirements in accordance to **EN 60825-1:2014** as well as **U.S. CFR 1040.10** and **1040.11**.

Mind the following instructions when dealing with laser beams:

- *Avoid direct eye exposure to beam on page 3*
- *Always connect optical connections or cover them with protection caps on page 3*
- *Only use G&D certified transmission modules on page 3*

NOTE: Use optical fibres with LC plugs to connect the devices. The cables are available as accessories.



Trans. | Tx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Rx** interface of a *Dynamic Port* provided at the matrix switch.

Trans. | Rx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Tx** interface of the same *Dynamic Port* provided at the matrix switch.

ADVICE: You can also connect the computer module *directly* to a compatible console module.

Power supply

Power In: Connect the cable of the power pack to this interface. Now connect the power cable to the power pack and a power socket.

Status displays

The Power LED on the back panel of the computer module shows the status of the external power pack:

LED	Status	Meaning
Power	On	The external power pack is connected and the required voltage (12 Volt) is available.
	Off	The external power pack is not (properly) connected.

The blinking LEDs on the back panel highlight the following operating statuses of the particular connection:

LED	Colour	Status	Meaning
Left	Yellow	Off	No console module accesses the computer module.
		On	A console module accesses the computer module.
		Blinking	The incoming video signal was not detected.
		Flashing	No voltage at PS/2 interface or USB bus.
Right	Green	Off	The computer module is turned off.
		On	A console module accesses the computer module.
		Blinking	The connection to the counterpart could not be established.
		Flashing	The connection to the counterpart is established. No console module is accessing.
		Flickering	Keyboard and mouse inputs are forwarded by the accessing console module. The flickering is defined by the user's entries.
	Yellow	Flashing	A firmware update is carried out.

Technical data

HDM-CPU-FIBER		
Interfaces to computer	Video:	1 × HDMI
	Keyboard and mouse signals	1 × PS/2 socket 1 × USB-B
	Audio:	2 × 3,5 mm jack plug
Data transmission to the counterpart	Interface:	1 × LC-Duplex socket
	Transmission distance:	▶ HDM-CPU-Fiber(M) Max. 100 Meter (62,5µ/125µ), Max. 200 Meter (50µ/125µ OM2) Max. 400 Meter (50µ/125µ OM3)
		▶ HDM-CPU-Fiber(S) Max. 5.000 Meter (9µ/125µ OS1)
		▶ HDM-CPU-Fiber(S+) Max. 10.000 Meter (9µ/125µ OS1)
Video	Format:	HDMI
	Colour depth:	24 bit
	Video bandwidth:	25 to 300 MP / s
	Max. resolution:	■ 2560 × 1600 (60 Hz) ■ 4096 × 2160 (30 Hz)
	Exemplary resolutions:	■ 4096 × 2160 (24, 25 or 30 Hz) ■ 3840 × 2160 (24, 25 or 30 Hz) ■ 2048 × 2160 (60 Hz) ■ 2048 × 2048 (60 Hz)
		▶ Further standardised resolutions within the video bandwidth possible.
	Vertical frequency:	24 Hz to 120 Hz
	Horizontal frequency:	25 kHz to 135 kHz
	DDC/CI:	The device supports monitors with a DDC/CI function. The DDC information are transparently forwarded to the monitor to support a maximum number of monitors. However, the support cannot be guaranteed for all monitor models.
Audio	Transmission type:	transparent, bidirectional
	Resolution:	24 Bit
	Refresh rate:	96 kHz
	Bandwidth:	22 kHz
Power supply	Type:	Portable power pack (12V/2A)
	Connector:	1 × Mini-DIN 4 socket
	Power input:	0.6A @ 12VDC

HDM-CPU-FIBER		
Housing	Material:	Anodised aluminium
	Dimensions (W × H × D):	Approx. 105 × 26 × 164 mm
	Weight:	Approx. 0.4 kg
Operational environment	Temperature:	+5 to +45°C
	Air humidity:	20% to 80%, non-condensing
Storage environment	Temperature:	-20 to +60°C
	Air humidity:	15% to 85%, non-condensing
Conformity	CE, UKCA, FCC class B, TAA, EAC, RoHS, WEEE, REACH	

Computer module »HDM-CPU-Fiber-DH-UC«

NOTE: This computer module can only be connected to a compatible fiber port of *ControlCenter-Compact* matrix switches or *ControlCenter-Digital* matrix switches (requires **CCD-I/O 16-Card-Fiber**).


IMPORTANT: Both, the computer module and the fiber ports are available as *single-mode* variants or as *multimode* variants. Make sure that the port at the computer module, the fiber port and the optical fibers are compatible with each other.

With the **HDM-CPU-Fiber-DH-UC** computer module you can connect a computer with up to two **HDMI** graphics outputs (dual monitor) to two *different* digital matrix switches of the *ControlCenter-Compact* or *ControlCenter-Digital* series by using one cable only.

ADVICE: If you use the first video channel only, you are able to display resolutions up to $4096 \times 2160 @ 30 \text{ Hz}$ (4K). Using both video channels allows resolutions up to $1920 \times 1200 @ 60 \text{ Hz}$. Detailed information about the supported resolutions is given in the chapter *Technical data* on page 26.

Users at the consoles of the matrix switch can access the computer module and operate the connected computer.

ADVICE: At consoles with only one monitor, use the key combination **Alt + arrow right** to switch to the video stream of the computer's second video output (see page 58).

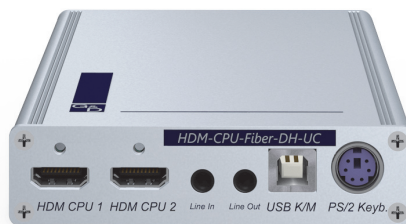

Package contents


- 1 × Computer module **HDM-CPU-Fiber-DH-UC**
- 2 × HDMI video cable (*HDM-Cable-M/M-2*)
- 1 × USB device cable
- 2 × Audio cable
- 1 × Power pack (12V/2A, only with variants incl. PowerPack)
- 1 × Power cable (only with variants incl. PowerPack)
- 1 × »Safety instructions« flyer

Required accessories

- 2 × Compatible optical fibre cable to connect the computer module to two *different* matrix switches

Installation

Connecting the computer

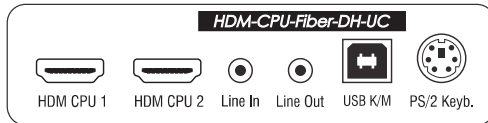

HDM CPU 1: Use one of the supplied video cables to connect the computer's first *HDMI* video output to this interface.

HDM CPU 2: Use one of the supplied video cables to connect the computer's second *HDMI* video output to this interface.

Line In: Use one of the supplied audio cables to connect the computer's *Line Out* interface to this interface.

Line Out: Use one of the supplied audio cables to connect the computer's *Line In* interface to this interface.

NOTE: Keyboard signals can be transmitted to the computer using *either* the PS/2 or the USB interface.

USB K/M: Use the USB device cable to connect one of the computer's USB interfaces to this interface.

PS/2 Keyb.: Use an optional PS/2 cable to connect the computer's PS/2 keyboard interface to this interface.

Connections to the matrix switches

The devices use components with laser technology which comply with laser class 1.


They meet the requirements in accordance to **EN 60825-1:2014** as well as **U.S. CFR 1040.10** and **1040.11**.

Mind the following instructions when dealing with laser beams:

- *Avoid direct eye exposure to beam* on page 3
- *Always connect optical connections or cover them with protection caps* on page 3
- *Only use G&D certified transmission modules* on page 3

NOTE: Use optical fibres with LC plugs to connect the devices. The cables are available as accessories.

IMPORTANT: For each matrix switch, connect only one *Trans.* interface of the computer module!

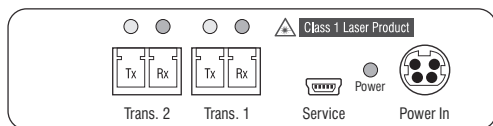

Connecting the first matrix switch

Trans. 1 | Tx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Rx** interface of a *Dynamic Port* provided at the first matrix switch.

Trans. 1 | Rx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Tx** interface of the same *Dynamic Port* provided at the first matrix switch.

Connecting the second first matrix switch

Trans. 2 | Tx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Rx** interface of a *Dynamic Port* provided at the second matrix switch.

Trans. 2 | Rx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Tx** interface of the same *Dynamic Port* provided at the second matrix switch.

ADVICE: You can also connect the computer module *directly* to up to two compatible console modules.

Power supply

Power In: Insert the power pack's connection cable to this interface.

Start-up

Connect the power cable to the power pack and a power socket. The computer module starts as soon as it is supplied with power.

Status displays

The Power LED on the front panel of the computer module shows the status of the external power pack:

LED	Status	Meaning
Power	On	The external power pack is connected and the required voltage (12 Volt) is available.
	Off	The external power pack is not (properly) connected.

The flashing Transmission LEDs highlight the following operating statuses of the particular connection:

LED	Colour	Status	Meaning
Left	Yellow	Off	No console module accesses the computer module.
		On	A console module accesses the computer module.
		Blinking	The incoming video signal was not detected.
		Flashing	No voltage at PS/2 interface or USB bus.
Right	Green	Off	The computer module is turned off.
		On	A console module accesses the computer module.
		Blinking	The connection to the counterpart could not be established.
		Flashing	The connection to the counterpart is established. No console module is accessing.
	Yellow	Flickering	Keyboard and mouse inputs are forwarded by the accessing console module. The flickering is defined by the user's entries.
		Flashing	A firmware update is carried out.

Technical data

HDM-CPU-FIBER-DH-UC		
Interfaces to computer	Video:	2 × HDMI
	Keyboard and mouse signals	1 × PS/2 socket 1 × USB-B
	Audio:	2 × 3,5 mm jack plug
Date transmission to counterparts	Interface:	2 × LC-Duplex socket
	Transmission distance:	▸ HDM-CPU-Fiber-DH-UC(M) Max. 100 Meter (62,5µ/125µ), Max. 200 Meter (50µ/125µ OM2) Max. 400 Meter (50µ/125µ OM3)
		▸ HDM-CPU-Fiber-DH-UC(S) Max. 5.000 Meter (9µ/125µ OS1)
		▸ HDM-CPU-Fiber-DH-UC(S+) Max. 10.000 Meter (9µ/125µ OS1)
Video	Format:	HDMI
	Colour depth:	24 Bit
	Video bandwidth:	25 to 300 MP/s (Channel 1)
		25 to 165 MP/s (Channel 2)
		Max. 330 MP/s (total)
	Exemplary resolutions:	Channel 1: ▪ 2048 × 2048 @ 60 Hz (2K×2K) ▪ 2048 × 2160 @ 60 Hz ▪ 2560 × 1600 @ 60 Hz ▪ 3840 × 2160 @ 30 Hz (Ultra HD) ▪ 4096 × 2160 @ 30 Hz (4K)
		Channel 2: ▪ 1920 × 1200 @ 60 Hz ▪ 1280 × 1024 @ 85 Hz ▪ 1080p60 (Full HD) ▪ 640 × 480 @ 60 Hz
		▸ Further VESA and CTA standardised resolutions possible within video bandwidth/pixel rate and horizontal/vertical frequency.
	Vertical frequency:	24 Hz to 120 Hz
	Horizontal frequency:	25 kHz to 135 kHz
	DDC/CI:	The device supports monitors with a DDC/CI function. The DDC information are transparently forwarded to the monitor to support a maximum number of monitors. However, the support cannot be guaranteed for all monitor models.

HDM-CPU-FIBER-DH-UC		
Audio	Transmission type:	transparent, bidirectional
	Resolution:	24 Bit
	Refresh rate:	96 kHz
	Bandwidth:	22 kHz
Power supply	Type:	Portable power pack (12V/2A)
	Connector:	1 × Mini-DIN 4 socket
	Power input:	0.8A @ 12VDC
Housing	Material:	Anodised aluminium
	Dimensions (W × H × D):	Approx. 105 × 26 × 164 mm
	Weight:	Approx. 0.43 kg
Operational environment	Temperature:	+5 to +45 °C
	Air humidity:	20% to 80%, non-condensing
Storage environment	Temperature:	-20 to +60 °C
	Air humidity:	15% to 85%, non-condensing
Conformity	CE, UKCA, FCC class B, TAA, EAC, RoHS, WEEE, REACH	

Computer module »HDM-U-CPU«

With **HDM-U-CPU** computer modules, you can connect a computer with HDMI graphics output to a digital matrix switch of the *ControlCenter-Compact* or *ControlCenter-Digital* series.

Users at the consoles of the matrix switch can access the computer module and operate the connected computer.

The data stream of the USB devices connected to the active console module (**DVI-U-CON**, **DP-U-CON** and **DP-HR-U-CON** series only) is transmitted to the computer with up to 16 Mbit/s.



Package contents


- 1 × Computer module **HDM-U-CPU**
- 1 × HDMI video cable (*HDM-Cable-M/M-2*)
- 1 × USB device cable
- 2 × Audio cable
- 1 × Power pack (12V/2A, only with variants incl. PowerPack)
- 1 × Power cable (only with variants incl. PowerPack)
- 1 × »Safety instructions« flyer

Required accessories

- 1 × Category 5e (or better) twisted pair cable to connect the computer module to the matrix switch

Installation

Connecting the computer

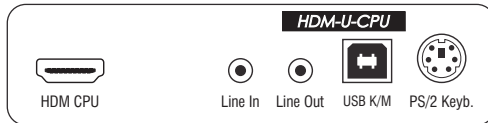

HDM CPU: Use the supplied video cables to connect the computer's *HDMI* video output to this interface.

Line In: Use one of the supplied audio cables to connect the computer's *Line Out* interface to this interface.


Line Out: Use one of the supplied audio cables to connect the computer's *Line In* interface to this interface.

NOTE: Keyboard signals can be transmitted to the computer using *either* the PS/2 or the USB interface.

USB K/M: Use the USB device cable to connect one of the computer's USB interfaces to this interface.

PS/2 Keyb.: Use an optional PS/2 cable to connect the computer's PS/2 keyboard interface to this interface.

Connection to the matrix switch

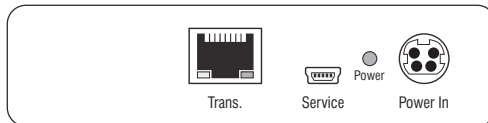

Trans.: Use a category 5e (or better) twisted pair cable to connect this interface to a *Dynamic Port* (RJ45) of a matrix switch.

ADVICE: You can also connect the computer module *directly* to a compatible console module.

Power supply

Power In: Insert the power pack's connection cable to this interface. Connect the power cable to the power pack and a power socket.

Status displays

The Power LED on the back panel of the computer module shows the status of the external power pack:

LED	Status	Meaning
Power	On	The external power pack is connected and the required voltage (12 Volt) is available.
	Off	The external power pack is not (properly) connected.

The flashing Transmission LEDs highlight the following operating statuses of the particular connection:

LED	Colour	Status	Meaning
Left	Yellow	Off	No console module accesses the computer module.
		On	A console module accesses the computer module.
		Blinking	The incoming video signal was not detected.
		Flashing	No voltage at PS/2 interface or USB bus.
Right	Green	Off	The computer module is turned off.
		On	A console module accesses the computer module.
		Blinking	The connection to the counterpart could not be established.
		Flashing	The connection to the counterpart is established. No console module is accessing.
		Flickering	Keyboard and mouse inputs are forwarded by the accessing console module. The flickering is defined by the user's entries.
	Yellow	Flashing	A firmware update is carried out.

Technical data

HDM-U-CPU		
Interfaces to computer	Video:	1 × HDMI
	Keyboard and mouse signals	1 × PS/2 socket 1 × USB-B
	Audio:	2 × 3,5 mm jack plug
Data transmission to the counterpart	Interface:	1 × RJ45 socket
	Transmission distance:	Max. 140 metres
Video	Format:	HDMI
	Colour depth:	24 bit
	Video bandwidth:	25 to 300 MP / s
	Max. resolution:	▪ 2560 × 1600 (60 Hz) ▪ 4096 × 2160 (30 Hz)
	Exemplary resolutions:	▪ 4096 × 2160 (24, 25 or 30 Hz) ▪ 3840 × 2160 (24, 25 or 30 Hz) ▪ 2048 × 2160 (60 Hz) ▪ 2048 × 2048 (60 Hz) › Further standardised resolutions within the video bandwidth possible.
	Vertical frequency:	24 Hz to 120 Hz
	Horizontal frequency:	25 kHz to 135 kHz
	DDC/CI:	The device supports monitors with a DDC/CI function. The DDC information are transparently forwarded to the monitor to support a maximum number of monitors. However, the support cannot be guaranteed for all monitor models.
Audio	Transmission type:	transparent, bidirectional
	Resolution:	24 Bit
	Refresh rate:	96 kHz
	Bandwidth:	22 kHz
USB	Specification:	USB 2.0
	Transmission type:	transparent
	Transmission rate:	Max. 16 Mbit/s
Power supply	Type:	Portable power pack (12V/2A)
	Connector:	1 × Mini-DIN 4 socket
	Power input:	0.6A @ 12VDC
Housing	Material:	Anodised aluminium
	Dimensions (W × H × D):	Approx. 105 × 26 × 164 mm
	Weight:	Approx. 0.39 kg

HDM-U-CPU		
Operational environment	Temperature:	+5 to +45°C
	Air humidity:	20% to 80%, non-condensing
Storage environment	Temperature:	-20 to +60°C
	Air humidity:	15% to 85%, non-condensing
Conformity	CE, UKCA, FCC class B, TAA, EAC, RoHS, WEEE, REACH	

Computer module »HDM-U-CPU-DH-UC«


With the **HDM-U-CPU-DH-UC** computer module you can connect a computer with up to two **HDMI** graphics outputs (dual monitor) to two *different* digital matrix switches of the *ControlCenter-Compact* or *ControlCenter-Digital* series by using one cable only.

ADVICE: If you use the first video channel only, you are able to display resolutions up to $4096 \times 2160 @ 30 \text{ Hz}$ (4K). Using both video channels allows resolutions up to $1920 \times 1200 @ 60 \text{ Hz}$. Detailed information about the supported resolutions is given in the chapter *Technical data* on page 38.

Users at the consoles of the matrix switch can access the computer module and operate the connected computer.

The data stream of the USB devices connected to the active console module (**DVI-U-CON**, **DP-U-CON** and **DP-HR-U-CON** series only) is transmitted to the computer with up to 16 Mbit/s.

ADVICE: At consoles with only one monitor, use the key combination **Alt + arrow right** to switch to the video stream of the computer's second video output (see page 58).

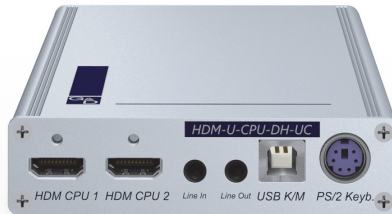

Package contents


- 1 × Computer module **HDM-U-CPU-DH-UC**
- 2 × HDMI video cable (*HDM-Cable-M/M-2*)
- 1 × USB device cable
- 2 × Audio cable
- 1 × Power pack (12V/2A, only with variants incl. PowerPack)
- 1 × Power cable (only with variants incl. PowerPack)
- 1 × »Safety instructions« flyer

Required accessories

- 2 × Category 5e (or better) twisted pair cables to connect the computer module to two *different* matrix switches

Installation

Connecting the computer

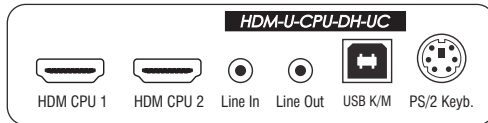

HDM CPU 1: Use one of the supplied video cables to connect the computer's first *HDMI* video output to this interface.

HDM CPU 2: Use one of the supplied video cables to connect the computer's second *HDMI* video output to this interface.

Line In: Use one of the supplied audio cables to connect the computer's *Line Out* interface to this interface.

Line Out: Use one of the supplied audio cables to connect the computer's *Line In* interface to this interface.

NOTE: Keyboard signals can be transmitted to the computer using *either* the PS/2 or the USB interface.


USB K/M: Use the USB device cable to connect one of the computer's USB interfaces to this interface.

PS/2 Keyb.: Use an optional PS/2 cable to connect the computer's PS/2 keyboard interface to this interface.

Connections to the matrix switches

IMPORTANT: Connect only one of the computer module's *Trans.* interfaces for each matrix switch!

NOTE: Only use category 5e (or better) twisted pair cables to connect the devices.

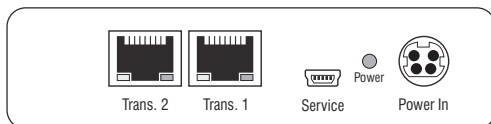

Connecting the first matrix switch

Trans. 1: Connect this interface to a *Dynamic Port* (RJ45) of the first matrix switch.

Connecting the second matrix switch

Trans. 2: Connect this interface to a *Dynamic Port* (RJ45) of the second matrix switch.

ADVICE: You can also connect the computer module *directly* to up to two compatible console modules.

Power supply

Power In: Insert the power pack's connection cable to this interface.

Start-up

Connect the power cable to the power pack and a power socket. The computer module starts as soon as it is supplied with power.

Status displays

The Power LED on the front panel of the computer module shows the status of the external power pack:

LED	Status	Meaning
Power	On	The external power pack is connected and the required voltage (12 Volt) is available.
	Off	The external power pack is not (properly) connected.

The flashing Transmission LEDs highlight the following operating statuses of the particular connection:

LED	Colour	Status	Meaning
Left	Yellow	Off	No console module accesses the computer module.
		On	A console module accesses the computer module.
		Blinking	The incoming video signal was not detected.
		Flashing	No voltage at PS/2 interface or USB bus.
Right	Green	Off	The computer module is turned off.
		On	A console module accesses the computer module.
		Blinking	The connection to the counterpart could not be established.
		Flashing	The connection to the counterpart is established. No console module is accessing.
		Flickering	Keyboard and mouse inputs are forwarded by the accessing console module. The flickering is defined by the user's entries.
	Yellow	Flashing	A firmware update is carried out.

Technical data

HDM-U-CPU-DH-UC		
Interfaces to computer	Video:	2 × HDMI
	Keyboard and mouse signals	1 × PS/2 socket 1 × USB-B
	Audio:	2 × 3,5 mm jack plug
Data transmission to counterparts	Interface:	2 × RJ45 socket
	Transmission distance:	Max. 140 metres
Video	Format:	HDMI
	Colour depth:	24 Bit
	Video bandwidth:	25 to 300 MP/s (Channel 1)
		25 to 165 MP/s (Channel 2)
		Max. 330 MP/s (total)
	Exemplary resolutions:	Channel 1:
		▪ 2048 × 2048 @ 60 Hz (2K×2K)
		▪ 2048 × 2160 @ 60 Hz
		▪ 2560 × 1600 @ 60 Hz
		▪ 3840 × 2160 @ 30 Hz (Ultra HD)
		▪ 4096 × 2160 @ 30 Hz (4K)
		Channel 2:
		▪ 1920 × 1200 @ 60 Hz
		▪ 1280 × 1024 @ 85 Hz
		▪ 1080p60 (Full HD)
		▪ 640 × 480 @ 60 Hz
		▸ Further VESA and CTA standardised resolutions possible within video bandwidth/pixel rate and horizontal/vertical frequency.
	Vertical frequency:	24 Hz to 120 Hz
	Horizontal frequency:	25 kHz to 135 kHz
	DDC/CI:	The device supports monitors with a DDC/CI function. The DDC information are transparently forwarded to the monitor to support a maximum number of monitors. However, the support cannot be guaranteed for all monitor models.
Audio	Transmission type:	transparent, bidirectional
	Resolution:	24 Bit
	Refresh rate:	96 kHz
	Bandwidth:	22 kHz
USB	Specification:	USB 2.0
	Transmission type:	transparent
	Transmission rate:	Max. 16 Mbit/s

HDM-U-CPU-DH-UC		
Power supply	Type:	Portable power pack (12V/2A)
	Connector:	1 × Mini-DIN 4 socket
	Power input:	0.7A @ 12VDC
Housing	Material:	Anodised aluminium
	Dimensions (W × H × D):	Approx. 105 × 26 × 164 mm
	Weight:	Approx. 0.4 kg
Operational environment	Temperature:	+5 to +45°C
	Air humidity:	20% to 80%, non-condensing
Storage environment	Temperature:	-20 to +60°C
	Air humidity:	15% to 85%, non-condensing
Conformity	CE, UKCA, FCC class B, TAA, EAC, RoHS, WEEE, REACH	

Computer module »HDM-U-CPU-Fiber«

With **HDM-U-CPU-Fiber** computer modules, you can connect a computer with HDMI graphics output to a digital matrix switch of the *ControlCenter-Compact* or *ControlCenter-Digital* series.

NOTE: This computer module can only be connected to a compatible fiber port of *ControlCenter-Compact* matrix switches or *ControlCenter-Digital* matrix switches (requires **CCD-I/O 16-Card-Fiber**).

IMPORTANT: Both, the computer module and the fiber ports are available as *single-mode* variants or as *multimode* variants. Make sure that the port at the computer module, the fiber port and the optical fibers are compatible with each other.

Users at the consoles of the matrix switch can access the computer module and operate the connected computer.

The data stream of the USB devices connected to the active console module (**DVI-U-CON**, **DP-U-CON** and **DP-HR-U-CON** series only) is transmitted to the computer with up to 16 Mbit/s.



Package contents


- 1 × Computer module **HDM-U-CPU-Fiber**
- 1 × HDMI video cable (*HDM-Cable-M/M-2*)
- 1 × USB device cable
- 2 × Audio cable
- 1 × Power pack (12V/2A, only with variants incl. PowerPack)
- 1 × Power cable (only with variants incl. PowerPack)
- 1 × »Safety instructions« flyer

Required accessories

- 1 × Compatible optical fibre cable to connect the computer module to the matrix switch

Installation

Connecting the computer



HDM CPU: Use the supplied video cables to connect the computer's *HDMI* video output to this interface.

Line In: Use one of the supplied audio cables to connect the computer's *Line Out* interface to this interface.

Line Out: Use one of the supplied audio cables to connect the computer's *Line In* interface to this interface.

NOTE: Keyboard signals can be transmitted to the computer using *either* the PS/2 or the USB interface.

USB K/M: Use the USB device cable to connect one of the computer's USB interfaces to this interface.

PS/2 Keyb.: Use an optional PS/2 cable to connect the computer's PS/2 keyboard interface to this interface.

Connection to the matrix switch


IMPORTANT: The devices use components with laser technology which comply with laser class 1.

They meet the requirements in accordance to **EN 60825-1:2014** as well as **U.S. CFR 1040.10** and **1040.11**.

Mind the following instructions when dealing with laser beams:

- *Avoid direct eye exposure to beam on page 3*
- *Always connect optical connections or cover them with protection caps on page 3*
- *Only use G&D certified transmission modules on page 3*

NOTE: Use optical fibres with LC plugs to connect the devices. The cables are available as accessories.



Trans. | Tx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Rx** interface of a *Dynamic Port* provided at the matrix switch.

Trans. | Rx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Tx** interface of the same *Dynamic Port* provided at the matrix switch.

ADVICE: You can also connect the computer module *directly* to a compatible console module.

Power supply

Power In: Connect the cable of the power pack to this interface. Now connect the power cable to the power pack and a power socket.

Status displays

The Power LED on the back panel of the computer module shows the status of the external power pack:

LED	Status	Meaning
Power	On	The external power pack is connected and the required voltage (12 Volt) is available.
	Off	The external power pack is not (properly) connected.

The blinking LEDs on the back panel highlight the following operating statuses of the particular connection:

LED	Colour	Status	Meaning
Left	Yellow	Off	No console module accesses the computer module.
		On	A console module accesses the computer module.
		Blinking	The incoming video signal was not detected.
		Flashing	No voltage at PS/2 interface or USB bus.
Right	Green	Off	The computer module is turned off.
		On	A console module accesses the computer module.
		Blinking	The connection to the counterpart could not be established.
		Flashing	The connection to the counterpart is established. No console module is accessing.
		Flickering	Keyboard and mouse inputs are forwarded by the accessing console module. The flickering is defined by the user's entries.
	Yellow	Flashing	A firmware update is carried out.

Technical data

HDM-U-CPU-FIBER		
Interfaces to computer	Video:	1 × HDMI
	Keyboard and mouse signals	1 × PS/2 socket 1 × USB-B
	Audio:	2 × 3,5 mm jack plug
Data transmission to the counterpart	Interface:	1 × LC-Duplex socket
	Transmission distance:	▶ HDM-U-CPU-Fiber(M) Max. 100 Meter (62,5µ/125µ), Max. 200 Meter (50µ/125µ OM2) Max. 400 Meter (50µ/125µ OM3)
		▶ HDM-U-CPU-Fiber(S) Max. 5.000 Meter (9µ/125µ OS1)
		▶ HDM-U-CPU-Fiber(S+) Max. 10.000 Meter (9µ/125µ OS1)
Video	Format:	HDMI
	Colour depth:	24 bit
	Video bandwidth:	25 to 300 MP / s
	Max. resolution:	■ 2560 × 1600 (60 Hz) ■ 4096 × 2160 (30 Hz)
	Exemplary resolutions:	■ 4096 × 2160 (24, 25 or 30 Hz) ■ 3840 × 2160 (24, 25 or 30 Hz) ■ 2048 × 2160 (60 Hz) ■ 2048 × 2048 (60 Hz) ▶ Further standardised resolutions within the video bandwidth possible.
	Vertical frequency:	24 Hz to 120 Hz
	Horizontal frequency:	25 kHz to 135 kHz
	DDC/CI:	The device supports monitors with a DDC/CI function. The DDC information are transparently forwarded to the monitor to support a maximum number of monitors. However, the support cannot be guaranteed for all monitor models.
Audio	Transmission type:	transparent, bidirectional
	Resolution:	24 Bit
	Refresh rate:	96 kHz
	Bandwidth:	22 kHz
USB	Specification:	USB 2.0
	Transmission type:	transparent
	Transmission rate:	Max. 16 Mbit/s

HDM-U-CPU-FIBER		
Power supply	Type:	Portable power pack (12V/2A)
	Connector:	1 × Mini-DIN 4 socket
	Power input:	0.6A @ 12VDC
Housing	Material:	Anodised aluminium
	Dimensions (W × H × D):	Approx. 105 × 26 × 164 mm
	Weight:	Approx. 0.41 kg
Operational environment	Temperature:	+5 to +45°C
	Air humidity:	20% to 80%, non-condensing
Storage environment	Temperature:	-20 to +60°C
	Air humidity:	15% to 85%, non-condensing
Conformity		CE, UKCA, FCC class B, TAA, EAC, RoHS, WEEE, REACH

Computer module »HDM-U-CPU-Fiber-DH-UC«

NOTE: This computer module can only be connected to a compatible fiber port of *ControlCenter-Compact* matrix switches or *ControlCenter-Digital* matrix switches (requires **CCD-I/O 16-Card-Fiber**).

IMPORTANT: Both, the computer module and the fiber ports are available as *single-mode* variants or as *multimode* variants. Make sure that the port at the computer module, the fiber port and the optical fibers are compatible with each other.


With the **HDM-U-CPU-Fiber-DH-UC** computer module you can connect a computer with up to two **HDMI** graphics outputs (dual monitor) to two *different* digital matrix switches of the *ControlCenter-Compact* or *ControlCenter-Digital* series by using one cable only.

ADVICE: If you use the first video channel only, you are able to display resolutions up to $4096 \times 2160 @ 30 \text{ Hz}$ (4K). Using both video channels allows resolutions up to $1920 \times 1200 @ 60 \text{ Hz}$. Detailed information about the supported resolutions is given in the chapter *Technical data* on page 50.

Users at the consoles of the matrix switch can access the computer module and operate the connected computer.

The data stream of the USB devices connected to the active console module (**DVI-U-CON**, **DP-U-CON** and **DP-HR-U-CON** series only) is transmitted to the computer with up to 16 Mbit/s.

ADVICE: At consoles with only one monitor, use the key combination **Alt + arrow right** to switch to the video stream of the computer's second video output (see page 58).

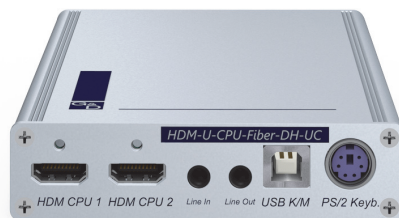

Package contents


- 1 × Computer module **HDM-U-CPU-Fiber-DH-UC**
- 2 × HDMI video cable (*HDM-Cable-M/M-2*)
- 1 × USB device cable
- 2 × Audio cable
- 1 × Power pack (12V/2A, only with variants incl. PowerPack)
- 1 × Power cable (only with variants incl. PowerPack)
- 1 × »Safety instructions« flyer

Required accessories

- 2 × Compatible optical fibre cable to connect the computer module to two *different* matrix switches

Installation

Connecting the computer

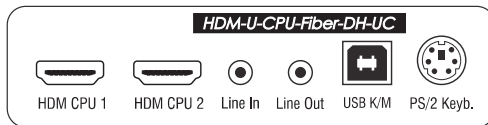

HDM CPU 1: Use one of the supplied video cables to connect the computer's first *HDMI* video output to this interface.

HDM CPU 2: Use one of the supplied video cables to connect the computer's second *HDMI* video output to this interface.

Line In: Use one of the supplied audio cables to connect the computer's *Line Out* interface to this interface.

Line Out: Use one of the supplied audio cables to connect the computer's *Line In* interface to this interface.

NOTE: Keyboard signals can be transmitted to the computer using *either* the PS/2 or the USB interface.

USB K/M: Use the USB device cable to connect one of the computer's USB interfaces to this interface.

PS/2 Keyb.: Use an optional PS/2 cable to connect the computer's PS/2 keyboard interface to this interface.

Connections to the matrix switches

The devices use components with laser technology which comply with laser class 1.


They meet the requirements in accordance with **EN 60825-1:2014** as well as **U.S. CFR 1040.10** and **1040.11**.

Mind the following instructions when dealing with laser beams:

- *Avoid direct eye exposure to beam on page 3*
- *Always connect optical connections or cover them with protection caps on page 3*
- *Only use G&D certified transmission modules on page 3*

NOTE: Use optical fibres with LC plugs to connect the devices. The cables are available as accessories.

IMPORTANT: For each matrix switch, connect only one *Trans.* interface of the computer module!

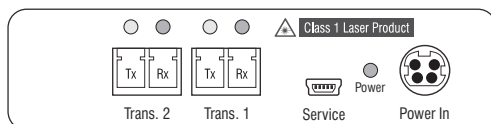

Connecting the first matrix switch

Trans. 1 | Tx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Rx** interface of a *Dynamic Port* provided at the first matrix switch.

Trans. 1 | Rx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Tx** interface of the same *Dynamic Port* provided at the first matrix switch.

Connecting the second first matrix switch

Trans. 2 | Tx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Rx** interface of a *Dynamic Port* provided at the second matrix switch.

Trans. 2 | Rx: Insert the LC plug of a compatible optical fibre cable. Connect the other end of the cable to the **Tx** interface of the same *Dynamic Port* provided at the second matrix switch.

ADVICE: You can also connect the computer module *directly* to up to two compatible console modules.

Power supply

Power In: Insert the power pack's connection cable to this interface.

Start-up

Connect the power cable to the power pack and a power socket. The computer module starts as soon as it is supplied with power.

Status displays

The Power LED on the front panel of the computer module shows the status of the external power pack:

LED	Status	Meaning
Power	On	The external power pack is connected and the required voltage (12 Volt) is available.
	Off	The external power pack is not (properly) connected.

The flashing Transmission LEDs highlight the following operating statuses of the particular connection:

LED	Colour	Status	Meaning
Left	Yellow	Off	No console module accesses the computer module.
		On	A console module accesses the computer module.
		Blinking	The incoming video signal was not detected.
		Flashing	No voltage at PS/2 interface or USB bus.
Right	Green	Off	The computer module is turned off.
		On	A console module accesses the computer module.
		Blinking	The connection to the counterpart could not be established.
		Flashing	The connection to the counterpart is established. No console module is accessing.
		Flickering	Keyboard and mouse inputs are forwarded by the accessing console module. The flickering is defined by the user's entries.
	Yellow	Flashing	A firmware update is carried out.

Technical data

HDM-U-CPU-FIBER-DH-UC		
Interfaces to computer	Video:	2 × HDMI
	Keyboard and mouse signals	1 × PS/2 socket 1 × USB-B
	Audio:	2 × 3,5 mm jack plug
Date transmission to counterparts	Interface:	2 × LC-Duplex socket
	Transmission distance:	▶ HDM-U-CPU-Fiber-DH-UC(M) Max. 100 Meter (62,5µ/125µ), Max. 200 Meter (50µ/125µ OM2) Max. 400 Meter (50µ/125µ OM3)
		▶ HDM-U-CPU-Fiber-DH-UC(S) Max. 5.000 Meter (9µ/125µ OS1)
		▶ HDM-U-CPU-Fiber-DH-UC(S+) Max. 10.000 Meter (9µ/125µ OS1)
Video	Format:	HDMI
	Colour depth:	24 Bit
	Video bandwidth:	25 to 300 MP/s (Channel 1)
		25 to 165 MP/s (Channel 2)
		Max. 330 MP/s (total)
	Exemplary resolutions:	Channel 1: ▪ 2048 × 2048 @ 60 Hz (2K×2K) ▪ 2048 × 2160 @ 60 Hz ▪ 2560 × 1600 @ 60 Hz ▪ 3840 × 2160 @ 30 Hz (Ultra HD) ▪ 4096 × 2160 @ 30 Hz (4K)
		Channel 2: ▪ 1920 × 1200 @ 60 Hz ▪ 1280 × 1024 @ 85 Hz ▪ 1080p60 (Full HD) ▪ 640 × 480 @ 60 Hz
		▶ Further VESA and CTA standardised resolutions possible within video bandwidth/pixel rate and horizontal/vertical frequency.
	Vertical frequency:	24 Hz to 120 Hz
	Horizontal frequency:	25 kHz to 135 kHz
	DDC/CI:	The device supports monitors with a DDC/CI function. The DDC information are transparently forwarded to the monitor to support a maximum number of monitors. However, the support cannot be guaranteed for all monitor models.

HDM-U-CPU-FIBER-DH-UC		
Audio	Transmission type:	transparent, bidirectional
	Resolution:	24 Bit
	Refresh rate:	96 kHz
	Bandwidth:	22 kHz
USB	Specification:	USB 2.0
	Transmission type:	transparent
	Transmission rate:	Max. 16 Mbit/s
Power supply	Type:	Portable power pack (12V/2A)
	Connector:	1 × Mini-DIN 4 socket
	Power input:	0.8A @ 12VDC
Housing	Material:	Anodised aluminium
	Dimensions (W × H × D):	Approx. 105 × 26 × 164 mm
	Weight:	Approx. 0.4 kg
Operational environment	Temperature:	+5 to +45°C
	Air humidity:	20% to 80%, non-condensing
Storage environment	Temperature:	-20 to +60°C
	Air humidity:	15% to 85%, non-condensing
Conformity	CE, UKCA, FCC class B, TAA, EAC, RoHS, WEEE, REACH	

C Generic HID

In **Generic HID** mode, data of the USB input device connected to the **Generic** socket of the console module remains *unaltered* when transmitted to the active computer module.

The use of *Generic HID* devices is possible only after you enable the *Generic HID* mode of the console module and of the computer module.

NOTE: With enabled **Generic HID** mode, it is *not* possible to operate the OSD with a keyboard connected to the **Generic** socket.

In *Generic HID* mode, you can connect USB hubs or USB composite devices to the **Generic** socket of the console module.

USB composite devices are USB devices that are connected to a computer via *one* USB cable, but consist of separate HID devices (e.g. keyboard/mouse or touchpad/mouse).

When connecting a USB hub or a USB composite device containing multiple USB devices, only the first of the connected HID devices can be used in *Generic HID* mode. The OSD informs you if other HID devices of the composite device or the hub are detected.

NOTE: In *Multi User mode*, the *Generic HID* device is available to the first active console module. Once the console module logs off and another console module logs in, the *Generic HID* device of the now active console module becomes available.

Enabling/disabling the console module's Generic HID mode

How to enable/disable the console module's Generic HID mode:

1. Press **Ctrl+Num** (*default*) to open the on-screen display (OSD).
2. Press **F11** to open the *Configuration* menu.
3. Select **Console** and press **Enter**.

4. Select **Generic HID** and press **F8** to select one of the following options:

off:	Connect either a USB keyboard or a USB mouse to the console module's Generic interface.
on:	The data of any USB input device connected to the console module's Generic interface remains unaltered when transmitted to the active computer module.

IMPORTANT: To use the generic HID device, enable the USB HID mode **Generic HID** of the computer modules you want to access (see below).

5. Press **F2** to save your changes.

Enabling/disabling the computer module's Generic HID mode

USB computer modules support different USB input devices. You can use the special features of a USB input device after selecting the specific USB keyboard mode (see page 52).

As an alternative to the specific USB keyboard modes, you can use the **Generic HID** mode. In this mode, data of USB devices connected to the **Generic** interface remains unaltered when transmitted to the active computer module.

IMPORTANT: When connecting a USB hub or a USB composite device containing multiple USB devices, only the first of the connected HID devices can be used in **Generic HID** mode (see page 52).

How to select a USB keyboard mode:

1. Press **Ctrl+Num** (*default*) to open the OSD.
2. Press **F11** to open the *Configuration* menu.
3. Select **Target** and press **Enter**.
4. Select the computer module whose settings you want to change and press **F5**.

5. Select **USB keyboard** and press **F8** to select one of the following options.

Multimedia:	PC keyboard with additional multimedia keys (<i>default</i>)
Standard:	PC keyboard with standard keyboard layout
Generic:	Any USB input device

NOTE: USB computer modules additionally support certain USB input devices. After selecting the specific USB keyboard mode of such a device, you can use the special features of these USB input devices.

6. Click **OK** to save your changes.

D Extender mode

The console modules and the computer modules for the digital matrix switch can be operated in *extender mode*.

Connect a console module directly with a compatible computer module. Use the same cable types as for the connection of a matrix switch (see *Installation*).

The modules auto-recognise direct connections. The computer connected to the computer module is operated at the console module.

NOTE: The modules can also be used with products from other product series in mixed operation.

If you have questions about compatibility, please contact the support team.

Opening the OSD in extender mode

In extender mode, you can change the console module settings in the module's OSD.

NOTE: When the modules are connected to a matrix switch, the modules are configured in the OSD of the matrix switch.

The matrix switch manual describes the OSD settings.

You can use the configured hotkey to open the OSD at the console.

How to open the OSD:

1. Press **Alt+Num** (*default*) to open the OSD.

Configuration
Hotkey...
EDID...
Keyboard/Mouse...
Mouse utility...
Console utility...
Information...
ESC: Exit

Configuration

With the console module's OSD, you can view and change the settings in extender mode.

Changing the hotkey to open the OSD

When in extender mode, press **Alt+Num** (*default*) to open the console module's local OSD.

NOTE: The hotkey consists of at least one hotkey modifier key and an additional hotkey, which you can select from multiple options.

Both the **Alt** hotkey modifier key and the **Num** hotkey can be changed.

How to change the hotkey to open the OSD:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Hotkey** and press **Enter**.
3. Use the **arrow keys** to select *at least* one of the hotkey modifiers listed under **Modifier**. Then, press **F8**:

Ctrl:	<i>Ctrl</i> key
Alt:	<i>Alt</i> key
Alt Gr:	<i>Alt Gr</i> key
Win:	<i>Windows</i> key
Shift:	<i>Shift</i> key

4. Press **F8** to select one of the hotkeys listed under **Key**. The OSD can be opened by pressing the hotkey and the selected hotkey modifier(s) at the same time:

Num:	<i>Num</i> key
Pause:	<i>Pause</i> key
Insert:	<i>Insert</i> key
Delete:	<i>Delete</i> key
Home:	<i>Home</i> key
End:	<i>End</i> key
PgUp:	<i>Page Up</i> key
PgDn:	<i>Page Down</i> key
Space:	<i>Space</i> key

5. Press **F2** to save your settings.

Opening the OSD via double keypress

In addition to opening the OSD with the key combination **Alt+Num**, you can open the OSD by pressing a previously selected key twice.

How to define the key to open the OSD via double keypress:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Hotkey** and press **Enter**.
3. Select **OSD via 2x keypress** and press **F8** (repeatedly) to select one of the following options:

off:	Opening OSD via double keypress disabled (<i>default</i>)
Ctrl:	Open OSD by pressing <i>Ctrl</i> twice
Alt:	Open OSD by pressing <i>Alt</i> twice
Alt Gr:	Open OSD by pressing <i>Alt Gr</i> twice
Win:	Open OSD by pressing <i>Win</i> twice
Shift:	Open OSD by pressing <i>Shift</i> twice
Print:	Open OSD by pressing <i>Druck</i> twice

ADVICE: Press **Ctrl+F8** to show a list including all options. Select the desired option and press **Enter**.

4. Press **F2** to save your settings.

Key combination for video switching of the DH-CPU computer modules

When a user of a console with only one monitor connects to a computer with two video outputs on a **DH-CPU** computer module, the screen of the second video output *cannot* be displayed.

To switch to the video signal from the second video output of the computer, the **Select Stream** key combination is available for this application.

In the default setting you can switch between the video signal of the first and the second video output of the computer with the key combination **Alt+arrow right**.

You can change the key combination in the hotkey menu.

NOTE: Use the **Select Stream** function on a dual monitor workstation (on a **DH-CON** console module) to arrange the video signals from a computer with two video outputs (on a **DH-CPU** computer module) on the console monitors.

Each time you press the key combination **Hotkey+arrow left** or **Hotkey+arrow right**, the arrangement switches in ascending or descending order as shown below:

- Video 1/Video 2
- Video 2/Video 1
- Video 1/Video 1
- Video 2/Video 2

How change the key combination for the Select Stream function:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Hotkey** and press **Enter**.
3. Select **Select stream** and press **F8** to select one of the following options:

Cursor left,right:	Video switching with Hotkey+arrow left or Hotkey+arrow right (<i>default</i>)
Num+ ,Num-:	Video switching with Hotkey+Num+ or Hotkey+Num-

4. Press **F2** to save your settings.

Changing the select keys

NOTE: *Select keys* can only be used and configured at console modules providing at least two channels (e. g. **DVI-CON-2**).

In the default settings, the select keys 1 and 2 are active to switch between the connected computer modules.

You can also select another set of select keys.

How to select another set of select keys:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Hotkey** and press **Enter**.
3. Select **Selectkeys** and press **F8** to select one of the following options:

1, 2:	Activates select keys 1 and 2
F1, F2:	Activates select keys F1 and F2
NUM 1, NUM 2	Activates select keys NUM 1 and NUM 2
A, B:	Activates select keys A and B

4. Press **F2** to save your settings.

Administrating EDID profiles

The EDID information (*Extended Display Identification Data*) of a monitor gives the graphics card of a connected computer information about various technical features of the device.

The EDID profile of the monitor that is connected to the console module, is not available at the computer module. Therefore, the computer module transmits a standard profile to the computer. The EDID information of the profile are optimised for the majority of available graphics cards.

ADVICE: In some cases it is recommended to send the EDID profile of the console monitor to the computer module. Now the connected computer receives the EDID data of the console monitor.

How to transmit the EDID profile of the connected monitor to the computer module:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **EDID** and press **Enter**.
3. Select **Send monitor's EDID** and press **Enter**.
4. Press **Esc** to close the EDID menu.

How to activate the G&D EDID profile:

NOTE: By activating this profile, you might delete a transmitted EDID profile.

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **EDID** and press **Enter**.
3. Select **Install default EDID** and press **Enter**.
4. Press **Esc** to close the EDID menu.

Activating the support of special PS/2 keyboards

The console module supports the additional keys of the following PS/2 keyboards: *PixelPower Rapid Action*, *PixelPower Clarity (blue)* and *SKIDATA1*.

How to activate the support of special PS/2 keyboards:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Keyboard/Mouse** and press **Enter**.
3. Select **PS/2 Enh. keyboard** and press **F8** to select one of the following options:

no:	Standard keyboard
PixelPower RA:	Special <i>PixelPower Clarity (blue)</i> keyboard
PixelPower C:	Special <i>PixelPower Rapid Action</i> keyboard
SKIDATA1:	Special <i>SKIDATA1</i> keyboard

ADVICE: Press **Ctrl+F8** to show a list including all options. Select the desired option and press **Enter**.

4. Press **F2** to save your settings.

Adjusting the scancode set of a PS/2 keyboard

If a key is pressed on the PS/2 keyboard, the keyboard processor sends a data packet that is called scan code. The two common scan code sets (sets 2 and 3) contain different scan codes.

The console module interprets all inputs of the PS/2 keyboard with scan code set 2.

If the pipe (“|”) cannot be entered or if the arrow keys of the keyboard do not work as expected, it is recommended to switch to scan code set 3.

How to select the scancode set of the PS/2 keyboard:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Keyboard/Mouse** and press **Enter**.
3. Select **PS/2 Scancode set** and press **F8** to select scancode sets **2** or **3**.
4. Press **F2** to save your settings.
5. Restart the console module to apply your changes.

Reinitialising USB input devices

After connecting a USB keyboard or mouse to the console module, the input devices are initialised and can be used immediately.

Some USB input devices require a reinitialisation of the USB connection. Enable the automatic reinitialisation of USB devices if a USB keyboard or mouse does not respond to your inputs during operation.

How to enable/disable the reinitialisation of USB devices:

1. Press the **Alt+Num** (default) hotkey to open the on-screen display.
2. Select **Keyboard/Mouse** and press **Enter**.

3. Select the **USB Auto Refresh** entry and press **F8** to select the keyboard type:

off:	The status of the USB devices is not monitored. If communication to a USB device is interrupted, the device is not reinitialised
all:	The status of the USB devices is monitored. If communication to one USB device is interrupted, all devices are reinitialised.
only faulty:	The status of the USB devices is monitored. If communication to a USB devices is interrupted, this device is reinitialised.

4. Press **F2** to save your settings.

Opening the OSD by mouse

In the default settings of the matrix system, the OSD can only be called with the configured key combination.

If a Microsoft »IntelliMouse Explorer« or another compatible mouse with five keys is connected to the console console, you can call the OSD through the mouse keys four and five at the side of the mouse

How to (de)activate the mouse support to operate the OSD:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Keyboard/Mouse** and press **Enter**.
3. Select **OSD by mouse** and press **F8** to select one of the following options:

No:	OSD cannot be opened by mouse
Yes:	opens OSD via mouse keys 4 and 5 of a compatible mouse

4. Press **F2** to save your settings.

Choosing the USB keyboard mode

NOTE: This setting has only an impact if a USB cable connects the computer module to the target.

USB computer modules support different USB input devices. You can use the special features of a USB input device after selecting the specific USB keyboard mode.

▪ **USB keyboards:** In addition to the keys of standard keyboard layouts, the default USB keymode **PC Multimedia** supports several multimedia keys like **Loud** and **Quiet**.

With *Apple* or *Sun Keyboards*, you can apply special keymodes to use the special keys of these keyboards.

The following table lists the supported USB keyboards:

INPUT DEVICE	SETTING
PC keyboard with additional multimedia keys	▸ PC Multimedia
PC keyboard with standard keyboard layout	▸ PC Standard
Apple Keyboard with numeric keypad (A1243)	▸ Apple A1243
Sun Keyboard (German keyboard layout)	▸ SUN German
Sun Keyboard (American keyboard layout)	▸ SUN US

▪ **Displays and tablets:** You can operate computers connected to the computer module with one of the supported *displays* or *tablets*:

INPUT DEVICE	SETTING
HP 2310tk	▸ HP 2310t
iiyama T1931	▸ iiyama T1931
Wacom Cintiq 21UX	▸ Wacom Cint.21
Wacom Intuos3	▸ Wacom Int.3
Wacom Intuos4 S	▸ Wacom Int.4S
Wacom Intuos4 M	▸ Wacom Int.4M
Wacom Intuos4 L	▸ Wacom Int.4L
Wacom Intuos4 XL	▸ Wacom Int.4XL
Wacom Intuos5	▸ Wacom Int.5
Wacom Intuos Pro L	▸ Wacom Int. Pro L

- **Controller:** With **ShuttlePRO v2** multimedia controllers, you can operate audio and video programs. You can use a special USB keymode to operate computers connected to the computer module using the controller:

INPUT DEVICE	SETTING
Contour ShuttlePRO v2	▸ Contour SP2

- **LK463 compatible keyboard:** You can connect an LK463 compatible keyboard to the console modules of the KVM matrix system. The order of the 108 keys of these keyboards is the same as the OpenVMS keyboard layout.

A special USB keyboard mode guarantees that the keypress of a special key on this keyboard is forwarded to the computer:

INPUT DEVICE	SETTING
LK463 compatible keyboard	▸ LK463

How to select a USB keyboard mode:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Keyboard/Mouse** and press **Enter**.
3. Select **USB HID mode** and press **F8** to select one of the following options.

ADVICE: Press **Ctrl+F8** to show a list including all options. Select the desired option and press **Enter**.

4. Press **F2** to save your settings.

How to use the special function of Sun keyboards on a standard keyboard:

IMPORTANT: You can use the emulation of »Solaris Shortcut Keys« in the **SUN DE** and **SUN US** keyboard mode only.

If the computer module is provided with a *Sun Keyboard*, you can use *Solaris Shortcut Keys* after enabling their support.

When using a standard keyboard, you can perform these functions by using the key combinations listed below:

KEY COMBINATIONS	»SOLARIS SHORTCUT KEY« OF SUN KEY-BOARDS
Ctrl+Alt+F2	Again
Ctrl+Alt+F3	Props
Ctrl+Alt+F4	Undo
Ctrl+Alt+F5	Front
Ctrl+Alt+F6	Copy
Ctrl+Alt+F7	Open
Ctrl+Alt+F8	Paste
Ctrl+Alt+F9	Find
Ctrl+Alt+F10	Cut
Ctrl+Alt+F11	Help
Ctrl+Alt+F12	Mute
Ctrl+Alt+NUM+	Loud
Ctrl+Alt+NUM-	Quiet
Ctrl+Alt+NUM*	Compose
Ctrl+Alt+Pause	Shutdown
Pause+A	Stop

Support for servers of IBM's RS/6000 series

NOTE: This setting can only be edited with PS/2 versions of the computer modules.

Activate the support for UNIX servers of IBM's RS/6000 series in the *IBM RS/6000 support* menu if the computer is a server of this series.

How to (de)activate the special support for servers of IBM's RS/6000 series:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Keyboard/Mouse** and press **Enter**.
3. Select **IBM RS/6000 support** and press **F8** to select one of the following options:

Yes: Support for servers of IBM's RS/6000 series is activated

No: Support for servers of IBM's RS/6000 series is deactivated

4. Press **F2** to save your settings.

Enable/disable the startup without a keyboard

By default, console modules start without a keyboard. As an alternative, the console module can interrupt startup by showing a message regarding the missing keyboard. Once you connect a keyboard to the console module, the startup process continues.

How to enable/disable the startup of a console module without a keyboard:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Keyboard/Mouse** and press **Enter**.
3. Select the **Keyboard required** entry and press **F8** to select one of the following options:

no:	Console module can be started without a keyboard (<i>default</i>).
yes:	Console module can be started only when a keyboard is connected.

4. Press **F2** to save your settings.

Activating or resetting a PS/2 mouse

Compared to USB mice, PS/2 mice do not support hot plug technology. You can therefore insert the PS/2 plug during operation, but it may be possible that the computer does not detect the input device.

In order to activate or reset the PS/2 mouse, the matrix system can be used to send a special command to the computer connected to the computer module.

NOTE: Since the commands differ depending on the used mouse type and the installed operating system, four different functions are provided.

How to start and use the *Mouse utility* function:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Mouse utility** and press **Enter**.
3. Select one of the following functions and press **Enter**:

Reset Mouse:	Resets the PS/2 mouse interface of a Windows computer
Enable mouse (for Unix):	Activates the PS/2 mouse of a Linux computer
Enable Intelli:	Activates the PS/2 wheel mouse of a Linux computer
Enable Intelli-Explorer:	Activates the PS/2 wheel mouse with additional keys of a Linux computer

Resetting the default settings

This setting resets the default settings of the extender mode. All settings that have been changed by the user are reset.

How to reset the default settings of the extender mode:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Console utility** and press **Enter**.
3. Select **Set system defaults** and press **Enter**.

Showing status information

The OSD shows you information about the console module and the connected computer module.

Several menus provide you with the following information:

FIRMWARE INFO	
This menu shows information about the console module (console) and the computer module (target).	
ID:	Device ID
Version:	Installed firmware version
Device:	Type name
Firmware:	Name of installed firmware
HOTKEY	
Local Hotkey (Modifier+Key)	
Modifier:	Modifier key of key combination
Key:	Hotkey of key combination
Local OSD via 2x keypress	
Modifier:	Configured key to open the OSD via double keypress
Local selectkeys	
Keys:	Selected set of select keys:
HARDWARE INFORMATION	
Serial number:	Serial number of console module

How to show status information in the OSD:

1. Press the **Alt+Num** (*default*) hotkey to open the OSD.
2. Select **Information** and press **Enter**.
3. Use the **arrow keys** to select the desired menu item (see above).
4. Press **Enter** to show the desired information.
5. Press **Esc** to leave the menu.

NOTES

NOTES



G&D. FEELS RIGHT.

Hauptsitz | Headquarter
Guntermann & Drunck GmbH Systementwicklung
Obere Leimbach 9 | D-57074 Siegen | Germany
Phone +49 271 23872-0
sales@gdsys.com | www.gdsys.com

US-Büro | US-Office
G&D North America Inc.
4540 Kendrick Plaza Drive, Suite 100 | Houston, TX 77032 | USA
Phone +1-346-620-4362
sales.us@gdsys.com | www.gdsys.com